


WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- CLIMATE CONTROL – pages 14-15
 - Explain the different air modes to customer

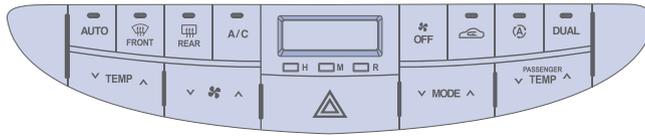

- TIRE PRESSURE MONITORING SYSTEM (TPMS) – page 31



Low tire pressure indicator




Low tire pressure location indicator

TPMS TPMS malfunction indicator


- CLOCK ADJUSTMENT – page 31

- Hour 1
 - Minute 2
 - Reset 3
- Push and hold Reset to toggle between 12 or 24 hours.

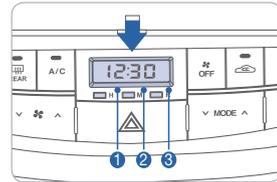

- VEHICLE SETTINGS – pages 12-13

- Demonstrate vehicle settings in instrument cluster
- Demonstrate navigation use, enter dealer address
- Show radio presets

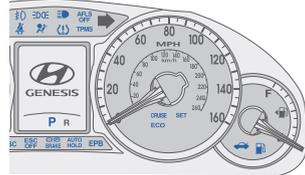

- BLUETOOTH – pages 20-21

- Demonstrate phone pairing
- Refer to www.hyundaiusa.com/bluetooth
- Demonstrate QR code



- BLUE LINK – pages 22-23 (if applicable)

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link Users Manual & tear out Voice Commands/Quick Tip Card
- Encourage customers to press the Blue link button  after enrollment to initiate Welcome Call

MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil And Filter	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Fuel Tank Air Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Fuel Lines, Fuel Hoses And Connections	Inspect	7,500	Inspect	Same As Normal
Power Steering Fluid	Inspect	7,500	Inspect	Same As Normal
Vapor Hose & Fuel Filler Cap	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator And Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Disc Brake/Pads, Calipers	Inspect	15,000	Inspect	More Frequently
Rear Brake Disc/Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Power Steering Pump, Belt & Hoses	Inspect	15,000	Inspect	Same As Normal
Propeller Shaft	Inspect	15,000	Inspect	7,500 or 6 mos.
Brake Fluid	Inspect	30,000	Inspect	Same As Normal
Parking Brake	Inspect	30,000	Inspect	More Frequently
Rear Differential Oil	Inspect	37,500	Replace	80,000
Fuel Filter	Replace	37,500	Replace	More Frequently
Valve Clearance (3.8L)	Inspect	60,000	Inspect	Same As Normal
Drive Belt	1st Inspect 60,000 or 72 mos. Add'l Inspect 15,000 or 24 mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	100,000 or 10 yrs	Replace	More Frequently
Coolant	1st Replace 120,000 or 120 mos. Add'l Replace 30,000 or 24 mos.		Replace	Same As Normal
Automatic Transmission Fluid			Replace	60,000

*See Owner's Manual for details.

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-G2014-A
(Rev 10/23/13)
Printing 10/24/13

HYUNDAI GENESIS

Quick Reference Guide



www.hyundai.com

HYUNDAI
NEW THINKING.
NEW POSSIBILITIES.

Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
XM® Radio: **1-800-967-2346**
Blue Link: **1-855-2BLUELINK**
(1-855-225-8354)

Table of Contents

GETTING STARTED

Engine start /stop button	03
Front seat adjustment	04
Fuel filler lid	05
Headrest adjustment	04
Seat belt adjustment (Front seat)	05
Smart key	02
Steering wheel adjustment	06
Trunk lock	03
Trunk release	02

FEATURES AND CONTROLS

Adaptive Front Lighting System (AFLS)	08
Auto hold	34
Central control panel	29
Child-protector rear door lock	31
Climate control	14-15
Clock adjustment	31
Cruise control	16
Driver's main controls	07
Eco system	32
Electric parking brake (EPB)	33
Head lights and fog lights	08
Heated Steering Wheel	06
Home Link wireless control	11
Instrument cluster	12-13
Instrument panel illumination	13
Interior lights	10
Lane Departure Warning System (LDWS)	33
Rearview camera	32
Seat warming and cooling	30
Sunroof	10
Tire Pressure Monitoring System (TPMS)	31
Trip computer	13
Wiper and washer	09

MULTIMEDIA

Aux, USB and iPod port	28
Blue Link Telematics System	22-23
Bluetooth phone pairing	20-21
Bluetooth operational tips	18-19
Driver Information System (DIS)	28
Navigation	25-27
Standard Radio	24

FREQUENTLY ASKED QUESTIONS

1. Pair phone to your vehicle. Refer to page 20-21.
2. Garage door opener set up. Refer to page 11.
3. Getting started with Blue Link. Refer to pages 22-23.




Head lights and fog lights
Page08



Wiper and washer
Page09



Audio
Pages24-25

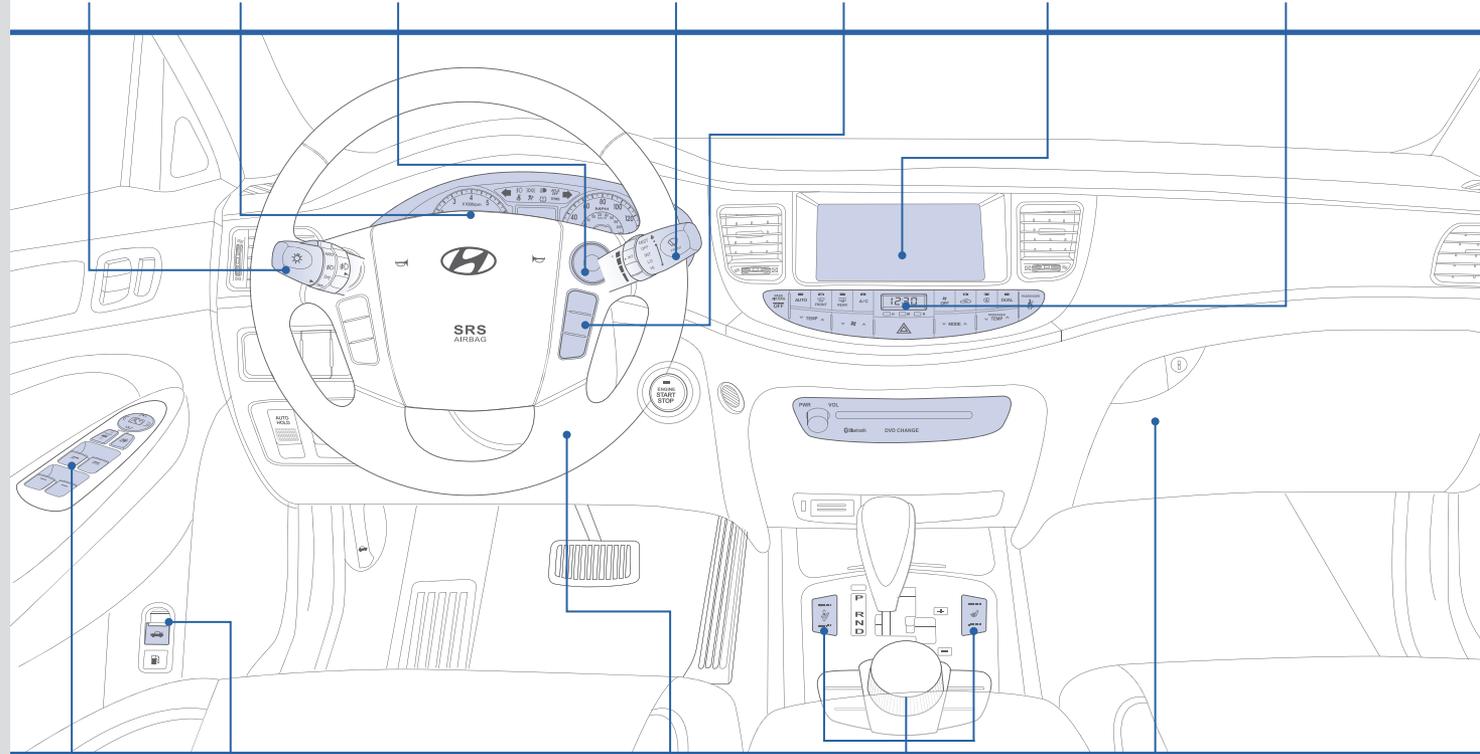

Instrument cluster
Pages12-13

Cruise control system
Page 16

Trip computer
Page13

Climate Control
Pages14-15

Driver's main controls
Page07

Trunk release
Page02

Steering wheel adjustments
Page06

Seat warming and cooling
Page30

Trunk lock**
Page03

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.



WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

*Some vehicles may not be equipped with all the listed features.

**Inside Glove Box


GETTING STARTED

SMART KEY




Remove mechanical key

Press and hold the release button ① and remove the key.

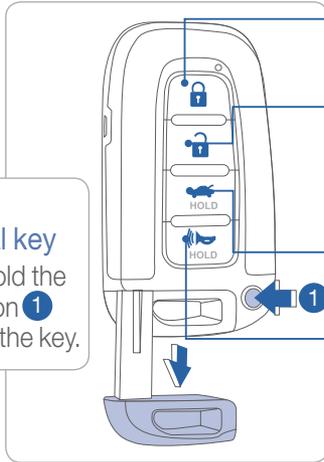

- Lock** (🔒)
Press the button.
- Unlock** (🔓)
Press
Once - Unlock driver's door.
Twice - Unlock all doors.
- Trunk unlock** (🚗)
Press and hold.
- Panic** (📢)
Press and hold.
Press any button to turn off panic.

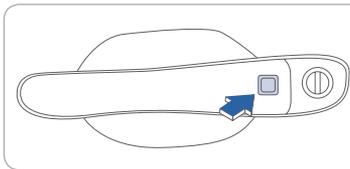

Press to unlock



Once - Unlock driver's door.
Twice - Unlock all doors.

Press to lock

Once - Lock all doors after exiting vehicle.

TRUNK RELEASE

Interior trunk release

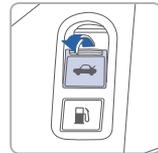
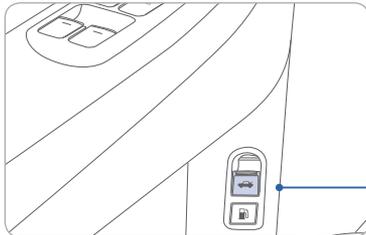


Pull trunk lid release to open trunk from inside of vehicle.

NOTE

Smart key needs to be within range.

 Exterior trunk release

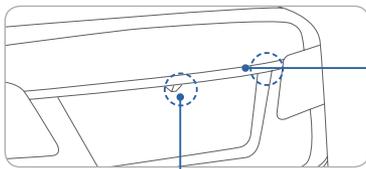


With rearview camera
Push trunk lid release to open trunk.

Without rearview camera
Push trunk lid release to open trunk.



TRUNK LOCK

Trunk lock button

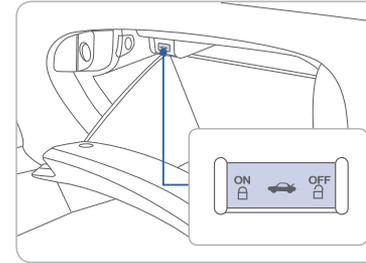

The trunk lock button is used to prevent unauthorized access to the trunk.


To activate the trunk lock system:

1. Open the glove box.
2. Press trunk lock button OFF. In the OFF position, the trunk can only be opened with the mechanical key.
3. Remove mechanical key from the Smart key.
4. Close and lock the glove box with the mechanical key.

NOTE


With the mechanical key out of the Smart key, the Smart key can only operate door locks and start the engine.

To unlock and open the trunk with the mechanical key

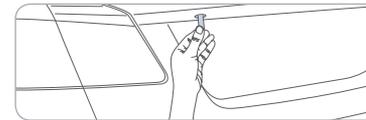

Insert the mechanical key into the key slot located as shown on the trunk lid and turn clockwise.

ENGINE START/STOP BUTTON

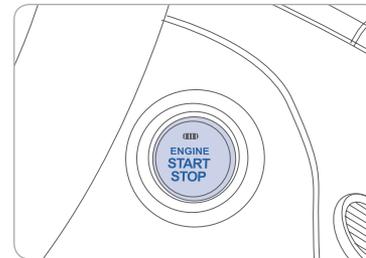

With the ignition OFF, press the engine start/stop button:

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine in any mode (including OFF), press the engine start/stop button while pressing the brake pedal.

To shut the engine OFF, place shift lever in P (Park) and press the engine start/stop button again.

Emergency situations

Shut off engine while driving

Press engine start/stop button for more than 2 seconds or 3 times consecutively within 3 seconds.

 
Restart engine while driving

Press engine start/stop button with shift lever in N (Neutral).


FRONT SEAT ADJUSTMENT



Forward and backward



Seat cushion height (for driver's seat)

 


Seatback angle




Lumbar support (for driver's seat)



HEADREST ADJUSTMENT

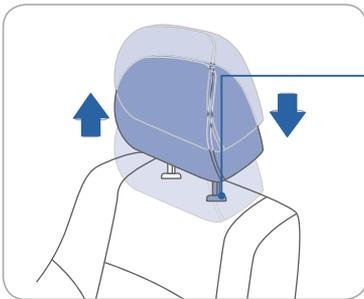


Height adjustment

 

Lock knob

To raise headrest height, pull up on headrest.



To lower headrest, press lock knob while pushing down on headrest.

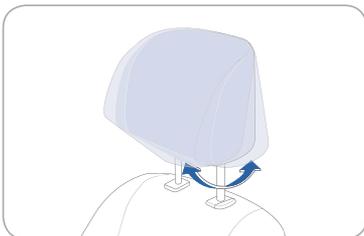

Forward or backward adjustment

To adjust headrest forward or backward, slide headrest forward or push back.

SEAT BELT ADJUSTMENT (Front seat)


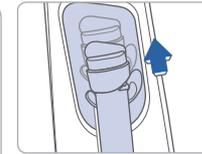
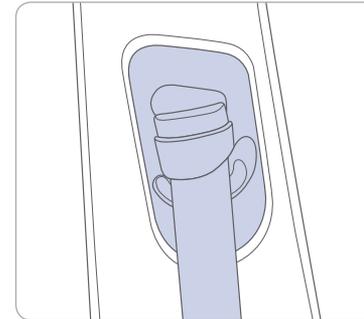


Pull up to raise.



Press button and push down to lower.

FUEL FILLER LID

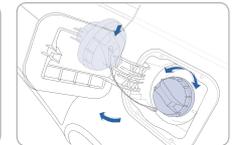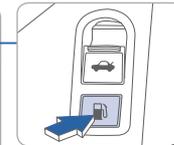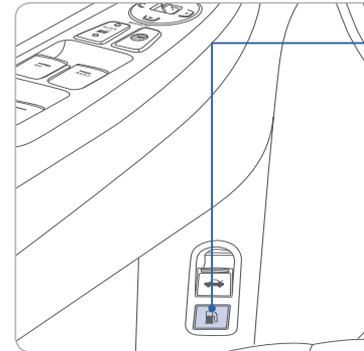




NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks one time.

Failure to do this may result in the Check Engine light () illuminating.

STEERING WHEEL ADJUSTMENTS

Power Tilt and telescopic

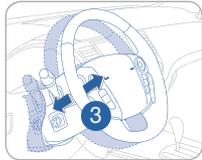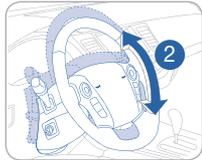
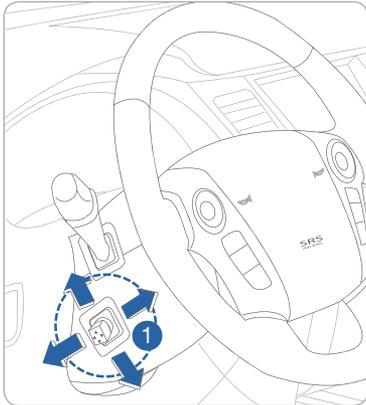


NOTE

Do not adjust while driving.

Set the angle **2** and distance **3** with the knob **1**.

Manual Tilt

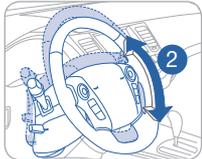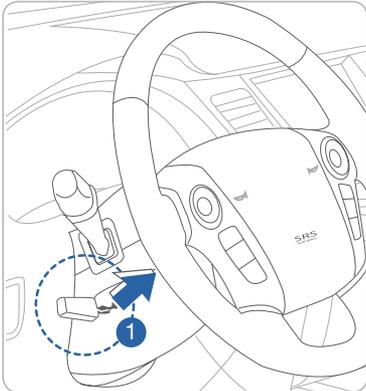


NOTE

Do not adjust while driving.

1. Pull and hold the release lever **1**.
2. Set the angle to the desired position **2**.
3. Release the lever to lock into place.

Heated steering wheel

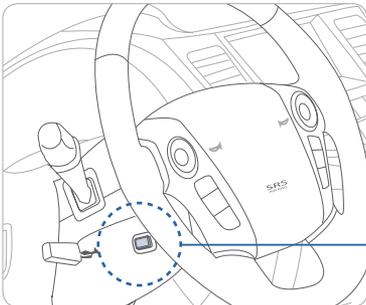


Pressing the heated steering wheel button warms the steering wheel. The indicator on the button is illuminated.



Heated steering wheel button

DRIVER'S MAIN CONTROLS

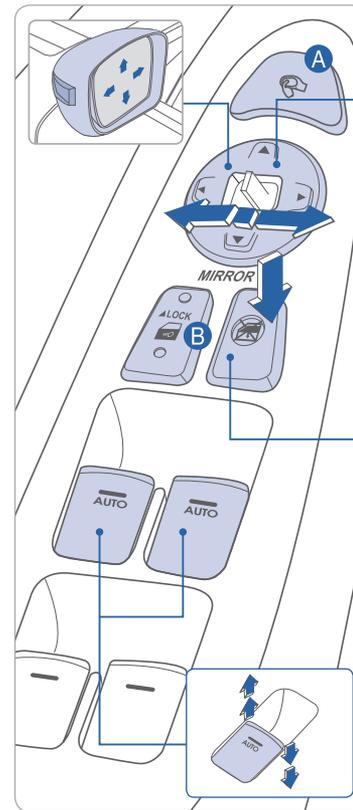

Outside Rearview Mirrors Adjusting

- Press L (left) or R (right) on the switch. Then adjust the mirror by using the directional switch (↕↔).

Power folding mirror

- Press button **A** to fold/unfold mirrors.
- Press the lock or unlock button on the smart key twice, and the mirrors will be folded or unfolded.

Power window lock switch

- The driver can disable the power window switches on the passenger doors.

Power window

Window Auto down/up (Front windows)


Press past detent to fully open/close window.

Door Lock

Press button **B** to lock/unlock all doors.

FEATURES AND CONTROLS


HEAD LIGHTS AND FOG LIGHTS

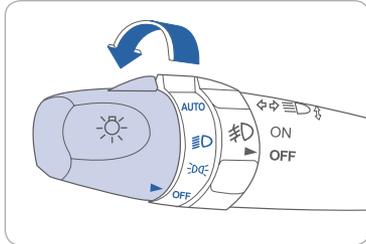

- ▶ | OFF OFF position
- ▶ | Parking light position
- ▶ | Head light position
- ▶ | AUTO Auto light position




Turn signals and lane change signals

Flashing head lights

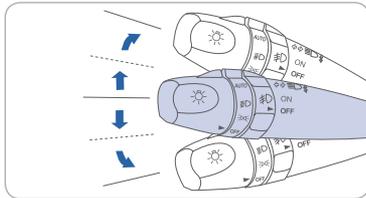


High beam

Fog lights

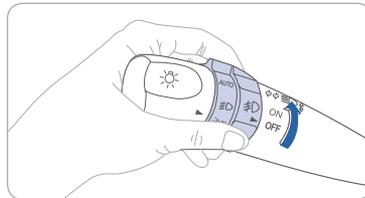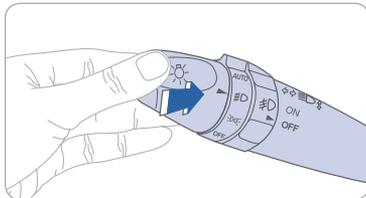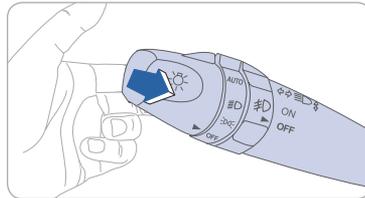


ADAPTIVE FRONT LIGHTING SYSTEM (AFLS)

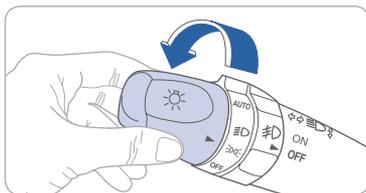

AFLS helps keep a wide field of vision at night by turning the head lights in the direction of any turn.


To turn AFLS on, rotate switch to AUTO. To turn AFLS off, rotate switch to other position.

WIPER AND WASHER

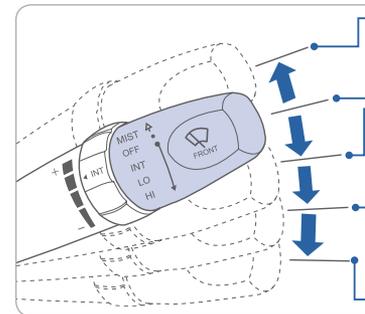


- MIST - Single wipe
- OFF - Off
- INT - Intermittent wipe
- AUTO - AUTO control wipe
The rain sensor senses the amount of rainfall and controls the wiping cycle.
- LO - Normal wiper speed
- HI - Fast wiper speed

Intermittent wipe time adjustment

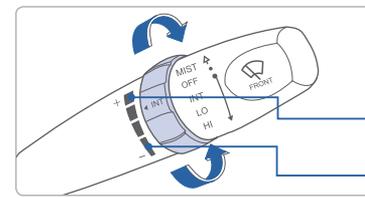

- Fast wiper speed
- Slow wiper speed


Wash with brief wipes

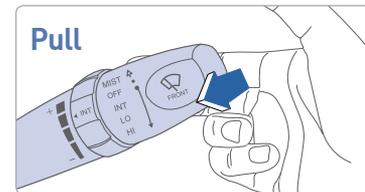

FEATURES AND CONTROLS

SUNROOF

With ignition switch on

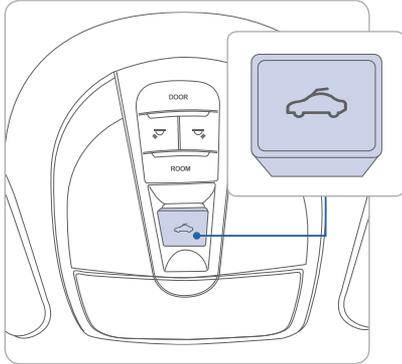

To open

Press switch rearward. Press switch rearward past the detent to open completely.


To close

Press switch forward. Press switch forward past the detent to close completely.

To tilt

Push or pull switch up or down.

INTERIOR LIGHTS

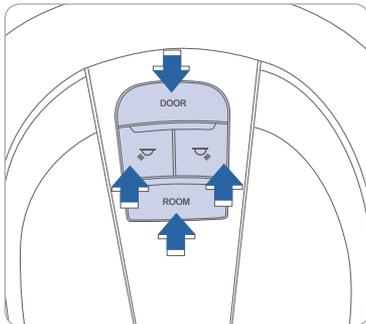

Push the switch to turn the map lamp on or off.



DOOR

Lights will turn on when any door is open except trunk.

OFF

Push the switch to turn the map lamp and room lamp on or off.

HOME LINK WIRELESS CONTROL

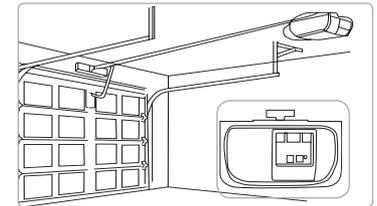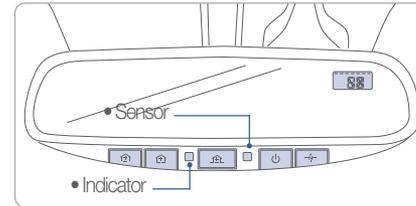


Standard Programming

To train most devices, follow these instructions:

1. For first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 Buttons, until the indicator light begins to flash (after 20 seconds). Release both buttons. Do not hold the buttons for longer than 30 seconds.
2. Position the end of your hand-held transmitter 1-3 inches (2-8 cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For detail instructions, refer to your Owner's Manual or visit www.homelink.com.


FEATURES AND CONTROLS

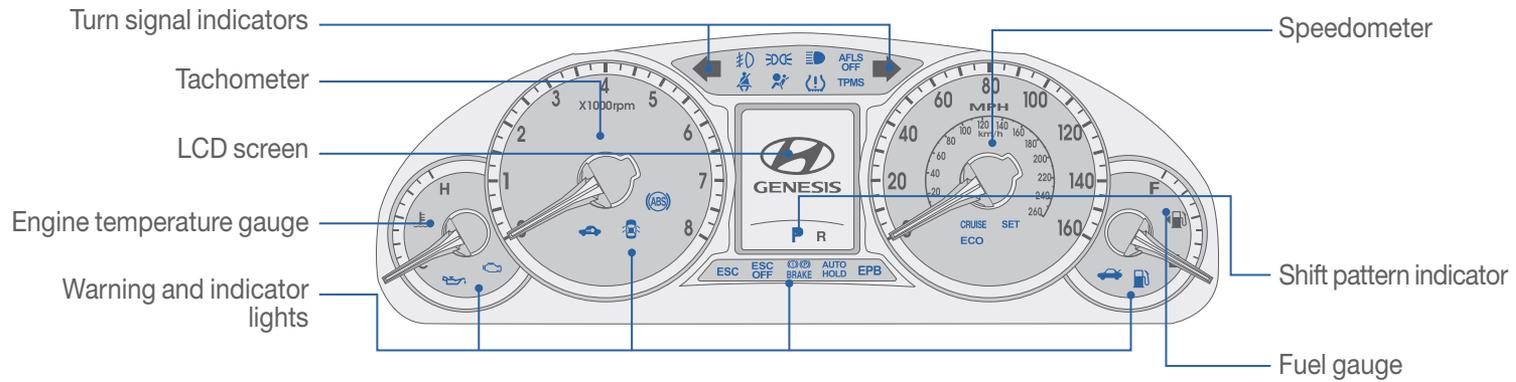

WARNINGS AND INDICATORS


Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low tire pressure indicator	High beam indicator
Engine oil pressure warning light	Charging system warning light	Door open warning light
Low tire pressure position indicator	TPMS TPMS (Tire Pressure Monitoring System) malfunction indicator	
Immobilizer indicator	Automatic transmission shift indicator	Turn signal indicator
Trunk open warning light	Low fuel level warning light	ESC ESC (Electronic Stability Control) indicator
ESC OFF ESC (Electronic Stability Control) OFF indicator	CRUISE Cruise indicator	SET Cruise SET indicator
Malfunction indicator light	Front fog light indicator	Light on indicator
Low washer fluid level warning light	EPB EPB (Electronic Parking Brake) malfunction indicator	
AFLS OFF AFLS (Adaptive Front Lighting System) OFF indicator	AUTO HOLD AUTO HOLD indicator	
SCC (Smart Cruise Control) malfunction indicator	SCC (Smart cruise control) sensor malfunction indicator	
LDWS LDWS indicator	LDWS FAIL LDWS malfunction indicator	ECO ECO indicator

INSTRUMENT PANEL ILLUMINATION

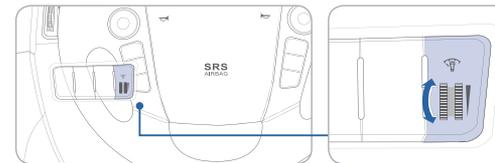

Rotate the illumination control knob to adjust the brightness.

TRIP COMPUTER

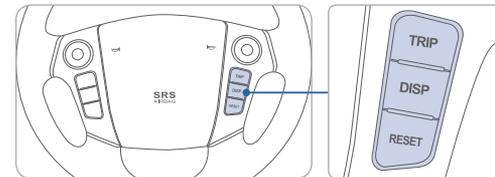

To change Trip information, press TRIP button.


ODO → TRIP A → TRIP B

To reset Trip A/B display, press and hold TRIP button.

To change display information, press the DISP button (or RESET) button.



FEATURES AND CONTROLS

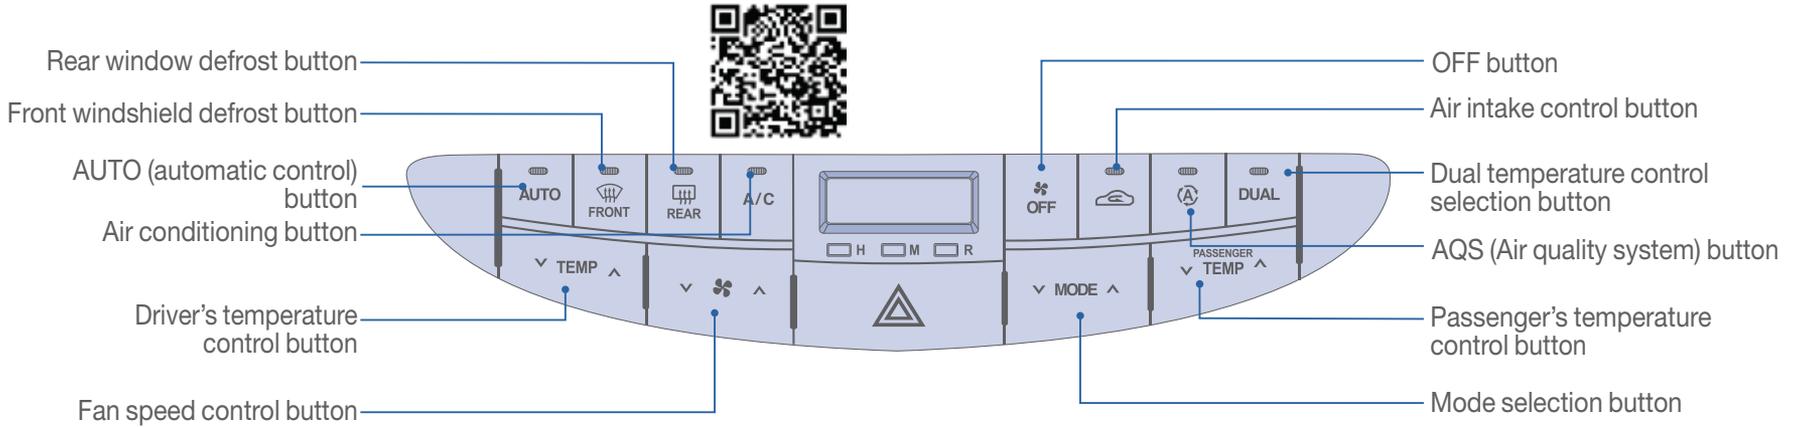

DEFROSTING / DEFOGGING



1. Press the front windshield defrost control.




2. Set the temperature control to the desired setting.




3. Set the fan speed to the highest setting.

REAR WINDOW DEFROSTER

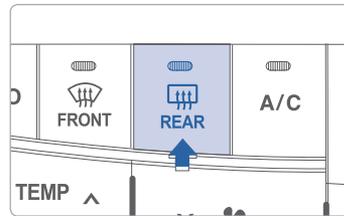

Press to activate/deactivate the rear defroster.

AIR INTAKE CONTROL

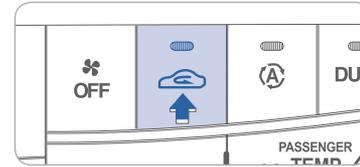


Recirculated air position



Outside (fresh) air position

DUAL BUTTON

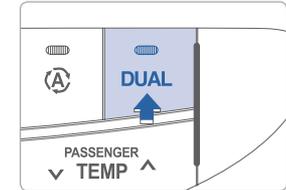

Press the DUAL button to operate the driver and passenger side temperature individually.

AUTO DEFOGGING SYSTEM




Auto defogging system senses the moisture of inside the windshield and operates with the indicator illuminated.

SYSTEM OFF MODE

Pressing the OFF button will place the system in the off mode.

- Front blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

MODE SELECTION

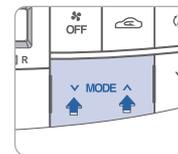


Changing the direction of the air flow as follows.



Floor & Defrost Floor Level Bi-Level Face Level

STEERING WHEEL FUNCTIONS

Cruise Control

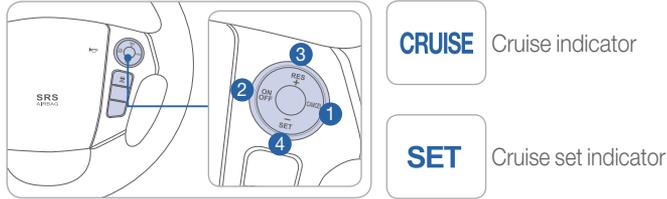

CRUISE Cruise indicator

SET Cruise set indicator

To set a cruising speed

1. Press ON/OFF button **2** and the CRUISE indicator will illuminate in the instrument cluster. Accelerate to desired cruising speed (above 25 mph).
2. Press SET – button **4** and remove your foot from the accelerator pedal.


To accelerate or decelerate

Press RES + button **3** up to increase set cruising speed.
 Press SET – button **4** down to decrease set cruising speed.

To cancel cruising speed

Press CANCEL button **1** or depress brake pedal, or press ON/OFF button **2**.

Smart cruise control system

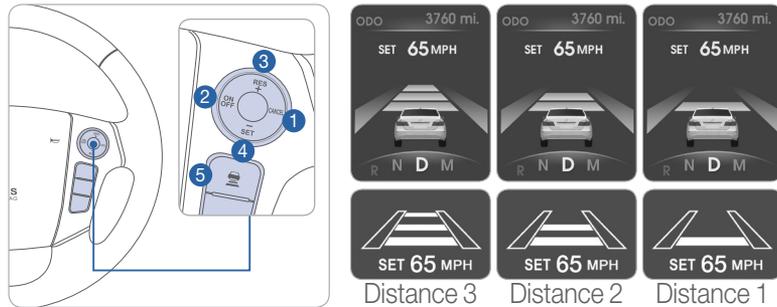

To set a cruising speed

1. Press ON/OFF button **2** and the CRUISE indicator will illuminate in the instrument cluster. Accelerate to desired cruising speed (above 18.6 mph).
2. Press SET – button **4** and remove your foot from the accelerator pedal.

To accelerate or decelerate

Press RES + button **3** up to increase set cruising speed.
 Press SET – button **4** down to decrease set cruising speed.

To cancel cruising speed

Press CANCEL button **1** or depress brake pedal, or press ON/OFF button **2**.

To set vehicle distance

Press the button **5**. Three distances are available:


- Distance 3 – 180 feet
- Distance 2 – 130 feet
- Distance 1 – 85 feet

Distances are approximate.

When there is a vehicle ahead in the lane

The vehicle will accelerate or decelerate to maintain the selected distance. Refer to your Owner's Manual for additional operational instructions and other cautionary advisories on Smart Cruise Control.


Audio Control

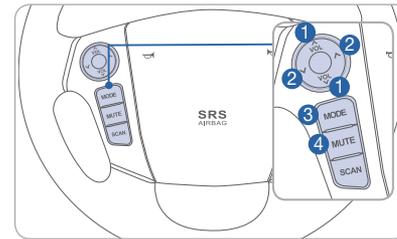

- 1 VOLUME**
Raises or lowers speaker volume.
- 2 SEEK / PRESET**
Change station.
- 3 MODE**
Change the audio source.
- 4 MUTE**
Mute the sound.

Please refer to your Owner's Manual for more detailed information on how to use your audio system. Complimentary XM® subscription ends three months following the vehicle date of sale. Please contact XM® Radio at 1-800-XM®-RADIO (1-800-967-2346) to renew your XM® subscription.

Bluetooth Control

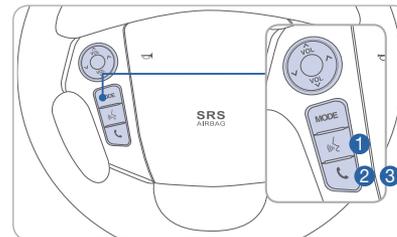

- 1 TALK**
Activates voice recognition.
- 2 CALL**
Press the button. Places and transfers calls.
- 3 END**
Press and hold the button. Ends calls or cancels functions.

To redial previously dialed number, press and hold **1**.


*Bluetooth is a wireless technology that allows multiple devices to be connected in a short range. low powered devices like hands-free, stereo headset, wireless remocom, etc. For more information, visit the website at www.bluetooth.com

BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth control

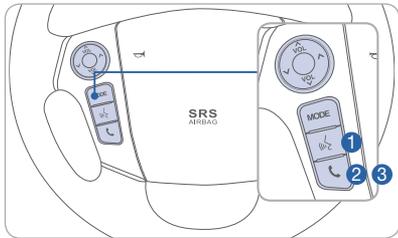

- 1 TALK**
Activates voice recognition.
- 2 CALL**
Press the button.
Places and transfers calls.
- 3 END**
Press and hold the button.
Ends calls or cancels functions.

To redial previously dialed number, press and hold **1**.

To Answer a Call:

- Press button on the steering wheel.

To Reject a Call:

- Press button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone

(Secret Call):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:

- Press button on the steering wheel.

Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press button.
2. Say the following command:
 - “Call <John>”: Connects the call to John.
 - “Call <John> on <Mobile/Home/Office>”: Connects the call to John’s Mobile, Home, or Office phone number.

Dialing by Number:

1. Press button.
2. Say “Call”.
3. Say “By number” when prompted.
4. Say desired phone numbers.
5. Say “Dial” to complete the number and make a call.

For complete list of commands, refer to your Owner’s Manual.

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes of the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands

To start voice command. Press the key, the following commands are available:

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute corresponding functions.
Call History	Displays the Call History screen.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect the cell.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.


BLUETOOTH® PHONE PAIRING

Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.




Standard audio system

1. Press TUNE button ①.
2. Turn TUNE knob ① to Bluetooth®. Press knob to select.
3. Turn TUNE knob ① to Pair. Press knob to select.
4. Follow voice command instructions to complete pairing the phone.
5. When prompted, enter the Passkey (default passkey 0000).

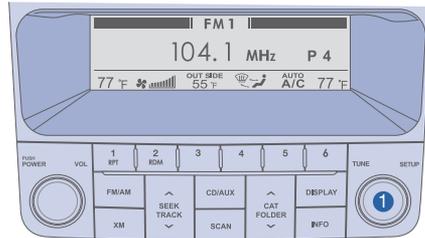

Driver Information System (DIS)

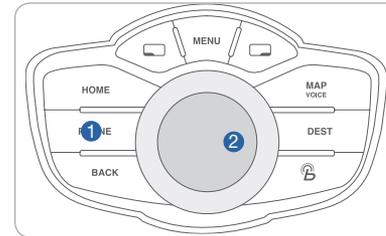

1. Press INFO/PHONE button ①.
2. Select Connect Phone by turning knob ②.
3. Select your phone under Pair Phone by turning knob ②.
4. In your mobile phone Bluetooth setup menu, select Add New Device. The default name of the Bluetooth device is GENESIS.
5. When prompted, enter the Passkey (default passkey 1234).
6. The name of the connected device will be displayed on the phone.


Touch screen system

1. Press PHONE button ①.
2. Press the SETTINGS button on phone screen.
3. Press the PAIRINGS button. 
4. Press the ADD TO button. 
5. In your mobile phone Bluetooth setup menu, select Add New Device. The default name of the Bluetooth device is GENESIS.
6. When prompted, enter the Passkey (default passkey 1234).
7. The name of the connected device will be displayed on the phone.



MULTIMEDIA

BLUE LINK TELEMATICS SYSTEM

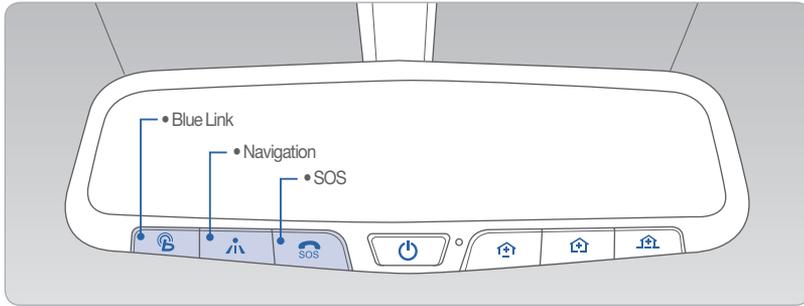

Press the  button for access to the voice-response menu of services. You have two options:

- You can say, “Main Menu” for a listing of main menu choices.
- You can directly select any of the listed menu items by saying its name.

			
Navigation	Information	Essentials	Vehicle Assist
New Destination Gas Prices Restaurant Ratings Route Assistance Daily Route Guide Main Menu	Traffic Weather Valet Alert Main Menu	Voice Texting Location Sharing Main Menu	Roadside Assistance Agent Assistance Service Link Quick Tips Main Menu

- Press the  button for navigation-related services.
- Press the  button for SOS Emergency Assistance.
- Refer to your Blue Link User’s Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Remote Door Unlock/Lock

Blue Link Mobile App



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® – Apple® App Store
- Android® – Google Play
- BlackBerry® – BlackBerry® App World

With this feature, you can lock or unlock your vehicle doors from virtually anywhere by using the Blue Link mobile phone app, by dialing the toll-free number, or by using the Blue Link owner’s website.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

To Activate Remote Door Unlock/Lock


- By Blue Link Mobile App: Select DOOR UNLOCK or DOOR LOCK, as desired.
 - Enter your Blue Link PIN.
 - The command to lock or unlock your doors will be sent to your vehicle.
- By phone: Dial toll-free 1-855-2-BLUELINK (1-855-225-8354).
- By web site: Log on to www.MyHyundai.com, select Blue Link.
 - Select Remote Services, then Remote Door Unlock/Lock.
 - Input your Blue Link PIN. (If you need time to get to your vehicle, specify a time delay before your vehicle will be unlocked.)



MULTIMEDIA

STANDARD RADIO

Audio mode

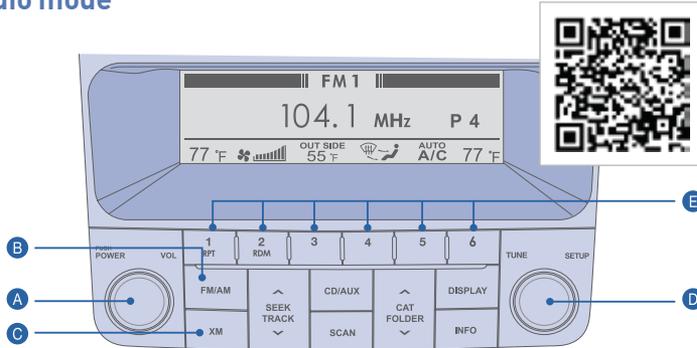

Press **POWER** button **A** to turn radio on.

• TUNING/LISTENING TO CHANNELS

1. Press **FM/AM** **B** or **XM** **C**.
2. Rotate Audio Control knob **D** to desired channel.

NOTE A clear view of the southern sky is helps to ensure XM[®] radio reception.

• SETTING PRESET MEMORY BUTTONS (FM/AM/XM[®])

Press and hold any preset button (1-6) **E** until audible beep is heard to store current channel.

• ADJUSTING THE SOUND CONTROL


1. Press **TUNE** knob **D**.
2. Select “Bass, Middle, Treble, Fader, Balance” by pressing on **TUNE** knob **D**. Rotate **TUNE** knob **D** to adjust.
3. Press **TUNE** knob **D** when done.

Please refer to your Navigation Manual for more detailed information on how to use your audio system.
Complimentary XM[®] subscription ends three months following the vehicle date of sale. Please contact XM[®] Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM[®] subscription.



NAVIGATION

Audio mode

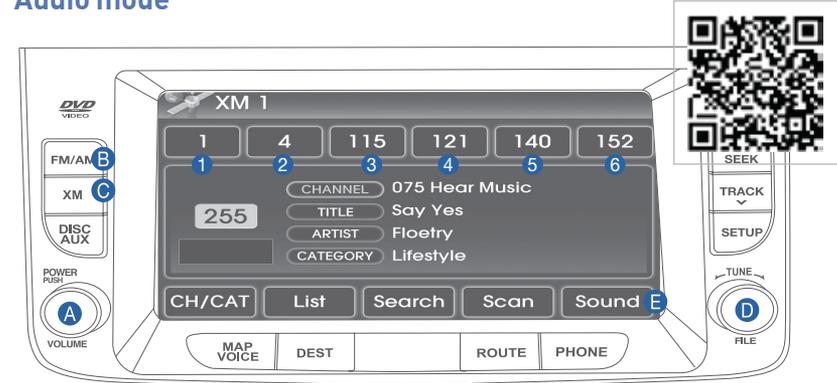

Press **POWER** button **A** to turn radio on.

• TUNING/LISTENING TO CHANNELS

1. Press **FM/AM** **B** or **XM** **C**.
2. Rotate Audio Control knob **D** to desired channel.

NOTE A clear view of the southern sky is helps to ensure XM[®] radio reception.


• SETTING PRESET MEMORY BUTTONS (FM/AM/XM[®])

Press and hold preset button (1-6) until audible beep is heard to store current channel.

• ADJUSTING THE EQUALIZER (SOUND QUALITY CONTROL)

Press **sound** **E** to enter **SETUP** menu. Rotate knob **D** to highlight option, then press to select.

- Tone—Set Sound quality (Bass/Fade/Treble).
- Position—Set sound position (Front/Rear or Right/Left).

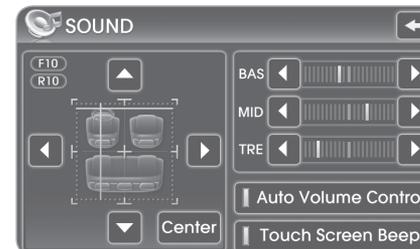




MULTIMEDIA

DRIVER INFORMATION SYSTEM (DIS)

 Audio mode



Press **POWER** button **A** to turn radio on.

TUNING/LISTENING TO CHANNELS

1. Press **FM/AM** **B** or **XM** **C**.
In the FM/AM or XM[®] main menu, select the menu item Tune & Seek.
2. Rotate the controller **E** or **TUNE** knob **D** to the desired channel.

NOTE

A clear view of the southern sky is recommended to ensure XM[®] radio reception.

SETTING PRESET MEMORY BUTTONS (FM/AM/XM[®])


Press and hold the controller **D** to store the currently tuned station in the selected preset until the station is stored.

ADJUSTING THE SOUND CONTROL

1. Press **MENU** button **F**. Scroll down to "Sound Settings" by rotating the controller **E**.
2. Press controller **E** to enter "Sound Settings".



AUX, USB AND iPod PORT

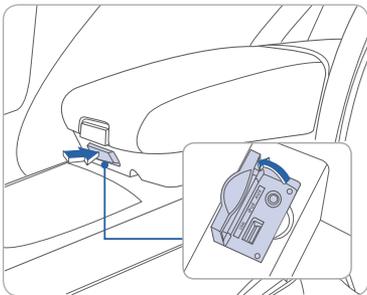

Use the jack to connect an external audio device and listen to it through the audio system in your vehicle.

NOTE

To operate your iPod[®] through the vehicle's audio system:

Standard Radio and Navigation

A Hyundai adapter cable is required. This cable can only be purchased at your local Hyundai dealer.

Driver Information System (DIS)

Connect your Apple supplied SUB cable to the USB port.



iPod[®] is a trademark of Apple, Inc.



FEATURES AND CONTROLS


CENTRAL CONTROL PANEL

The central control panel is located in the vehicle center console. It comprises the controller and the main function buttons.

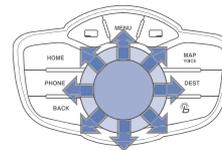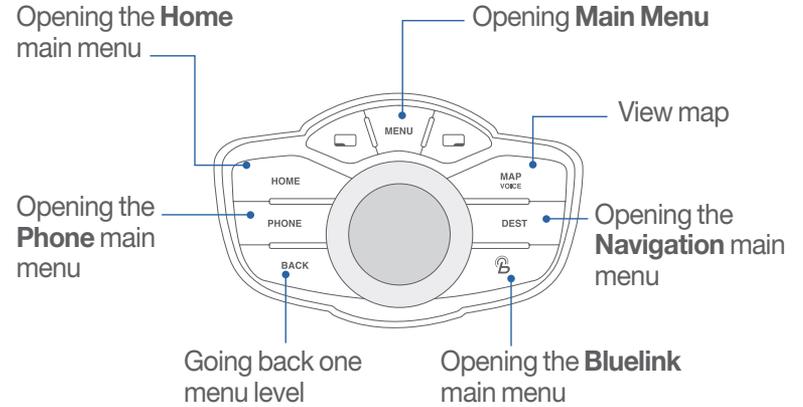


Scrolling through controller

Push to the left, right, backward, forward, or diagonally.

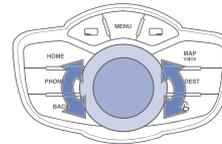

Turning the controller

Turn the controller until the desired menu item is highlighted.

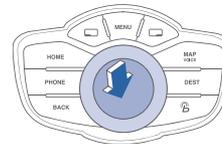


Pressing the controller

Confirming a highlighted menu item.



SEAT WARMING AND COOLING

Warm only—front seats

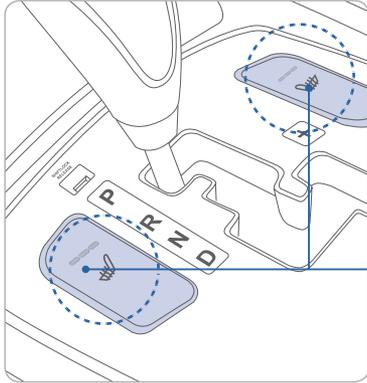


OFF → HIGH(☹☹☹) → MIDDLE(☹☹) → LOW(☹)
 ↑
 Push desired switch to warm the seat.

Warm and Cool—driver's seat

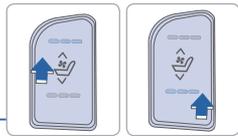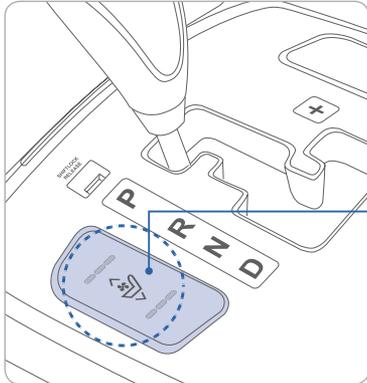


OFF → HIGH(☹☹☹) → MIDDLE(☹☹) → LOW(☹)
 ↑
 Push the front portion of the switch to warm or the rear portion to cool the driver's seat.

Heated Rear Seat

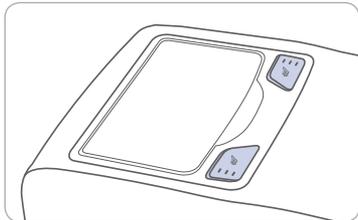

Buttons are located on center armrest.

CLOCK ADJUSTMENT

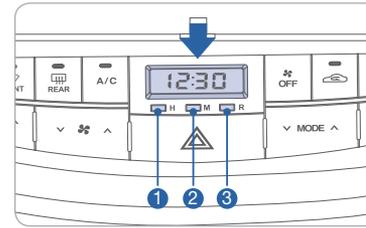

Hour ①
 Minute ②
 Reset ③

Push and hold Reset to toggle between 12 or 24 hours.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low tire pressure indicator
 Inflate tire(s) to proper pressure.

NOTE

Tire pressure may vary in colder temperatures causing the low tire pressure light to illuminate.



Low tire pressure location indicator


TPMS TPMS malfunction indicator

See authorized Hyundai dealer.

NOTE

The TPMS is not a substitute for proper tire maintenance. Refer to your Owner's Manual for further information.


CHILD-PROTECTOR REAR DOOR LOCK

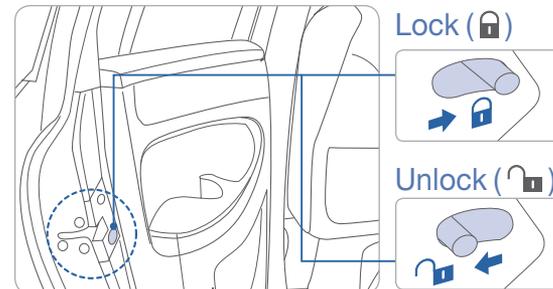

Lock (🔒)




 Unlock (🔓)



ECO SYSTEM

Standard Cluster display

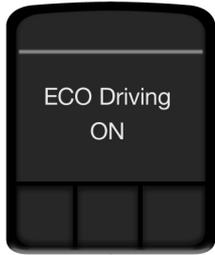

TFT Cluster display




ECO indicator


The ECO indicator light will illuminate when you drive with highest fuel efficiency.

The ECO indicator can be turned off by selecting the function through the trip computer and pressing the DISP button for over 1 second; ECO OFF will then appear.


REARVIEW CAMERA

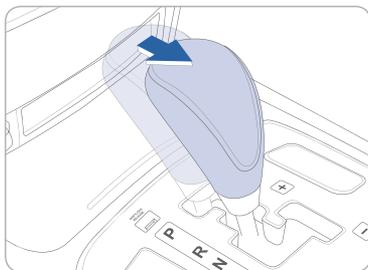

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

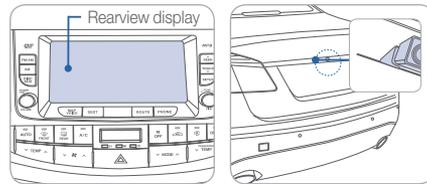

LANE DEPARTURE WARNING SYSTEM (LDWS)


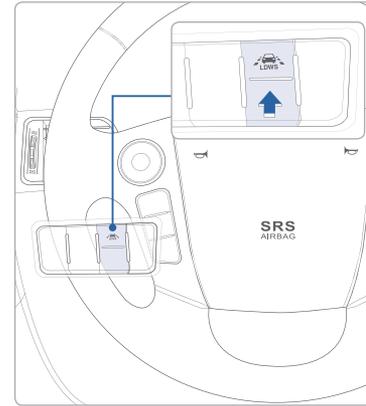


LDWS detects the lane with the sensor at the front windshield and warns you when your vehicle leaves the lane.

- To turn LDWS on, press the button.
- To turn LDWS off, press the button again.

LDWS operates only while the vehicle speed is over 43 mph.

ELECTRONIC PARKING BRAKE (EPB)

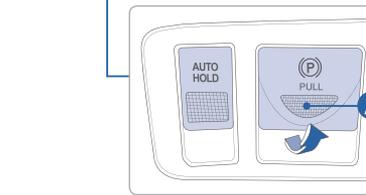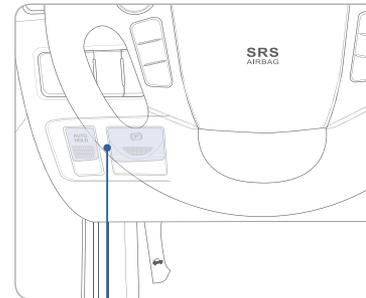

- To apply parking brake, pull **A**.
- To release parking brake, turn ignition ON, apply pressure on the brake pedal, and press **A**, or shift transmission out of P (Park).
- For more information on Electronic Parking Brake and Auto Hold, please refer to your Owner's Manual.

NOTE

If necessary, emergency braking is possible by pulling and holding the EPB switch.

