

MAINTENANCE


Scheduled Maintenance	Normal Usage	Severe Usage*
Engine Oil and Filter (2.0 T-GDI)	Replace 1st: 3,000 or 6 mos. Add'l: 5,000 or 6 mos.	Replace 3,000 or 3 mos.
Engine Oil and Filter (2.4 GDI)	Replace 7,500 or 12 mos.	Replace 3,750 or 6 mos.
Fuel System Cleaner Additive	Add At every Oil and Filter Service	Add Same As Normal
Tire Rotation	Perform 7,500	Perform 7,500
Air Cleaner Filter	Inspect 7,500 Replace 30,000	Inspect Same As Normal Replace More Frequently
Battery Condition	Inspect 7,500	Inspect Same As Normal
Vacuum Hose	Inspect 7,500	Inspect Same As Normal
Climate Control Air Filter	Replace 15,000	Replace More Frequently
Brake Hoses and Lines	Inspect 15,000	Inspect Same As Normal
Drive Shafts and Boots	Inspect 15,000	Inspect 7,500 or 6 mos.
Exhaust Pipe and Muffler	Inspect 15,000	Inspect Same As Normal
Front Brake Disc/Pads, Calipers	Inspect 15,000	Inspect More Frequently
Rear Brake Disc/Pads	Inspect 15,000	Inspect More Frequently
Steering Gear Box, Linkage & Boots, Lower/Upper Arm Ball Joint	Inspect 15,000	Inspect More Frequently
Suspension Mounting Bolts	Inspect 15,000	Inspect Same As Normal
Propeller Shaft (AWD)	Inspect 15,000	Inspect 7,500 or 6 mos.
Brake Fluid	Inspect 30,000	Inspect Same As Normal
Fuel Filter	Inspect 30,000	Inspect Same As Normal
Fuel Lines, Fuel Hoses, and Connections	Inspect 30,000	Inspect Same As Normal
Fuel Tank Air Filter	Inspect 30,000	Inspect Same As Normal
Parking Brake	Inspect 30,000	Inspect More Frequently
Vapor Hose and Fuel Filler Cap, Fuel Tank	Inspect 30,000	Inspect Same As Normal
Transfer Case Oil (AWD)	Inspect 37,500	Replace 75,000
Rear Axle Oil (AWD)	Inspect 37,500	Replace 75,000
Valve Clearance	Inspect 60,000	Inspect Same As Normal
Drive Belts	Inspect 1st: 60,000 or 72 mos. Add'l: 15,000 or 24 mos.	Inspect Same As Normal
Coolant	Replace 1st: 60,000 or 60 mos. Add'l: 30,000 or 24 mos.	Replace Same As Normal
Spark Plugs (2.0 T-GDI)	Replace 45,000 or 36 mos.	Replace More Frequently
Spark Plugs (2.4 GDI)	Replace 105,000 or 84 mos.	Replace More Frequently
Automatic Transaxle Fluid	No Check, No Service required	Replace 60,000

*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-72014-A
(Rev 09/06/13)
Printed 09/10/13

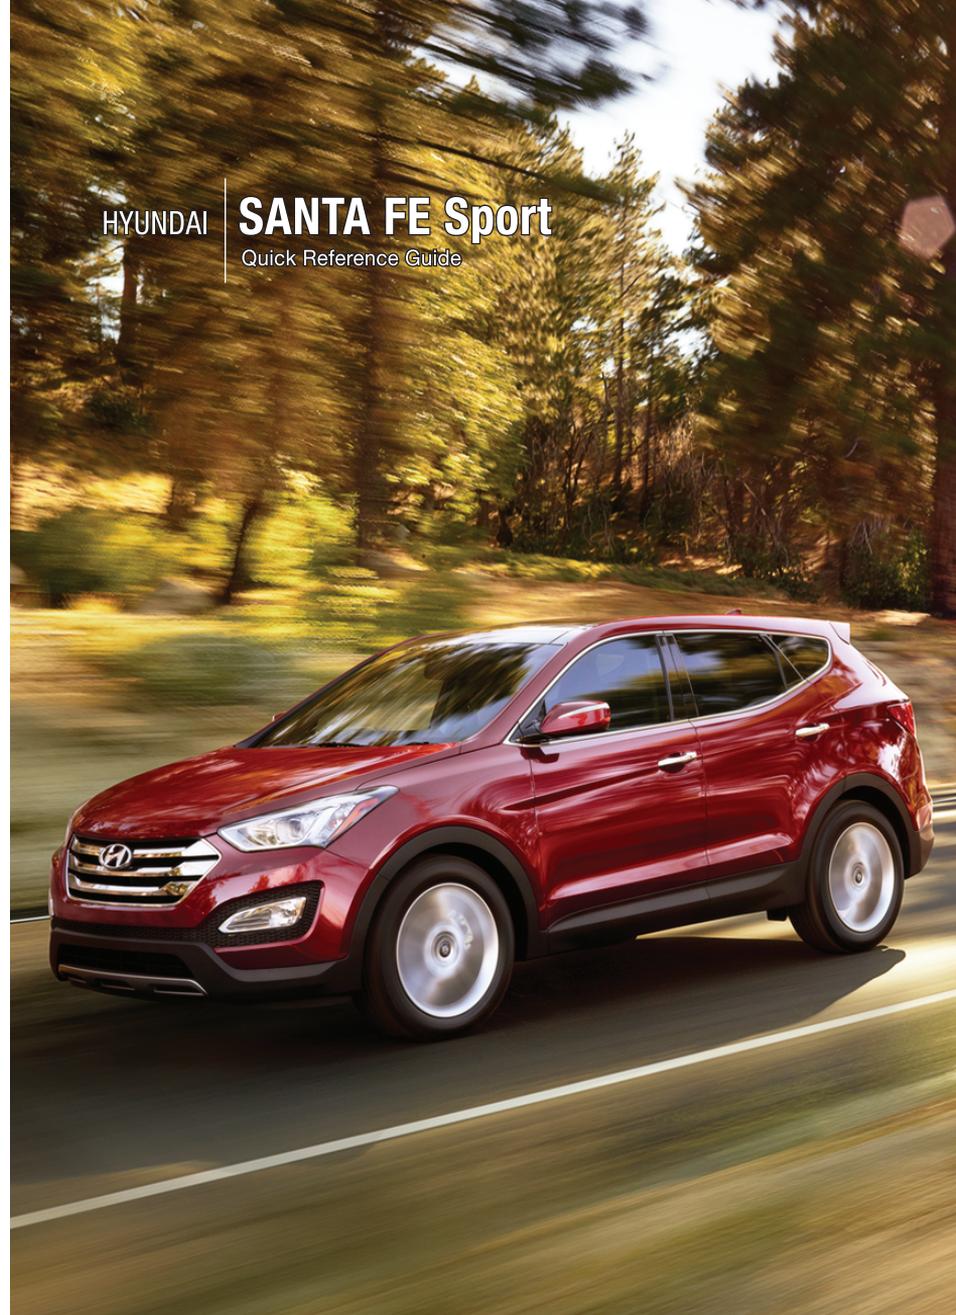

www.hyundai.com

 **HYUNDAI**
NEW THINKING.
NEW POSSIBILITIES.

Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
XM® Radio: **1-800-967-2346**
Blue Link: **1-855-2BLUELINK**
(1-855-225-8354)

Table of contents

GETTING STARTED

Folding key	02
Front seat adjustment	03
Headrest adjustment	04
Rear seat folding	04
Remote keyless entry	02
Seat belt adjustment	04

FEATURES AND CONTROLS

Active ECO System	36
Central door lock switch	06
Child-protector rear door lock	32
Climate control – Manual	16-17
Climate control – Automatic	18-19
Clock adjustments	31
Cruise control system	20
Driver's main controls	06
Driver selectable steering mode	35
Electronic Stability Control (ESC)	35
Fuel filler lid	05
Headlights and fog lights	07
Homelink wireless control system	11
Instrument cluster	12-15
Instrument panel illumination	13 & 15
Interior lights	10
Rearview camera	37
Seat warmer	32
Steering wheel adjustments	05
Steering wheel functions	20 - 21
Sunroof	09
Tire Pressure Monitoring System (TPMS)	34
Transmission	33
Trip computer	13 & 15
Wiper and washer	08

MULTIMEDIA

Audio	28
AUX, USB, and iPod® Port	28
Blue Link Telematics system	26-27
Bluetooth operational tips	22-23
Bluetooth phone operation	24-25
Bluetooth phone pairing	24
Navigation	29-30

*Some vehicles may not be equipped with all the listed features.

Headlights and fog lights
Page 07

Trip computer
Pages 13 & 15

Cruise control system
Page 20

Wiper and washer
Page 08

Navigation
Pages 29-30

Type A

Type B

Driver's main controls
Page 06

Steering wheel adjustments
Page 05

Instrument cluster
Pages 12-15

Transmission
Page 33

AUX, USB and iPod® port
Page 28

Manual

Automatic

Climate control
Pages 16-19

Frequently Asked Questions

1. Pair phone to your vehicle. Refer to pages 24.
2. Program HomeLink. Refer to page 11.
3. Getting started with Blue Link. Refer to page 26.

WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.



GETTING STARTED

REMOTE KEYLESS ENTRY



- Lock
- Unlock
- Tailgate unlock (no popping up)
- Alarm




Mechanical key

Press and hold the release **A** button and remove the key.

NOTE:

User selectable option see Owner's Manual for more detail.

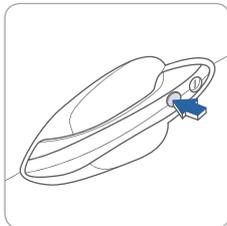

Driver's door Lock / Unlock
Smart key must be within range.

Press:

- Once – Unlock driver door
- Twice – Unlock all doors
- Third – Lock all doors


FOLDING KEY



Unfolding key
Press button **A** to unfold key.

- Lock
- Unlock
- Tailgate unlock (no popping up)
- Alarm


FRONT SEAT ADJUSTMENT (Manual)

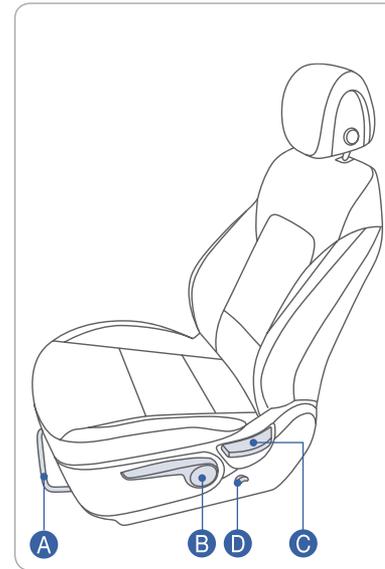

Forward/backward



 Seat cushion height (for driver's seat)




Seatback angle




Lumbar support




FRONT SEAT ADJUSTMENT (POWER)

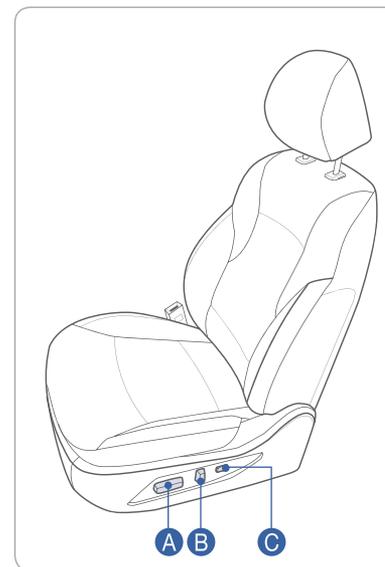

Forward / backward

 

Seat cushion height (for driver's seat)

 

Seatback angle




Lumbar support







REAR SEAT FOLDING

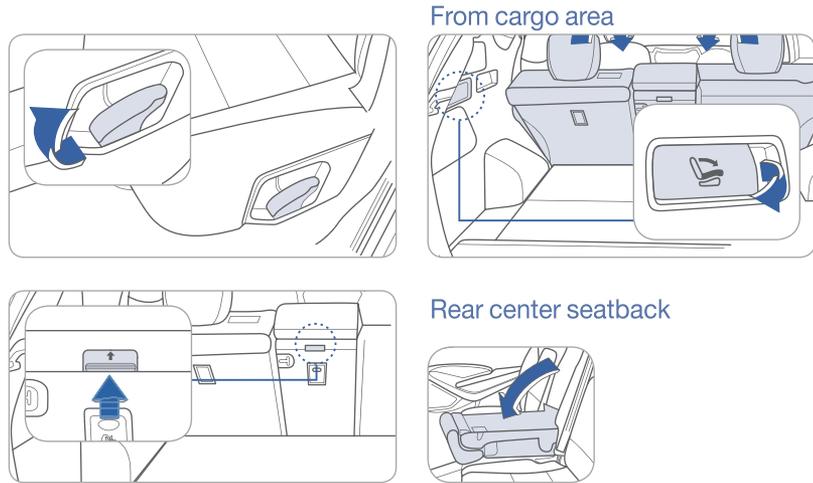


HEADREST ADJUSTMENT

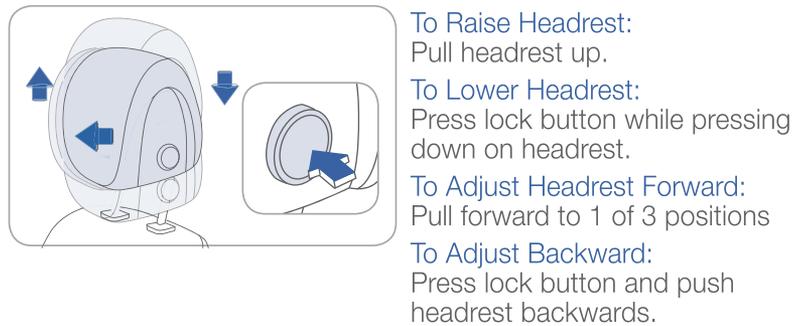


SEAT BELT ADJUSTMENT (Front seat)

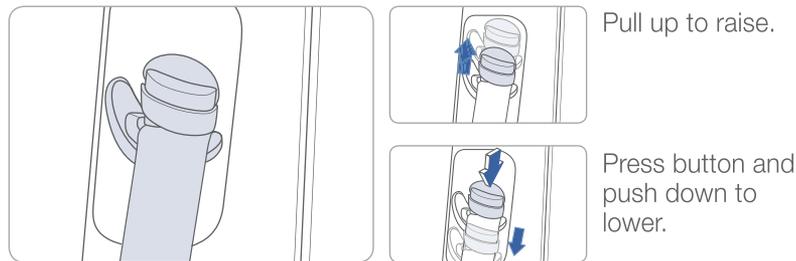

STEERING WHEEL ADJUSTMENTS

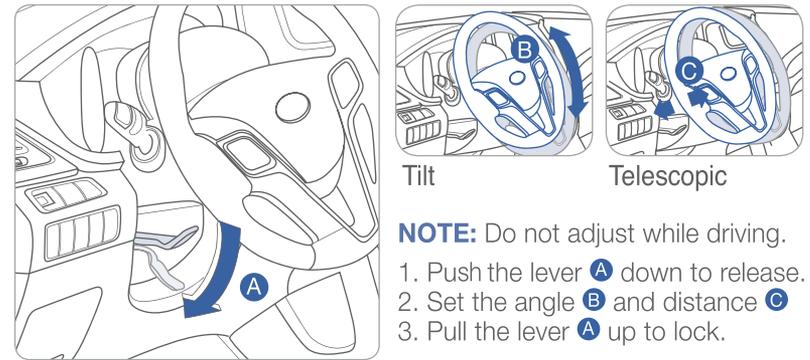


FUEL FILLER LID

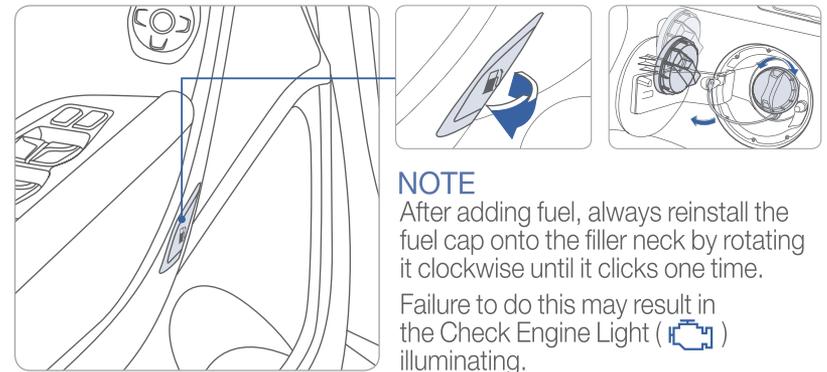

FEATURES AND CONTROLS

DRIVER'S MAIN CONTROLS

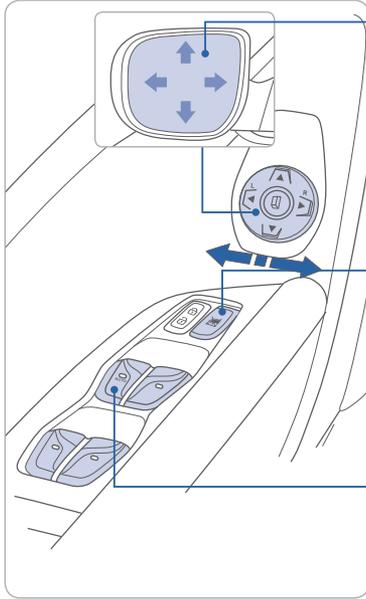


Outside rearview mirrors
Press L (left) or R (right) on the switch. Then adjust the mirror by using the directional switch (↕).

Power window lock switch
Disables the power window switches on the rear passenger doors only.

Window auto down/up (driver's side only)
Press past detent to fully open/close window.


CENTRAL DOOR LOCK SWITCH

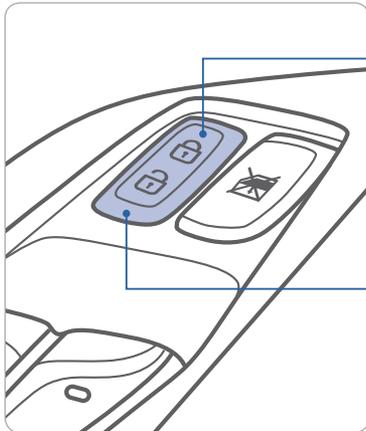

All doors will lock

All doors will unlock

HEADLIGHTS AND FOG LIGHTS

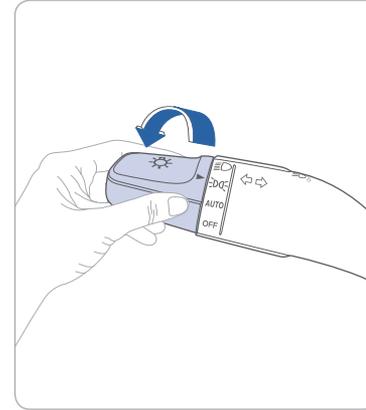


- ▶ | Headlight position
- ▶ | Parking light position
- ▶ | **AUTO** Auto light position
- ▶ | **OFF** OFF position


Headlight delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off. See Owner's Manual for more detail.


Turn signals and lane change signals

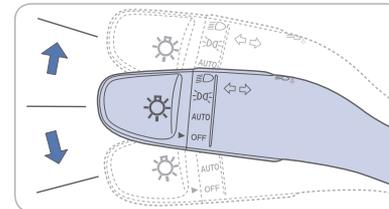


Flashing headlights

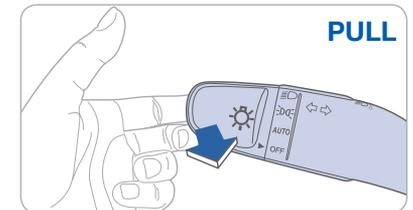

High beam

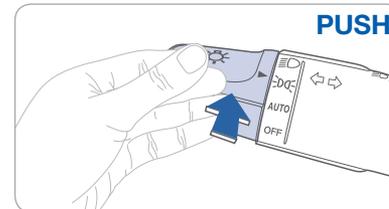


Fog light

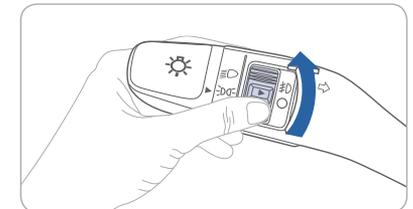




FEATURES AND CONTROLS

WIPER AND WASHER

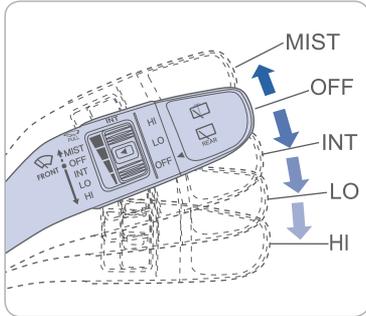


- MIST - Single wipe
- OFF - Off
- INT - Intermittent wipe
- LO - Normal wiper speed
- HI - Fast wiper speed

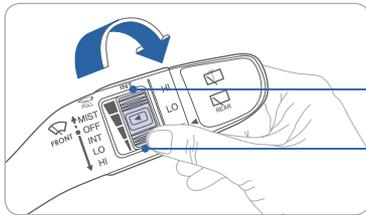


Intermittent wipe time adjustment

- Fast wiper speed
- Slow wiper speed

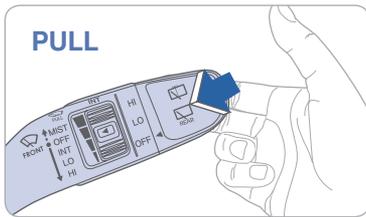


PULL

Front windshield wash with brief wipes

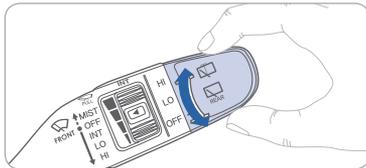

Rear wiper/washer control

- HI - Fast wiper speed
- LO - Normal wiper speed
- OFF - Off

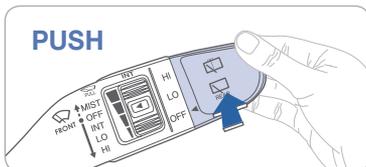


PUSH

Rear window wash with brief wipes




SUNROOF


Sliding the sunroof

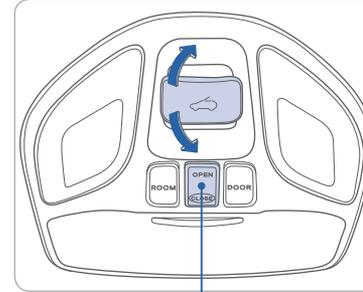

Sunshade open/close button

 

To Open
Press switch rearward.


 


To Close
Press switch forward past the detent to close completely.

NOTE

To operate the sunshade, press open or close button.

 Tilting the sunroof

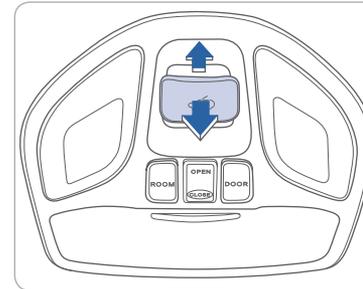

To Tilt
Press the switch up.


To Close
Push the switch forward or pull the switch down.



FEATURES AND CONTROLS

INTERIOR LIGHTS

Map lamp

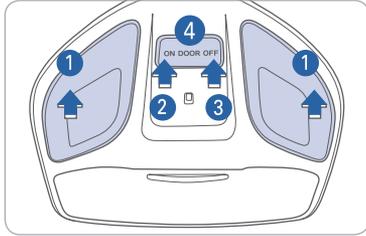

Push the lens **1** to turn the map lamp on or off.

ON **2**

Map lamp and room lamp will turn on.


OFF **3**

The lights stay off at all times, even if a door is opened.

DOOR **4**



Map lamp and room lamp comes on when a door is opened.

Room lamp

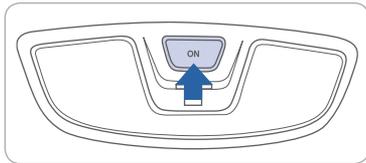

Press the switch to turn the light on or off.

HOMELINK WIRELESS CONTROL SYSTEM

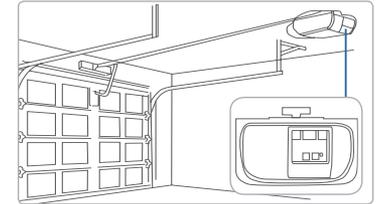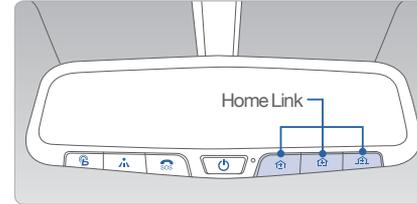

Standard Programming

To train most devices, follow these instructions:


1. For first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 Buttons, until the indicator light begins to flash (after 20 seconds). Release both buttons. Do not hold the buttons for longer than 30 seconds.
2. Position the end of your hand-held transmitter 1-3 inches (2-8 cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For detail instructions, refer to your Owner's Manual or visit www.homelink.com.



FEATURES AND CONTROLS


Type A

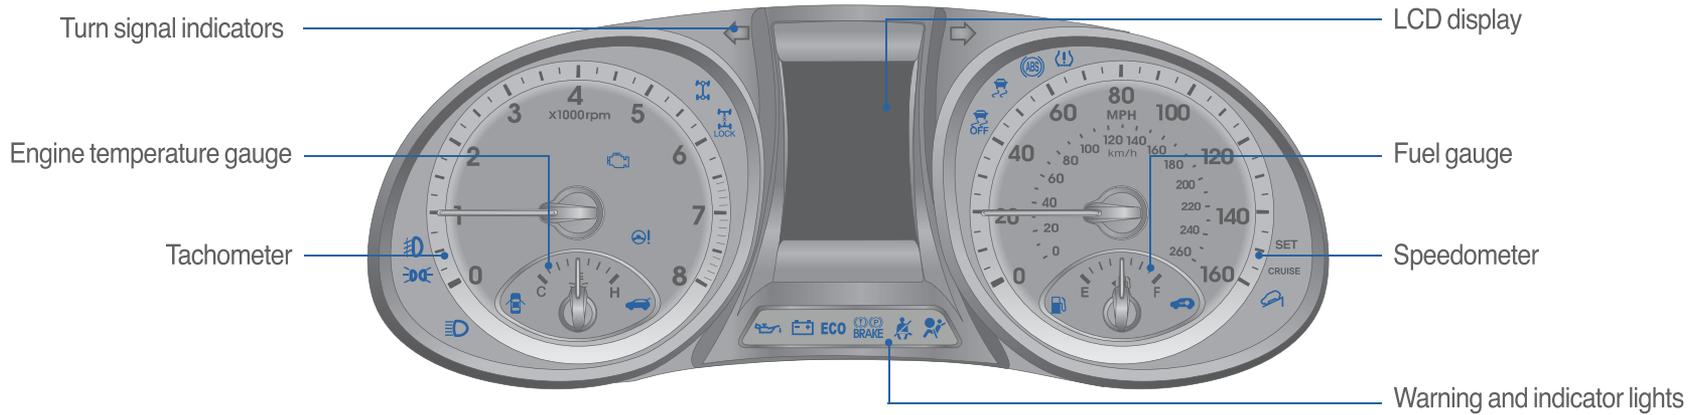


WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
ABS warning light	Electronic Brake force Distribution (EBD) System warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine coolant temperature warning light	Engine oil pressure warning light	Low fuel level warning light
Low tire pressure warning light/TPMS system malfunction light	Door open warning light	Tailgate open warning light
AWD warning light	Electronic Stability Control (ESC) indicator	Electronic Stability Control (ESC) OFF indicator
ECO indicator	Immobilizer indicator	Turn signal indicator
High beam indicator	Light ON indicator	Front fog light indicator
AWD LOCK indicator	Cruise indicator	Cruise SET indicator
Downhill Brake Control (DBC) indicator		


INSTRUMENT PANEL ILLUMINATION

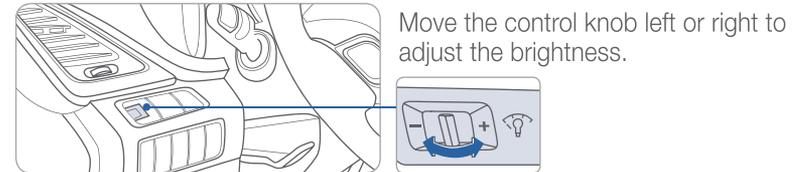

TRIP COMPUTER

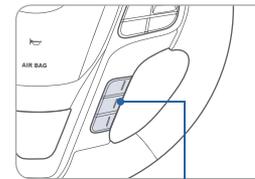

Select "Trip Computer" mode by pressing the MODE button . To change the trip mode as follows, press the MOVE button .

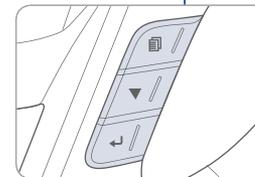

Tripmeter A



Tripmeter B




Fuel Economy



FEATURES AND CONTROLS


Type B

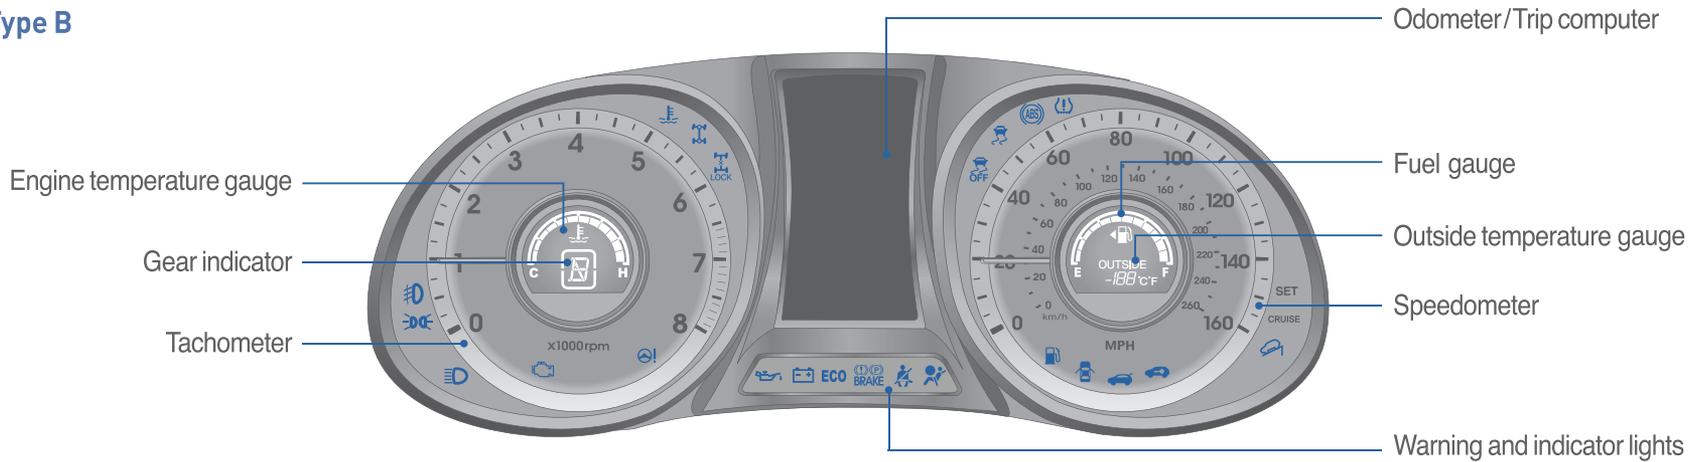


WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
ABS warning light	Electronic Brake force Distribution (EBD) System warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine coolant temperature warning light	Engine oil pressure warning light	Low fuel level warning light
Low tire pressure warning light/TPMS system malfunction light	Door open warning light	Tailgate open warning light
AWD warning light	Electronic Stability Control (ESC) indicator	Electronic Stability Control (ESC) OFF indicator
ECO indicator	Immobilizer indicator	Turn signal indicator
High beam indicator	Light ON indicator	Front fog light indicator
AWD LOCK indicator	CRUISE Cruise indicator	SET Cruise SET indicator
Downhill Brake Control (DBC) indicator		

INSTRUMENT PANEL ILLUMINATION

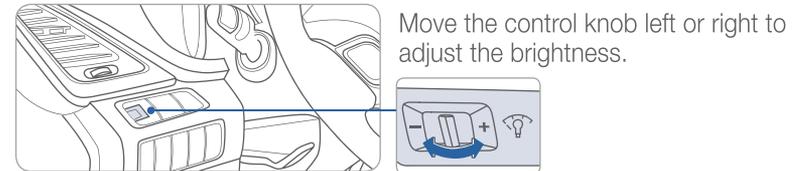


TRIP COMPUTER

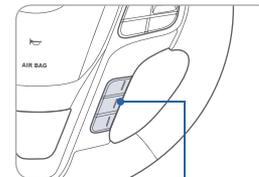

Select "Trip Computer" mode by pressing the MODE button .

To change the trip mode as follows, press the MOVE button .

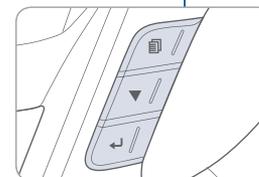

Tripmeter A



Tripmeter B




Fuel Economy



FEATURES AND CONTROLS

Manual Climate Control

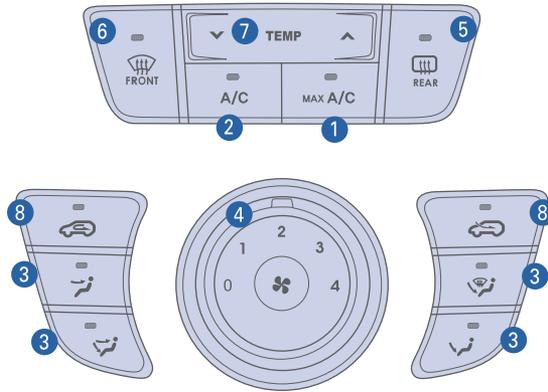

- 1 MAX A/C (Max air conditioning) button
- 2 A/C (Air conditioning) button
- 3 Mode selection buttons
- 4 Fan speed control knob
- 5 Rear window defrost button
- 6 Front windshield defrost button
- 7 Temperature control button
- 8 Air intake control button


DEFROSTING / DEFOGGING

1. Press the front windshield defrost button.
2. Set the temperature control to the desired setting.
3. Set the fan speed to the highest setting.

NOTE

To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

AIR INTAKE CONTROL

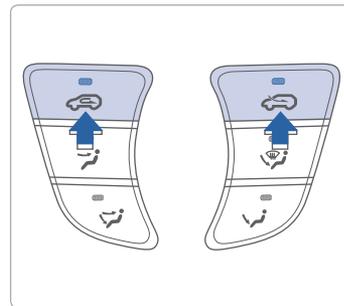


Outside (fresh) air position



Recirculated air position




MODE SELECTION

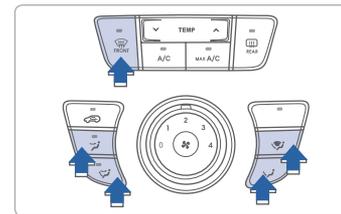

Changing the direction of the air flow as follows:

- Face level
- Bi-Level
- Floor level
- Floor/Defrost Level
- Defrost Level

REAR WINDOW DEFROSTER

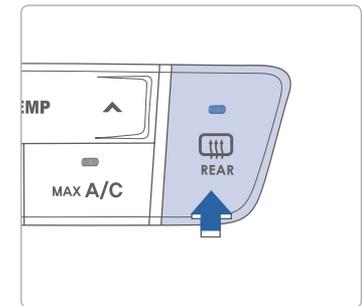


Press to activate/deactivate the rear window defroster.



FEATURES AND CONTROLS

Automatic Climate Control


Type A

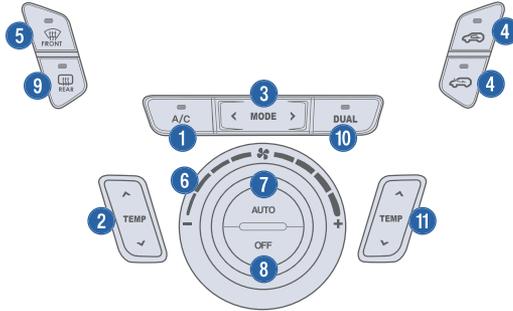

- 1 Air conditioning button
- 2 Driver's temperature control button
- 3 Mode selection button
- 4 Air intake control buttons
- 5 Front windshield defrost button
- 6 Fan speed control knob
- 7 AUTO (automatic control) button

Automatic Climate Control

Type B

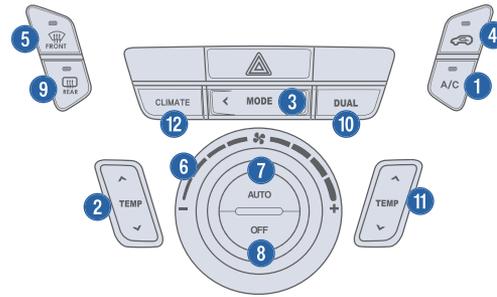

- 8 OFF button
- 9 Rear window defrost button
- 10 Dual temperature control selection button
- 11 Passenger's temperature control button
- 12 Climate control information screen selection button



AUTOMATIC HEATING AND COOLING



1. Press the AUTO button.
2. Set the driver's temperature control to the desired setting.

The modes, fan speeds, air intake, and air-conditioning will be controlled automatically according to the temperature setting.

NOTE

To reduce tendency of the glass fogging and also improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

SYSTEM OFF MODE

Pressing the OFF button will place the system in the off mode.

- Front blower will turn off.
- Outside (fresh) air position selected.
- Vented air at last set temperature.


DEFROSTING / DEFOGGING



1. Set the temperature control to the desired setting.
2. Set the fan speed to the highest setting.
3. Press the front windshield defrost button.


AIR INTAKE CONTROL

Type A

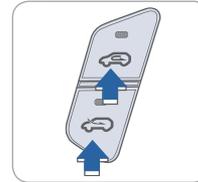

Recirculated air position


Type B

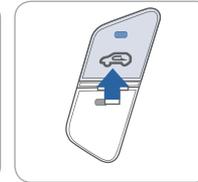


Outside (fresh) air position

DUAL BUTTON

Type A

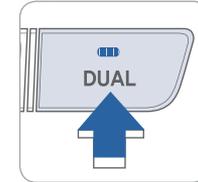

Type B

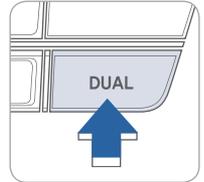

Press the DUAL button to operate the driver and passenger side temperature individually.

REAR WINDOW DEFROSTER




Press to activate/deactivate the rear defroster.

MODE SELECTION




Changing the direction of the air flow as follows:

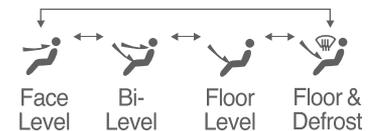

FEATURES AND CONTROLS

STEERING WHEEL FUNCTIONS

Cruise control

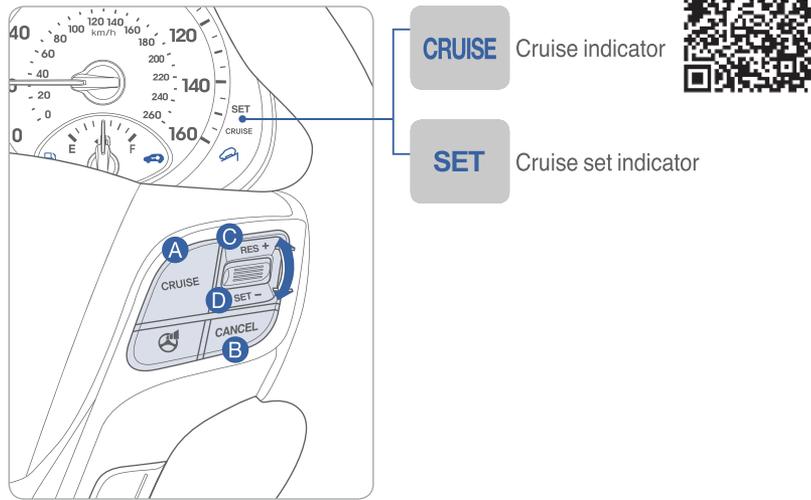

CRUISE Cruise indicator

SET Cruise set indicator

To Set a Cruising Speed

1. Press **CRUISE** button **A** and the **CRUISE** indicator will illuminate in the instrument cluster. Accelerate to desired cruising speed (above 25 mph).
2. Move the lever down (to **SET-**) **D** and remove your foot from the accelerator pedal.

To Accelerate or Decelerate

Move the lever up (to **RES+**) **C** to increase set cruising speed.
Move the lever down (to **SET-**) **D** to decrease set cruising speed.


To Resume Previously Set Speed

Move the lever up (to **RES+**) **C**.

To Cancel Cruising Speed


Press **CANCEL** button **B**, depress brake pedal, or press **CRUISE** button **A**.

Audio control

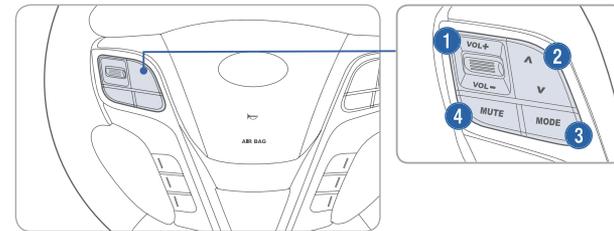

- 1 VOLUME**
Raises or lowers speaker volume.
- 2 SEEK/PRESET**
Press to change presets. Press and hold to seek stations.
- 3 MODE**
Change the audio source. Hold to turn Audio power on/off.
- 4 MUTE**
Mute the sound.

Bluetooth control

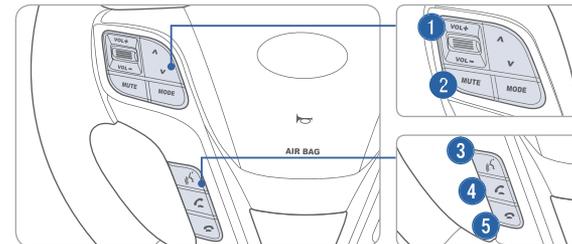

- 1 VOLUME**
Raises or lowers speaker volume.
- 2 MUTE**
Mute the microphone during a call.
- 3 TALK**
Activates voice recognition.
- 4 CALL**
Places and transfers calls.
- 5 END**
Ends calls or cancels functions.



MULTIMEDIA




BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth control

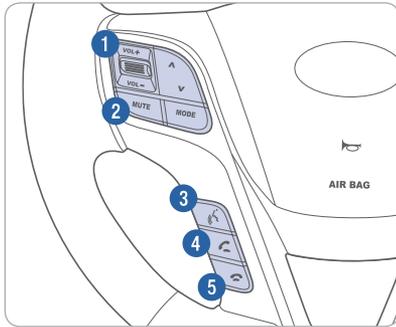

- 1 VOLUME**
Raises or lowers speaker volume.
- 2 MUTE**
Mute the microphone during a call.
- 3 TALK**
Activates voice recognition.
- 4 CALL**
Places and transfers calls.
- 5 END**
Ends calls or cancels functions.

To redial previously dialed number, press and hold **3**.

To Answer a Call:

- Press button on the steering wheel.

To Reject a Call:

- Press button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone

(Secret Call):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:

- Press button on the steering wheel.

Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press button.
2. Say the following command:
 - “Call <John>”: Connects the call to John.
 - “Call <John> on <Mobile/Home/Office>”: Connects the call to John’s Mobile, Home, or Office phone number.

Dialing by Number:

1. Press button.
2. Say “Call”.
3. Say “By number” when prompted.
4. Say desired phone numbers.
5. Say “Dial” to complete the number and make a call.

For complete list of commands, refer to your Owner’s Manual.

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing in a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands

To start voice command. Press the key, the following commands are available:

Command	Function
More Help	Provides guidance on commands that can be used anywhere in the system.
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute corresponding functions.
Call History	Displays the Call History screen.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect the cell.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.



MULTIMEDIA



BLUETOOTH PHONE PAIRING

Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.




BLUETOOTH PHONE OPERATION


Vehicle must be in park to complete the pairing process.

Phone setup (pairing phone) with Audio

Type A

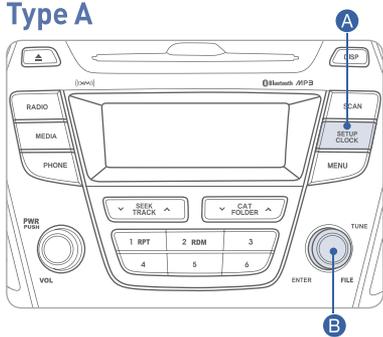

Type B

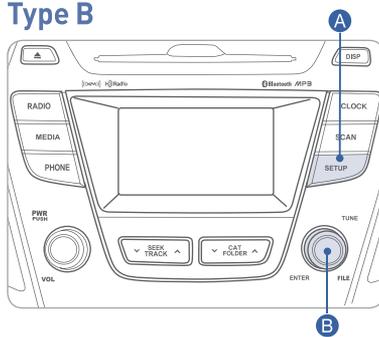


1. Press the SETUP **A** button.
2. Select "Phone" by turning and pressing the TUNE/ENTER **B** knob.
3. Select "Pair Phone" by turning and pressing the TUNE/ENTER **B** knob.
4. Search for the device name as displayed on your mobile phone and connect.
5. Input the passkey displayed on the Audio screen.

Type A




Type B

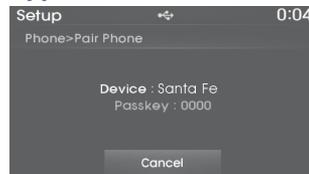

6. Pairing completion is displayed.

Phone setup (Pairing phone) with Navigation

1. Press the call button on the steering wheel remote controller or press the PHONE button.

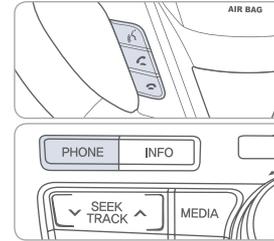

2. Press Yes button on the screen.



3. Search for the car name and pair the device.

4. Input the passkey. (The initial passkey is 0000.)



5. Bluetooth® becomes connected.

NOTE


After pairing is completed, transfer of the contact list to the audio system will begin (if your phone is supported).



MULTIMEDIA



BLUE LINK TELEMATICS SYSTEM

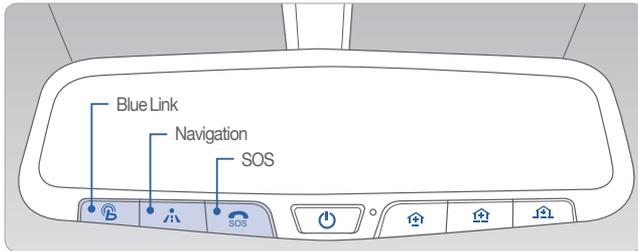

Press the  button for access to the voice-response menu of services. You have two options:

- You can say, "Main Menu" for a listing of main menu choices.
- You can directly select any of the listed menu items by saying its name.

			
Navigation	Information	Essentials	Vehicle Assist
New Destination Gas Prices Restaurant Ratings Route Assistance Daily Route Guide Main Menu	Traffic Weather Valet Alert Main Menu	Voice Texting Location Sharing Main Menu	Roadside Assistance Agent Assistance Service Link Quick Tips Main Menu

- Press the  button for navigation-related services.
- Press the  button for SOS Emergency Assistance.
- Refer to your Blue Link User's Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Remote Door Unlock/Lock

Blue Link Mobile App



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® – Apple® App Store
- Android® – Google Play
- BlackBerry® – BlackBerry® App World

With this feature, you can lock or unlock your vehicle doors from virtually anywhere by using the Blue Link mobile phone app, by dialing the toll-free number, or by using the Blue Link owner's website.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

To Activate Remote Door Unlock/Lock


- By Blue Link Mobile App: Select DOOR UNLOCK or DOOR LOCK, as desired.
 - Enter your Blue Link PIN.
 - The command to lock or unlock your doors will be sent to your vehicle.
- By phone: Dial toll-free 1-855-2-BLUELINK (1-855-225-8354).
- By web site: Log on to www.MyHyundai.com, select Blue Link.
 - Select Remote Services, then Remote Door Unlock/Lock.
 - Input your Blue Link PIN. (If you need time to get to your vehicle, specify a time delay before your vehicle will be unlocked.)




MULTIMEDIA

AUDIO

Type A

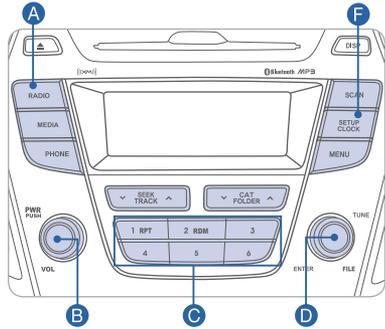

Type B

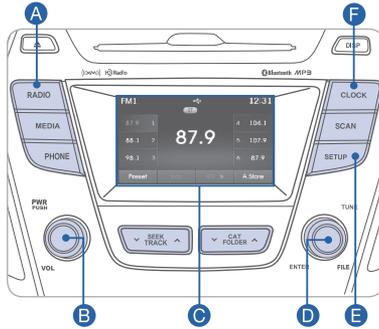

Press POWER button **B** to turn radio on.

• TUNING / LISTENING TO CHANNELS

1. Press the Radio **A** button.
2. Turn the TUNE/ENTER **D** knob to select the desired channel and press the knob.

NOTE A clear view of the southern sky helps ensure XM[®] radio reception.

• SETTING PRESET MEMORY BUTTONS (FM/AM/XM[®])


Press and hold any preset button (1-6) **C** until an audible beep is heard to store current channel.

• ADJUSTING THE SOUND CONTROL

1. Press the SETUP **E** button.
2. Select "Sound Settings" by turning and pressing the TUNE/ENTER **D** knob.
3. Select "Bass," "Middle," "Treble," "Fader," or "Balance" by turning and pressing the TUNE/ENTER **D** knob.
4. Adjust the sound by turning and pressing the TUNE/ENTER **D** knob.

Please refer to your Owner's Manual for more detailed information on how to use your audio system. Complimentary XM subscription ends three months following the vehicle date of sale. Please contact XM Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM subscription.

AUX, USB, AND iPod[®] PORT

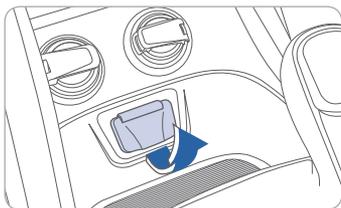

Use the jack to connect an external audio device and listen to it through the audio system speakers in your vehicle.



NAVIGATION

Audio mode



Press POWER button **A** to turn radio on.

• TUNING/LISTENING TO CHANNELS

1. Press FM/AM **B** or SAT **C** button of XM[®].
2. Press the TUNE **D** button to desired channel.

NOTE A clear view of the southern sky helps ensure XM[®] radio reception.

• SETTING PRESET MEMORY BUTTONS (FM/AM/XM[®])

Press and hold any preset button (1-6) **G** on the screen until an audible beep is heard to store current channel.

• ADJUSTING THE SOUND CONTROL

1. Press the SETUP **F** button and press the SOUND button to display the Sound Settings screen.
2. Touch on-screen arrows to adjust desired setting.



• SELECTING TRACK THROUGH SEARCH (CD MODE)


Press the TUNE **D** button to search tracks. Once the desired track name is displayed, press the ENTER button.



MULTIMEDIA

NAVIGATION

Map position

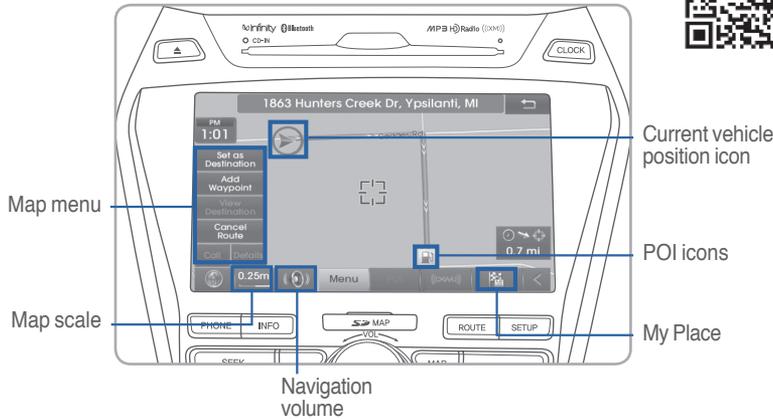

Destination menu



Quick Menu

Press the ★ button on the left side of the map screen to display the Quick Menu.

1. Quick Menu (★) – Display/hide Quick Menus
2. Quick Menu Bar – Menus added to the Quick Menu (possible to set up to 6 menus)
3. Edit - Add/Delete Quick Menus
4. Current Quick Menus – Shows list of current Quick Menus
5. Add/Remove – Add or remove Quick Menus
6. Quick Menu Categories – List of categories that can be added to Quick Menus



FEATURES AND CONTROLS

CLOCK ADJUSTMENTS

Type A



Type B



With Type A or B Radios:

1. Press the SETUP/CLOCK (A) button.
2. Select "Clock Settings" or "Time Format" by turning and pressing the TUNE/ENTER (B) knob.
3. Set the time in "Clock Settings" by turning and pressing the TUNE/ENTER (B) knob.
4. Select the time format in "Time Format," 12 hour format or 24 hour format, by turning and pressing the TUNE/ENTER (B) knob.

With Navigation:

Press and hold CLOCK (A).

GPS Time time received from the GPS will be displayed automatically.


Time Format: When the clock type is digital, it converts the time display between 12 hour and 24 hour format.



FEATURES AND CONTROLS


SEAT WARMER

Front seat

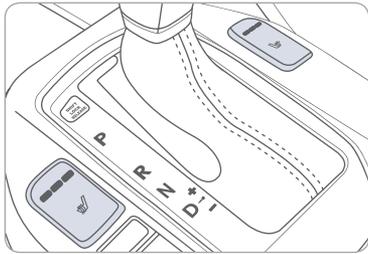


Push desired switch to warm the seat.
 HIGH (-----) → MIDDLE (-----) → LOW (---)
 ↑ OFF

Rear seat

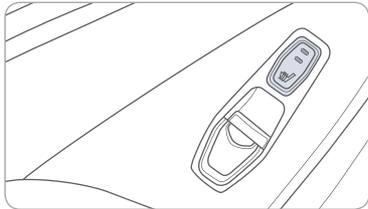

Push the switch to warm the rear seat.
 OFF → HIGH (-----) → LOW (---)

CHILD-PROTECTOR REAR DOOR LOCK


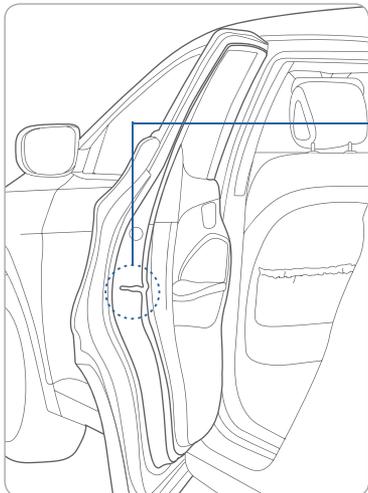


Lock (🔒)
 Insert a key into the hole and turn it to the lock (🔒) position.




Unlock (🔓)
 Insert a key into the hole and turn it counter clockwise to unlock position.

AUTOMATIC TRANSMISSION

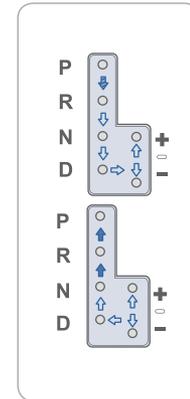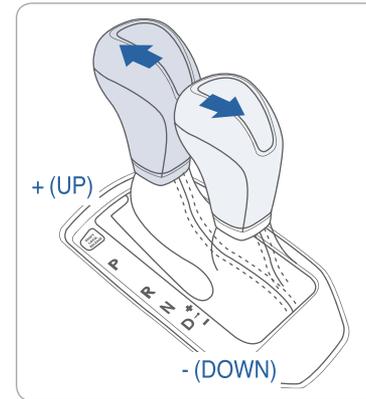

- (🔑➡): Depress the brake pedal and the lock release button when shifting.
- (➡): The lock release button must be pressed while moving the shift lever.
- (➡): The shift lever can be shifted without pressing the lock release button.

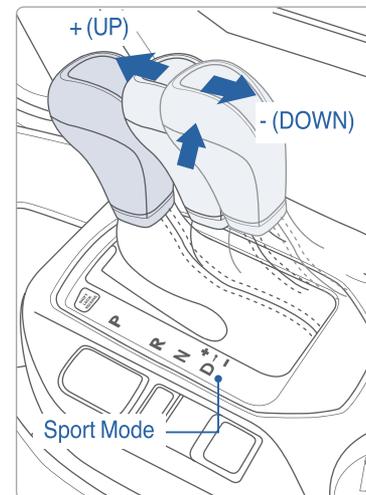



Sport mode

Move the shift lever from D (Drive) into the manual gate to select.

Move the shift lever forward (+) to upshift or rearward (-) to downshift.




TIRE PRESSURE MONITORING SYSTEM (TPMS)

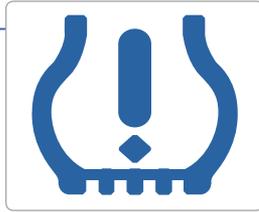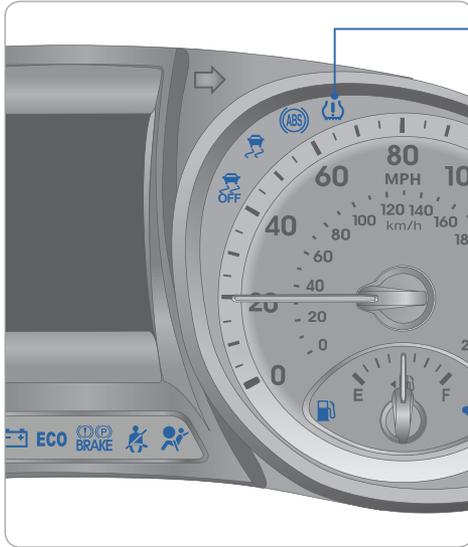

Low Tire Pressure Indicator / TPMS Malfunction Indicator

Type A

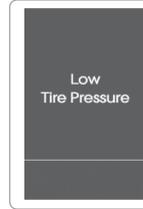

Type B



LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires is significantly under-inflated.


TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer.

NOTE

When the low tire pressure indicator is illuminated, inflate tire to proper tire pressure as soon as possible. Tire pressure may vary in colder temperatures, causing the low tire pressure indicator to illuminate.

ELECTRONIC STABILITY CONTROL (ESC)

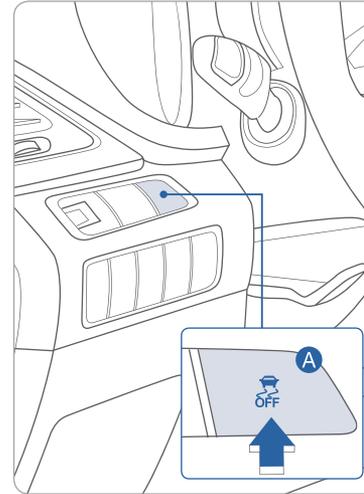


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

Press **A** to turn ESC on/off.

NOTE


It is recommended to always have the ESC system ON.

DRIVER SELECTABLE STEERING MODE

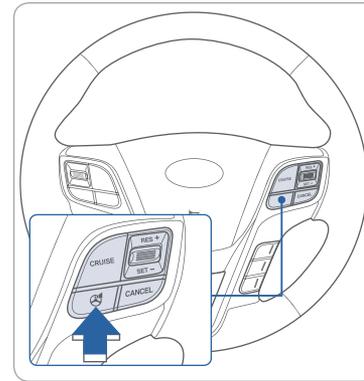


The driver selectable steering mode changes steering effort per driver's preference.

 Pushing the button once tells you what the current mode is on the center of the instrument cluster screen. Pressing the button again will scroll through the different modes.





ACTIVE ECO SYSTEM

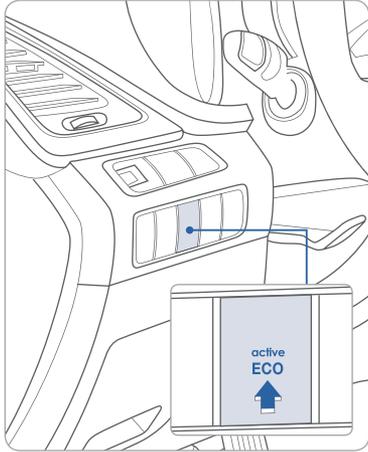

Active ECO system

Active ECO System helps improve fuel efficiency by revising the engine and transmission calibration.



Active ECO on – For optimal fuel efficiency

Active ECO off – For optimal performance and drivability.

To improve your fuel efficiency:

- Accelerate at a moderate rate
- Keep tires inflated to the recommended pressure on the placard
- Be sure the wheels are properly aligned
- Avoid unnecessary braking
- Observe posted speed limits on the highway.

REARVIEW CAMERA

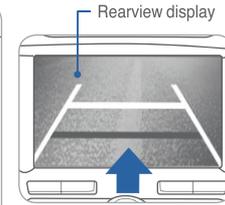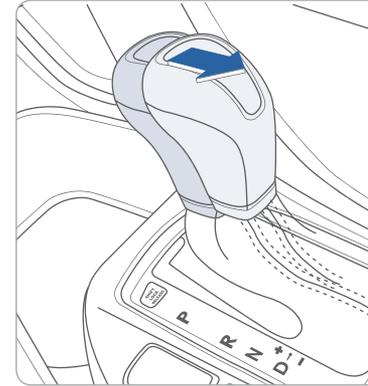

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

Key Websites:

- Hyundai website - www.hyundai.com
- Hyundai owner website - www.myhyundai.com
- Bluetooth phone compatibility - www.hyundaiusa.com/bluetooth
- Blue Link - www.hyundaiusa.com/technology/bluelink

SANTA FE SPORT CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- CONFIRM "GOOD BATTERY" USING GR8 AND STAPLE TEST TICKET HERE
- SET TIRE PRESSURE TO PLACARD LF__RF__RR__LR__
- VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES-CLEAN WINDSHIELD AND BACK WINDOW
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE

Sales Consultant	Date	Sales Manager	Date
Customer			Date
Email		@	

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- DRIVER SELECTABLE STEERING MODE - Page 35
 - Demonstrate and explain the different steering modes
- BLUETOOTH – pages 22–25
 - Show phone compatibility website: www.hyundaiusa.com/bluetooth
 - Make a test call using Bluetooth with the customer's phone
 - Demonstrate Voice Recognition (VR)
- BLUE LINK – pages 26–27
 - Show website: www.hyundaiusa.com/technology/bluelink
 - Demonstrate Point of Interest (POI) search and download
 - Ensure customer understands subscription process
- TIRE PRESSURE MONITORING SYSTEM (TPMS) – page 34
 - Explain TPMS function to customer
 - When illuminated, one or more tires are under-inflated.
 - Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS
- VEHICLE SETTINGS – pages 12–15 and 29–30
 - Demonstrate vehicle settings in instrument cluster
 - Demonstrate navigation use, enter dealer address
 - Show radio presets
- CLOCK – pages 31
 - Demonstrate how to set clock (including daylight savings setting for Navigation equipped vehicles)

