


## WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

### DEFROST- page 14-17

- 1 Press the front defrost button.
- 2 Set to warmest temperature setting.
- 3 Set to highest fan speed.

### Manual climate control

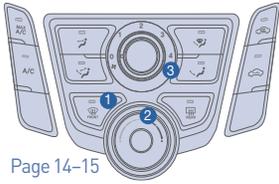

Page 14-15

### Automatic climate control



Page 16-17

### BLUETOOTH – page 20-21


- Show phone compatibility website: [www.hyundaiusa.com/bluetooth](http://www.hyundaiusa.com/bluetooth)
- Make a test call using customer's paired phone
- Demonstrate Voice Recognition (VR)

### BLUE LINK – page 24-26 (if applicable)

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link Users Manual & tear out Voice Commands/Quick Tip Card
- Encourage customers to press the Blue link button

### WINDSHIELD WIPER/WASHER – page 09

- Explain wiper function (int speed, front & rear wipers) and how it may differ from customer's previous vehicle

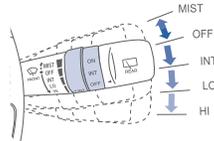

### CLOCK – page 31

- Demonstrate how to set clock (including daylight savings setting for Navigation equipped vehicles)

### UNLOCKING VEHICLE – page 02

- Demonstrate dual state unlock with key and remote keyless entry

## MAINTENANCE

Scheduled Maintenance	Normal Usage		Severe Usage*	
Engine Oil And Filter*	Replace	7,500 or 12 mos.	Replace	3,750 or 6 mos.
Fuel Additives	Add	Every 7,500 or 12 mos.		
Tire Rotation	Perform	7,500	Perform	7,500
Air Cleaner Filter	Inspect Replace	7,500 30,000	Inspect Replace	Same As Normal More Frequently
Battery Condition	Inspect	7,500	Inspect	Same As Normal
Vacuum Hose	Inspect	7,500	Inspect	Same As Normal
Climate Control Air Filter (For Evaporator And Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500 or 6 mos.
Electronic Throttle Control	Inspect	15,000	Inspect	Same As Normal
Exhaust Pipe & Muffler	Inspect	15,000	Inspect	Same As Normal
Front Brake Disc / Pads, Calipers	Inspect	15,000	Inspect	More Frequently
Rear Brake Drums / Linings Rear Brake Disc / Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake/Clutch Fluid	Inspect	30,000	Inspect	Same As Normal
Fuel Filter	Inspect	30,000	Inspect	Same As Normal
Fuel Lines, Fuel Hoses And Connections	Inspect	30,000	Inspect	Same As Normal
Fuel Tank Air Filter	Inspect	30,000	Inspect	Same As Normal
Parking Brake	Inspect	30,000	Inspect	More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect	30,000	Inspect	Same As Normal
Manual Transmission Fluid	Inspect	37,500	Replace	75,000
Drive Belt (Alt, A/C)	1st Inspect 60,000 or 72mos. Add. Inspect 15,000 or 24mos.		Inspect	Same As Normal
Spark Plugs (Iridium Coated)	Replace	100,000 or 10yrs.	Replace	More Frequently
Coolant	1st Replace 120,000 or 10yrs. Add Replace 30,000 or 24mos.		Replace	Same As Normal
Automatic Transmission Fluid	No check, No service required		Replace	60,000

\*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.

\*See Owner's Manual for details.

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing, however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-82016-A  
(Rev 01/21/15)  
Printing 01/24/15

## HYUNDAI ELANTRA GT

Quick Reference Guide



[www.hyundai.com](http://www.hyundai.com)

**HYUNDAI**  
NEW THINKING.  
NEW POSSIBILITIES.

Roadside Assistance: **1-800-243-7766**  
Consumer Affairs: **1-800-633-5151**  
XM® Radio: **1-800-967-2346**  
Blue Link: **1-855-2BLUELINK**  
**(1-855-225-8354)**

# Table of contents

## GETTING STARTED

Engine start/stop button	03
Front seat adjustment	04
Fuel filler lid	06
Headrest adjustment	05
Rear seat folding	05
Remote keyless entry	02
Seat belt adjustments	06
Steering wheel adjustments	06

## FEATURES AND CONTROLS

Active ECO system	36
Child-protector rear door lock	32
Climate control—manual	14-15
Climate control—automatic	16-17
Cruise control system	18
Door lock switch	07
Driver's Selectable Steering Mode (DSSM)	19
Driver's main controls	07
Electronic Stability Control (ESC)	35
Headlights and fog lights	08
Instrument cluster	12-13
Instrument panel illumination	13
Interior lights	11
Rearview camera	37
Seat warmer and ventilation seats	32
Steering wheel controls	18-19
Sunroof	10
Tire pressure monitoring system (TPMS)	35
Transmission	33-34
Trip computer	13
Wiper and washer	09

## MULTIMEDIA

AUX, USB, and iPod® Port	31
Blue Link Telematics System	24-26
Bluetooth operational tips	20
Bluetooth phone pairing	22
Clock adjustment	31
Navigation	28-30
Standard Audio	27

### How to:

Pair phone to your vehicle. Refer to page 22.

Headlights and Fog lights Page 08

Instrument Cluster Page 12-13

Driver's Selectable Steering Mode Page 19

Wiper and Washer Page 09

Audio/Navigation Page 27-30

Headlights

Fog lights

Standard Audio

Navigation Audio

Driver's Main Controls Page 07

Steering Wheel Adjustment Page 06

Trip Computer Page 13

Transmission Page 33-34

Climate Control Page 14-17

Manual

Automatic

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

### ⚠ WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

\*Some vehicles may not be equipped with all the listed features.



## GETTING STARTED

### Download QR Code Reader

You can download a QR reader app to your smart phone to take advantage of the QR codes throughout this Quick Reference Guide.

iPhone® - Apple® App Store  
Android® - Google Play  
BlackBerry® - BlackBerry® App World

### REMOTE KEYLESS ENTRY


Remote Key



Smart Key



- Lock
- Unlock
- Trunk unlock
- Panic

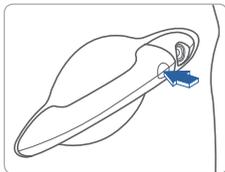

**Driver's door Lock/Unlock**  
Smart key must be within range.


**Press:**  
Once – Unlock driver door  
Twice – Unlock all doors  
Third – Lock all doors



**Remove mechanical key**  
Press and hold the release **A** button and remove the key.

**Reinstall mechanical key**  
Put the key into the hole and push it until a click sound is heard.

### ENGINE START/STOP BUTTON

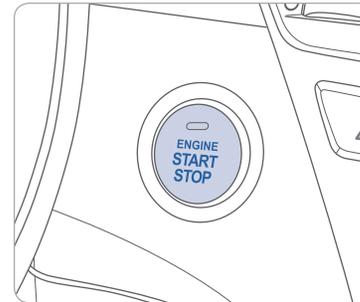

To start the engine, depress the brake pedal and press start/stop button. To shut engine OFF, stop the vehicle, shift to P (Park) and press the start/stop button.

**With the engine OFF, press the engine start/stop button without depressing the brake pedal:**

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

#### Emergency situations


##### Shut off engine while driving:

- Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.

##### Restart engine while driving:

- Press engine start/stop button with shift lever in N (Neutral).


## FRONT SEAT ADJUSTMENT (MANUAL)

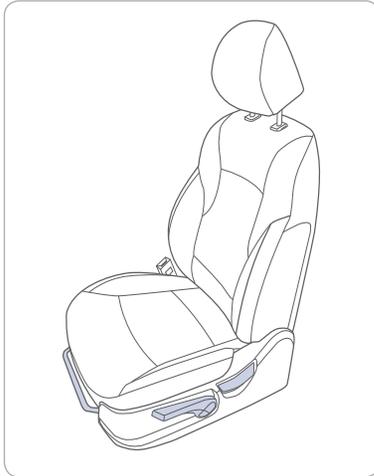

Forward and backward 



 Seat cushion height (for driver's seat)



Seatback angle



## FRONT SEAT ADJUSTMENT (POWER)



Forward and backward 



Seat cushion height (for driver's seat)







Seatback angle



Lumbar support




## REAR SEAT FOLDING

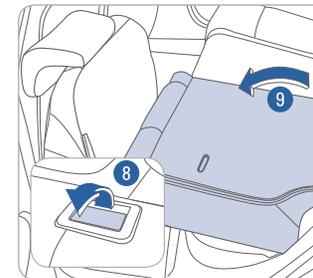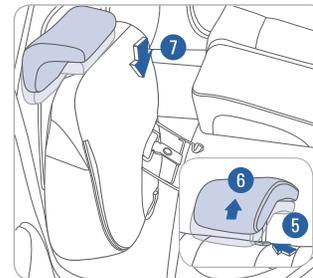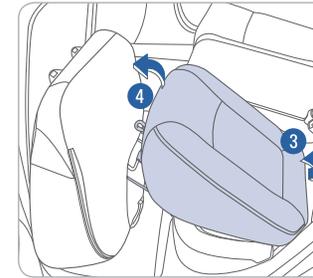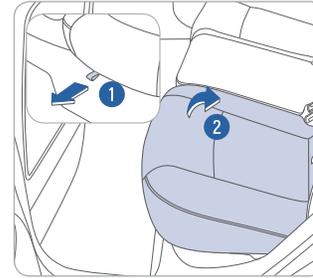

### WARNING!

When folding the rear seat, never allow the rear seat components to contact the front passenger seat as this may affect the proper operation of the SRS Occupant Classification System (see Owner's Manual for additional details).

## HEADREST ADJUSTMENT

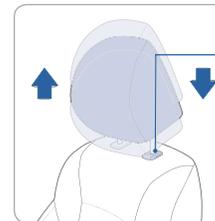


Height adjustment

Lock knob

To raise headrest height, pull up on headrest.  
To lower headrest, press lock knob while pushing down on headrest.

## SEAT BELT ADJUSTMENT (Front seat)


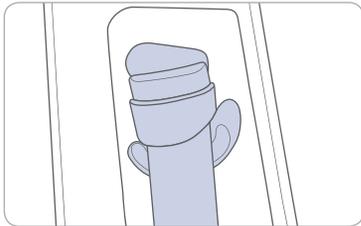


Pull up to raise.




Press button and push down to lower.

## STEERING WHEEL ADJUSTMENTS

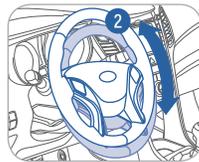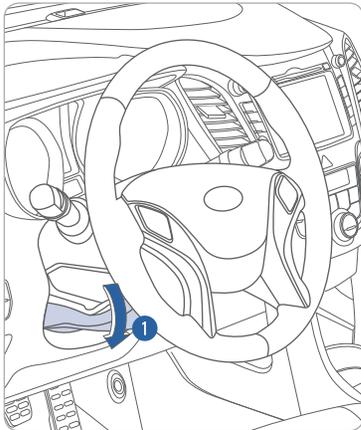


Tilt

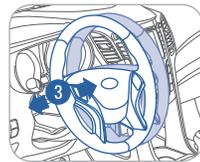

Telescopic

1. Pull the lever ① down.
2. Set the angle ② and distance ③.
3. Pull the lever ① up.

## FUEL FILLER LID

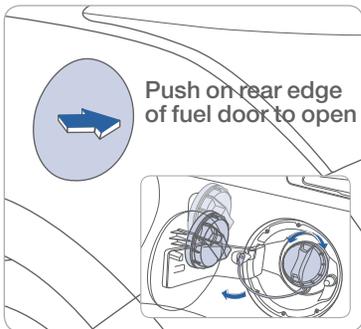


Push on rear edge of fuel door to open

### NOTE

- \* After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks one time. Failure to do this may result in the Check Engine Light illuminating.
- \* The fuel filler lid will open and close only when the driver's door is unlocked.
- \* Check the engine oil regularly between recommended oil changes.

## DRIVER'S MAIN CONTROLS

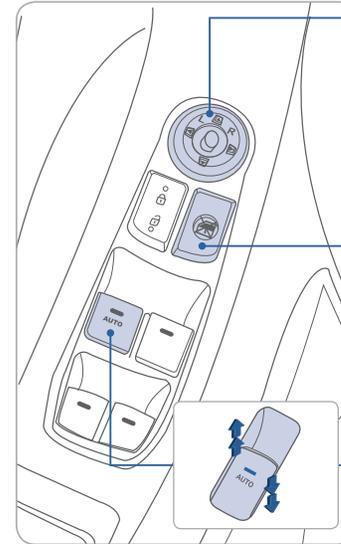

### Outside Rearview Mirrors

Press L (left) or R (right) on the switch. Then adjust the mirror by using the directional switch.



### Power Window Lock Switch


Disables the power window switches on the passenger doors.

### Window Auto down/up (driver's side only)

Press past detent to fully open/close window.



## DOOR LOCK SWITCH

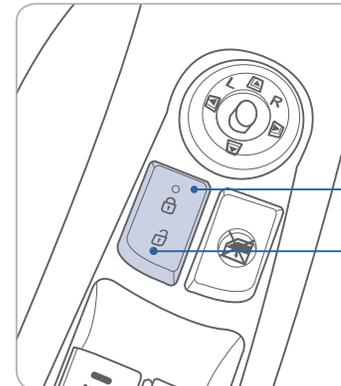


All doors will lock.

All doors will unlock.



## FEATURES AND CONTROLS

### HEADLIGHTS AND FOG LIGHTS

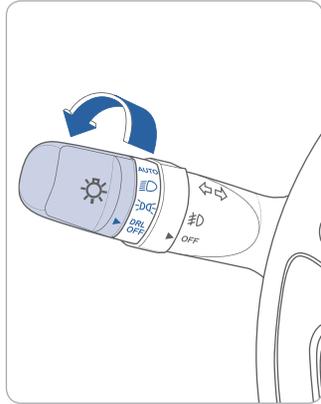


- AUTO** Auto light position
- Headlight position
- Parking light position
- DRL OFF** OFF position (DRL OFF position)




#### Escort Function

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlight off. See Owner's Manual for more detail.


#### Turn signals and lane change signals

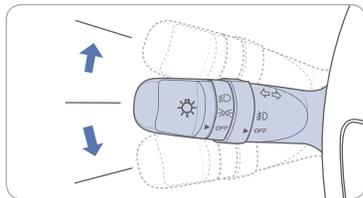


#### Flashing headlights

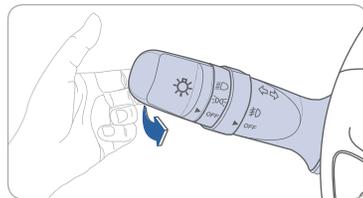

#### High beam

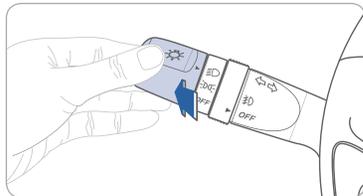


#### Fog light

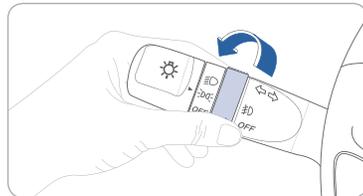

### WIPER AND WASHER


#### Front Wiper and Washer

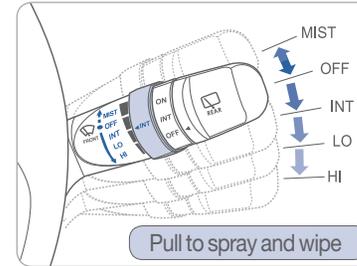

- MIST** - Single wipe
- OFF** - Off
- INT** - Intermittent wipe
- LO** - Normal wiper speed
- HI** - Fast wiper speed




#### Front intermittent wipe time adjustment

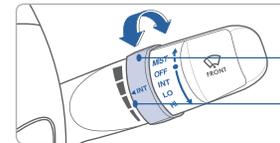

- Fast wiper speed
- Slow wiper speed

#### Rear Wiper and Washer


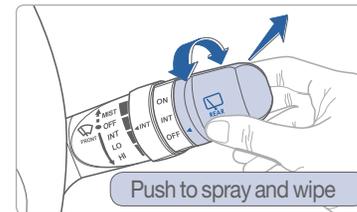


- ON** - Normal wiper operation
- INT** - Intermittent wiper operation
- OFF** - Wiper off

## FEATURES AND CONTROLS


### SUNROOF

#### Sliding the sunroof

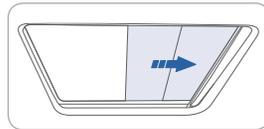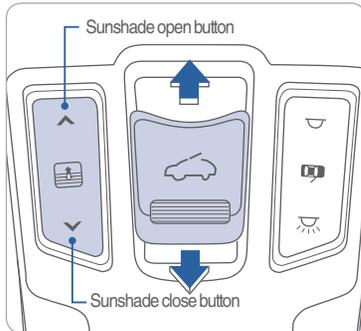

#### To Open

Press switch rearward.  
Press switch rearward past the detent to open completely.

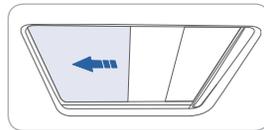


#### To Close

Press switch forward past the detent to close completely.

#### NOTE

To slide the sunshade, press open or close button.

#### Tilting the sunroof

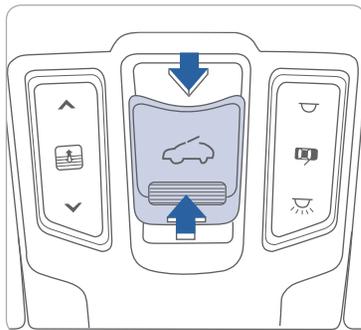


#### To Tilt

Press the switch up.

#### To close


Push the switch forward or pull the switch down.

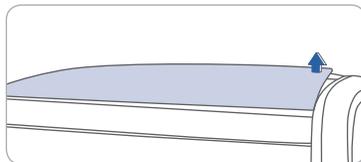

### INTERIOR LIGHTS

#### Map lamp

##### Non sunroof

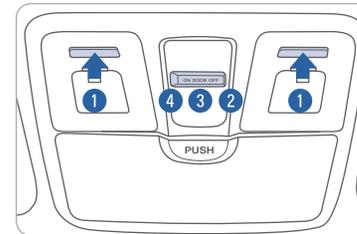

Push the lens ① to turn the map lamp on or off.



The lights stay off at all times, except when individually turned on.




Map lamp and room lamp will turn on when any door is open except trunk.




Map lamp and room lamp will turn on.

##### With sunroof

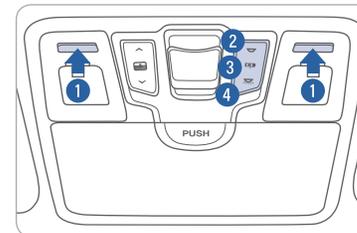

#### Room lamp

##### Non sunroof

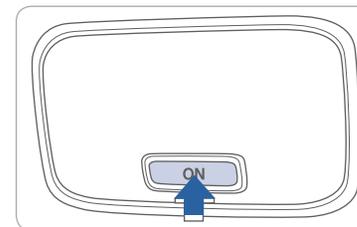

#### Non sunroof:


To turn the room lamp ON or OFF, push the switch.

#### With sunroof:


Press the switch  to turn on the room lamp.

Press the switch  to turn off the room lamp.

##### With sunroof

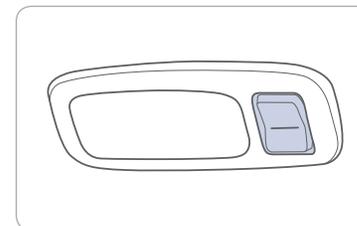


## FEATURES AND CONTROLS

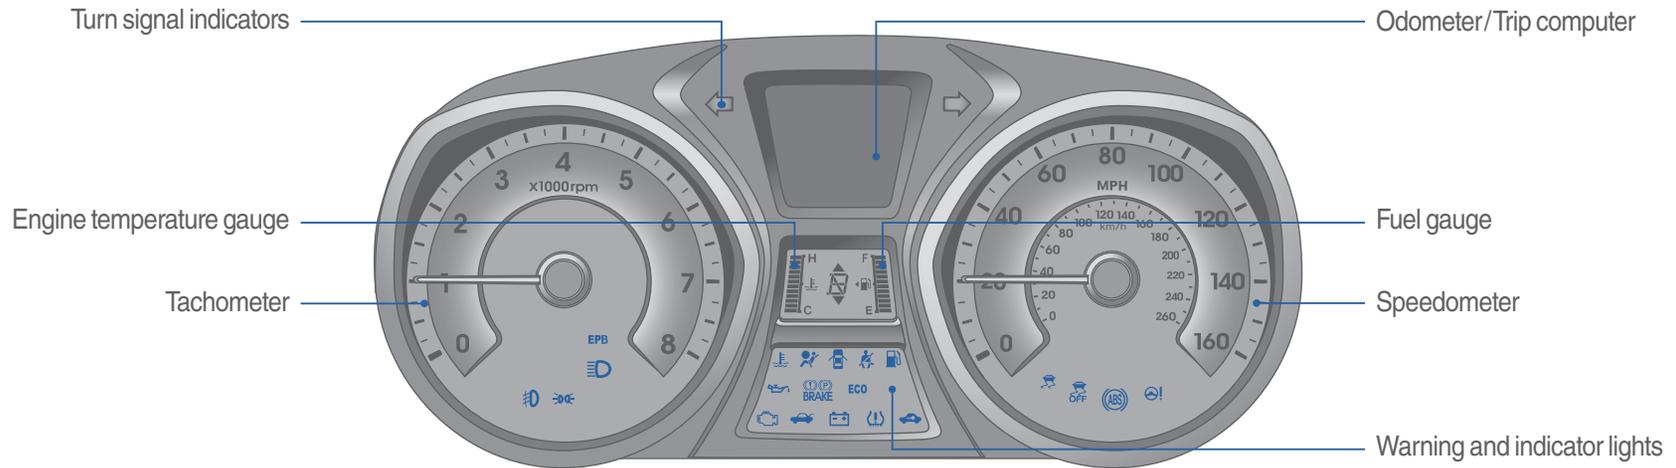


### WARNINGS AND INDICATORS

Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low Tire Pressure Indicator / TPMS (Tire Pressure Monitoring System) malfunction indicator	
High beam indicator	Engine oil pressure warning light	Charging system warning light
EPS Electric Power Steering system warning light	Door open warning light	Turn signal indicator
Immobilizer indicator	Automatic transmission shift indicator	Manual transmission shift indicator
Trunk open warning light	Low fuel level warning light	ESC(Electronic Stability Control) indicator
ESC(Electronic Stability Control) OFF indicator	Malfunction indicator light	Front fog light indicator
ECO ECO indicator	Light on indicator	Engine coolant temperature warning light



### INSTRUMENT PANEL ILLUMINATION

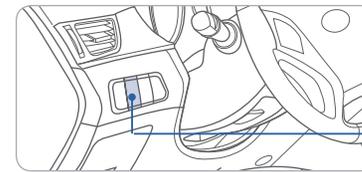

 
Push the control switch up or down to adjust the brightness



### TRIP COMPUTER

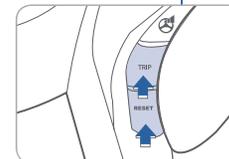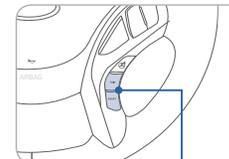


Press the TRIP button for less than 1 second to select function as follows:

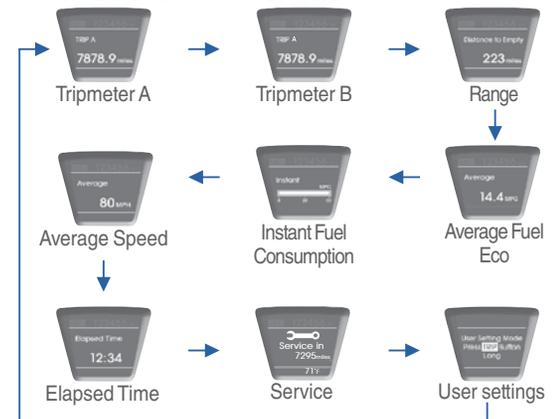

## FEATURES AND CONTROLS

### MANUAL CLIMATE CONTROL

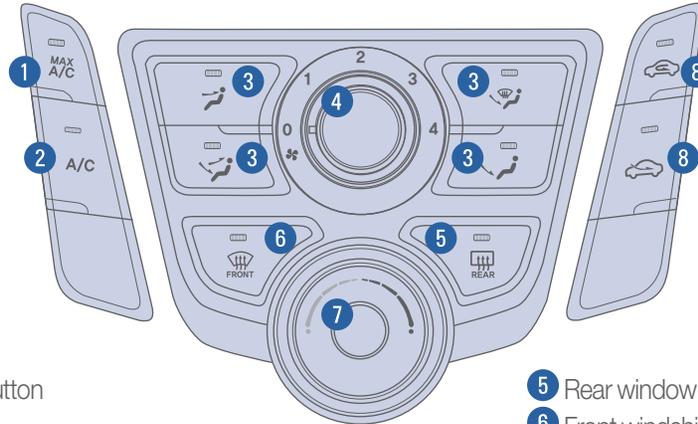

- 1 MAX A/C (Max airconditioning) button
- 2 A/C (Air conditioning) button
- 3 Mode selection buttons
- 4 Fan speed control knob

- 5 Rear window defroster button
- 6 Front windshield defrost button
- 7 Temperature control knob
- 8 Air intake control button

### DEFROSTING / DEFOGGING



1. Press the front windshield defrost control.



2. Set the temperature control to the desired setting.




3. Set the fan speed to the highest setting.

#### NOTE

To reduce tendency of the glass fogging and also improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner.

### AIR INTAKE CONTROL

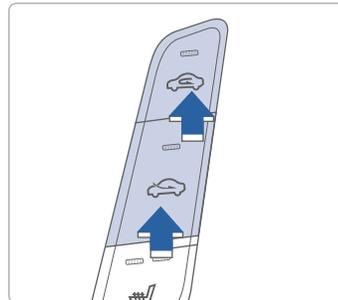


Outside (fresh) air position



Recirculated air position




### MODE SELECTION

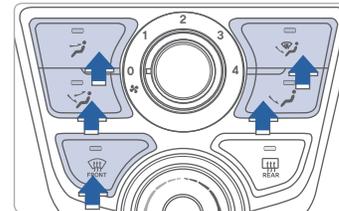

Changing the direction of the air flow as follow.

- Face-Level
- Bi-Level
- Floor-Level
- Floor/Defrost-Level
- Defrost-Level

### REAR WINDOW DEFROSTER

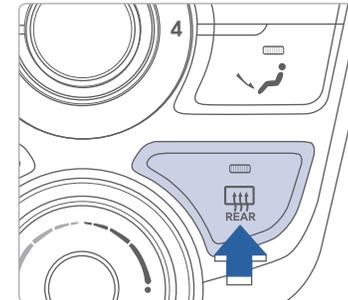


Press to activate/ deactivate the rear window defroster.

## FEATURES AND CONTROLS

### AUTOMATIC CLIMATE CONTROL

- Air conditioning button ①
- Driver's temperature control button ②
- LCD display ③
- Mode selection button ④
- Air intake control button ⑤
- Front windshield defrost button ⑥

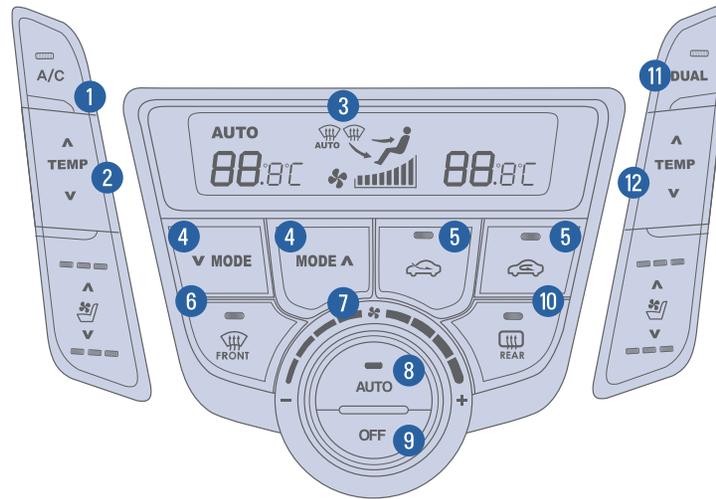

- Fan speed control knob ⑦
- AUTO (automatic control) button ⑧
- OFF button ⑨
- Rear window defrost button ⑩
- Dual temperature control selection button ⑪
- Passenger's temperature control button ⑫



### AUTOMATIC HEATING AND COOLING



1. Press the AUTO button.



2. Set the temperature control to the desired setting.


The modes, fan speeds, air intake and air-conditioning will be controlled automatically according to the temperature setting.

### SYSTEM OFF MODE

Pressing the OFF button will place the system in the off mode.


- Front blower will turn off.
- Outside (fresh) air position selected.
- Vented air at last set temperature.

### AIR INTAKE CONTROL

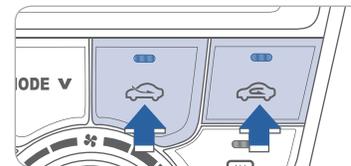

- Recirculated air position
- Outside (fresh) air position

### DUAL BUTTON

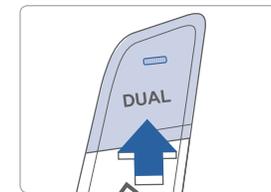


Press the DUAL button to operate the driver and passenger side temperature individually.

### REAR WINDOW DEFROSTER



Press to activate/deactivate the rear defroster.

### MODE SELECTION

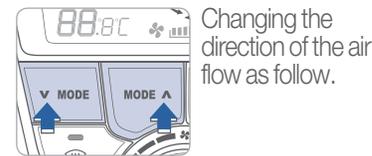

Changing the direction of the air flow as follow.

- Bi-Level
- Face Level
- Floor & Defrost
- Floor Level


### DEFROSTING / DEFOGGING



 1. Press the front windshield defrost control.



2. Set the temperature control to the desired setting.




3. Set the fan speed to the highest setting.



## STEERING WHEEL CONTROLS

### Cruise control system

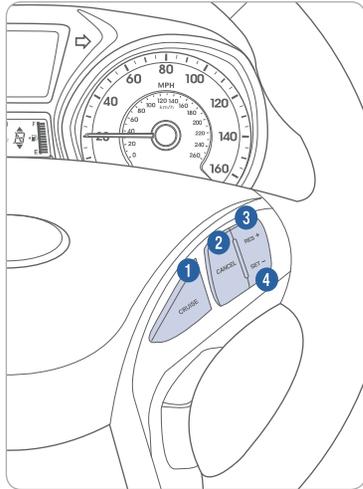

**CRUISE** Cruise indicator



**SET** Cruise set indicator

#### To set a cruising speed

1. Press CRUISE button **1** and the CRUISE indicator will illuminate in the instrument cluster.  
Accelerate to desired cruising speed (above 20 mph)
2. Press SET - button **4** and remove your foot from the accelerator pedal.


#### To Accelerate or Decelerate

Press RES + button **3** up to increase set cruising speed.  
Press SET - button **4** down to decrease set cruising speed.

#### To Cancel Cruising Speed

Press CANCEL button **2**, depress brake pedal, or press CRUISE button **1**.


### Audio control

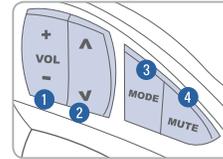

- 1 VOLUME**
- 2 SEEK/PRESET**  
Change station
- 3 MODE**  
Change the audio source
- 4 MUTE**




### Bluetooth control

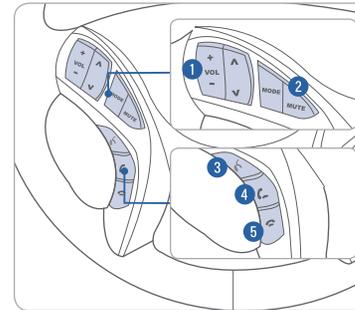

- 1 VOLUME**  
Raises or lowers speaker volume.
- 2 MUTE**  
Mute the microphone during a call.
- 3 TALK**  
Activates voice recognition.
- 4 CALL**  
Answer, places, and transfers calls.
- 5 END**  
Ends calls or cancels functions.




### Driver Selectable Steering Mode

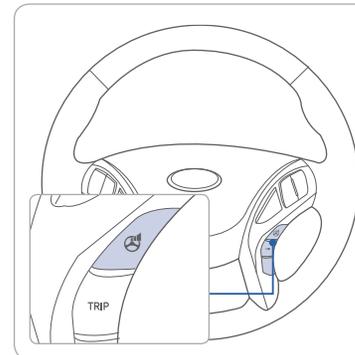

The Driver Selectable Steering Mode controls steering effort as driver's preference or road condition.

 Pushing the button once tells you what the current mode is. Pressing the button again will scroll through the different modes.






## MULTIMEDIA

### BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

### Steering wheel Bluetooth control

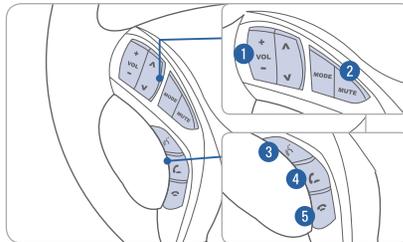

- 1 VOLUME**  
Raises or lowers speaker volume.
- 2 MUTE**  
Mute the microphone during a call.
- 3 TALK**  
Activates voice recognition.
- 4 CALL**  
Answer, places, and transfers calls.
- 5 END**  
Ends calls or cancels functions.

Phone compatibility website: [www.hyundaiusa.com/bluetooth](http://www.hyundaiusa.com/bluetooth)

### VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing a tunnel or when driving on rugged and uneven roads.

For complete list of commands, refer to your Owner's Manual or Navigation System Manuals (if equipped).


## BLUETOOTH PHONE PAIRING

Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.




Vehicle must be parked to complete pairing process.

### Standard Audio

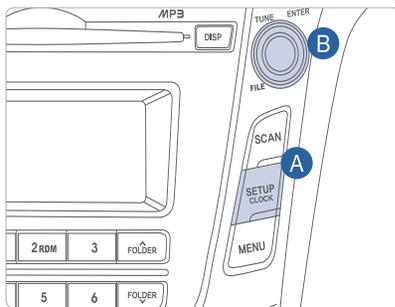


1. Press the SETUP **A** button.
2. Select "Phone" by turning and pressing the TUNE **B** knob.
3. Select "Phone Pair" by turning and pressing the TUNE **B** knob.
4. Enable Bluetooth on your phone.
5. Select "Elantra GT" from the Bluetooth® device list on your mobile phone.  
Input passkey displayed on the screen when applicable.
6. After pairing is completed, transfer of the contact list to the audio system will begin (if your phone is supported).
7. If your phone prompts a phonebook access request, it is advisable to check the box "Always allow" or "Don't ask again".

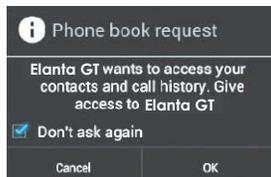


Please visit [www.hyundaiusa.com/Bluetooth](http://www.hyundaiusa.com/Bluetooth) for a list of compatible phones tested to work with Hyundai's Bluetooth® system.

## Phone setup (pairing phone) with Navigation


1. Press the call button **1**.

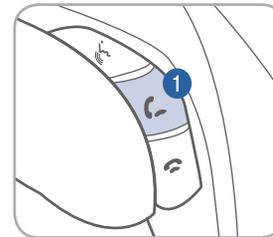


2. Press "YES" on the PHONE screen. Then press "Connections".

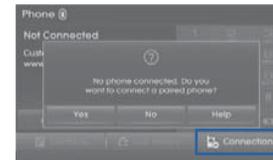

3. Press the **2** "Add New" to pair a new mobile phone.

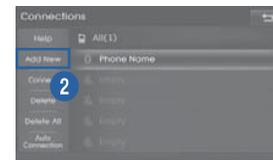

4. Enable Bluetooth on your phone. Input the passkey displayed on the screen when applicable. (The initial passkey is 0000.)

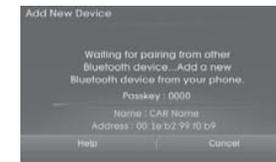

5. If your phone prompts a phonebook access request, it is advisable to check the box "Always allow" or "Don't ask again".




### NOTE

Vehicle must be in Park to complete pairing process.



## MULTIMEDIA

### BLUE LINK TELEMATICS SYSTEM

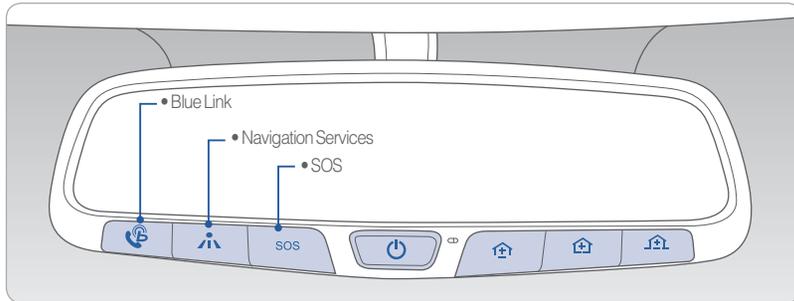

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the button for access to the voice-response menu of services.

- You can say:

For Audio equipped	For Navigation equipped
<ul style="list-style-type: none"> <li>New Destination</li> <li>Service Link</li> <li>Roadside Assistance</li> <li>Valet Alert</li> <li>Help</li> <li>Cancel</li> </ul>	<ul style="list-style-type: none"> <li>Service Link</li> <li>Roadside Assistance</li> <li>Blue Link Account Services</li> <li>Help</li> <li>Cancel</li> </ul>

Press the button for Destination Search Powered by Google™.

- For audio equipped vehicles, you will receive turn-by-turn directions once you search for your destination. To hear a list of commands, say, "Help". For navigation equipped vehicles, state your desired destination after the prompt and select the POI from the touchscreen display to navigate.

Press the **SOS** button for SOS Emergency Assistance.

Refer to your Blue Link User's Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google™ is a registered trademark of Google, Inc.

### Remote Start

### Remote Start



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android® — Google Play



Scan to see list of compatible devices and to download the app.

Remote Start enables you to remotely start your vehicle from virtually anywhere. For navigation vehicles, you can also enable climate control remotely and turn on the rear-window defroster, ensuring a warm or cool car is ready to go when you are.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to [www.MyHyundai.com](http://www.MyHyundai.com).

### Remember:

- Remote Start with Climate Control will automatically shut off after 10 minutes or after selected engine timer runs out in navigation vehicles.
- While this feature is active, the parking lights will blink until vehicle is turned off or when vehicle is in operation.
- To continue operation of the vehicle, the proximity key must be inside the vehicle with the driver prior to pressing the brake and being able to move the gearshift from the P (Park) position.

**Preconditions:**

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security/panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

**Remote Start will terminate:**

- After 10 minutes or after selected engine timer runs out in navigation vehicles
- Brake is pressed without proximity key inside vehicle
- Alarm is triggered without proximity key inside vehicle
- Door/trunk is opened from inside the vehicle


Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.

**WARNING!**  
Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

**CAUTION!**  
If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

**STANDARD AUDIO**

**Audio mode**

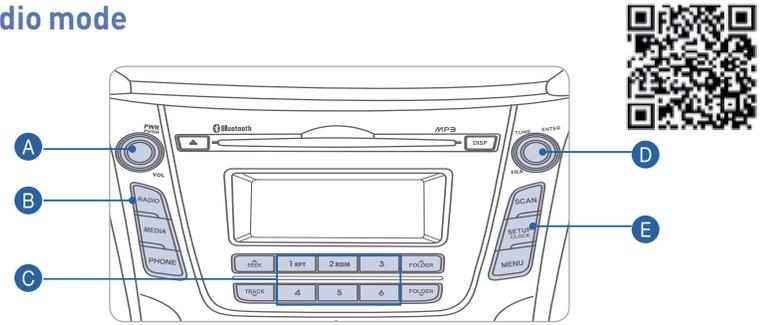

Press **POWER** button **A** to turn radio on.

- **TUNING / LISTENING TO CHANNELS**
  1. Press the Radio **B** button.
  2. Turn the TUNE/ENTER **D** knob to select the desired channel and press the knob.

**NOTE**

A clear view of the southern sky is recommended to ensure XM<sup>®</sup> radio reception.

- **SETTING PRESET MEMORY BUTTONS (FM/AM/XM<sup>®</sup>)**  
Press and hold any preset button (1-6) **C** until audible beep is heard to store current channel.
- **ADJUSTING THE SOUND CONTROL**
  1. Press the SETUP/CLOCK **E** button.
  2. Select "Sound Settings" by turning and pressing the TUNE/ENTER **D** knob.
  3. Select "Bass", "Middle", "Treble", "Fader", or "Balance" by turning and pressing the TUNE/ENTER **D** knob.
  4. Adjust the sound by turning and pressing the TUNE/ENTER **D** knob.

**Blue Link Telematics System**

Your audio display will change during Blue Link system use. Please refer to the Blue Link User's Manual for detailed information on system use.

Please refer to your Owner's Manual for more detailed information on how to use your audio system.


Complimentary XM<sup>®</sup> subscription ends three months following the vehicle date of sale. Please contact XM<sup>®</sup> Radio at 1-800-XM-RADIO (1-800-967-2346) to renew your XM<sup>®</sup> subscription.



## MULTIMEDIA

### NAVIGATION

#### Audio mode

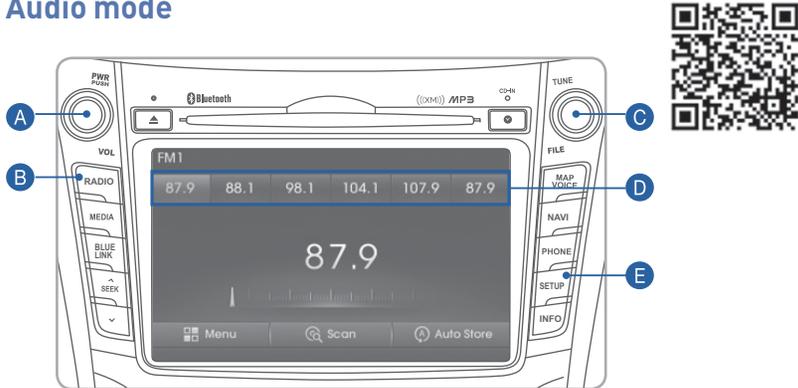

Press POWER button **A** to turn radio on.

#### TUNING/LISTENING TO CHANNELS

1. Press RADIO button **B**.
2. Turn the TUNE/FILE **C** Knob to desired channel.
3. If the AM or FM has been selected, press the knob.

#### NOTE


A clear view of the southern sky is recommended to ensure XM<sup>®</sup> radio reception.

#### SETTING PRESET MEMORY BUTTONS (FM/AM/XM<sup>®</sup>)

Press and hold any preset button (1-6) **D** On the screen until audible beep is heard to store current channel.


#### ADJUSTING THE SOUND CONTROL

1. Press SETUP button **E**.
2. Touch Sound button on screen.

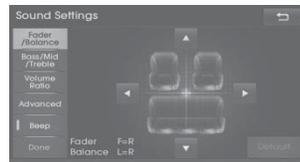


#### Blue Link Telematics System

Your audio display will change during Blue Link system use. Please refer to the Blue Link User's Manual for detailed information on system use.

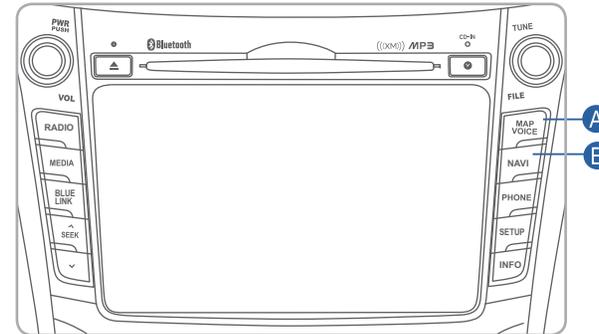

#### Map position

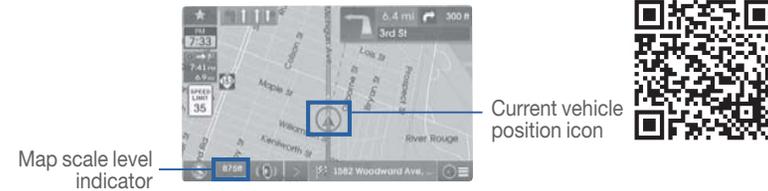


Press MAP button **A** to display map position.

Refer to Digital Navigation System User's Manual for more details.



## MULTIMEDIA

### Destination menu

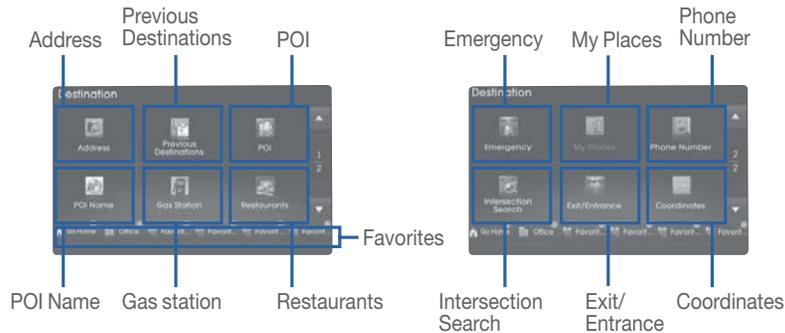


Press NAVI button **B** to display destination menu.

- Previous Destinations: Search and select previous destinations.
- Address: Search destinations by selecting specific states/cities/roads.
- POI name: Search for POIs by name.
- Favorites: Store favorite places.
- POI (Point of Interest): Search for neighboring POIs near current position, scroll position, destination and city center.
- Gas Station: Search for gas station.
- Restaurants: Search for restaurants.
- Emergency: Search for emergency related facilities.
- My Places: List of saved My Places.
- Intersection Search: Search destinations by selecting street intersections.
- Phone Number: Search destinations by entering POI phone number
- Exit/Entrance: Search destinations by searching for expressway exits and entrances
- Coordinates: Search destinations by entering the latitude and longitude coordinates.



## FEATURES AND CONTROLS

### AUX, USB AND iPod® PORT

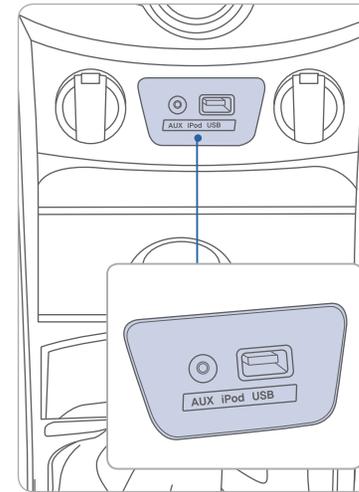


Use the jack to connect an external audio device and listen to it through the audio system speakers in your vehicle.



**NOTE:** To operate your iPod® through the vehicle's audio system, connect your Apple supplied USB cable to the USB port. iPod® is a trademark of Apple Inc.

### CLOCK ADJUSTMENT

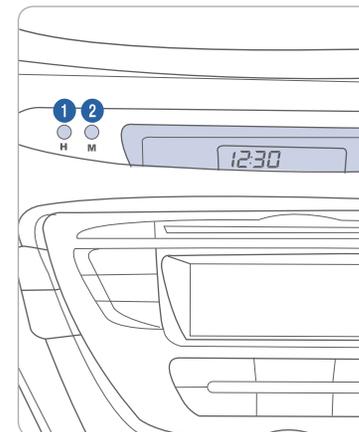

#### Hour 1

Pressing the H button will advance the time displayed by one hour.



#### Minute 2

Pressing the M button will advance the time displayed by one minute. Press the H and M buttons at the same time for more than 5 seconds to toggle between 12- and 24-hour formats.


#### With Navigation System

The clock automatically sets itself to the correct time.

### CHILD-PROTECTOR REAR DOOR LOCK

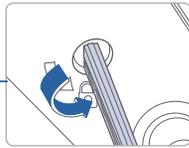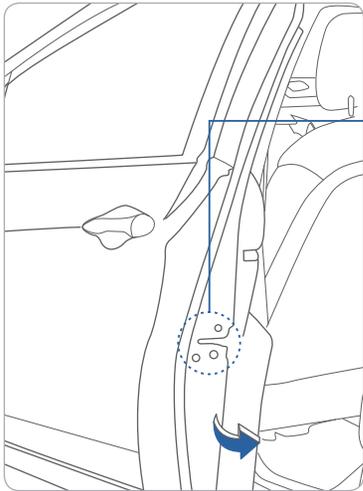



**Lock (⏏)**  
Insert a key into the hole and turn it to the lock (⏏) position.

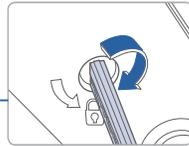

**Unlock (→)**  
Allows opening the rear door handle from inside and outside the vehicle.



### SEAT WARMER AND VENTILATION SEATS

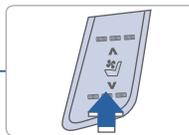
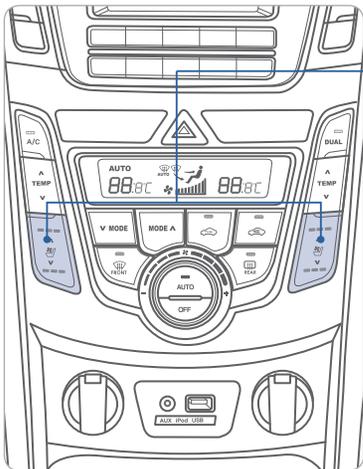


Each time you push the button, the setting is changed as follows:


OFF → HIGH → MIDDLE → LOW



### AUTOMATIC TRANSMISSION

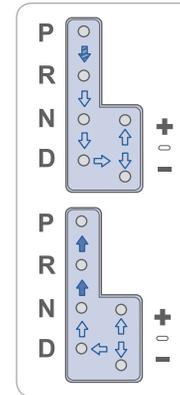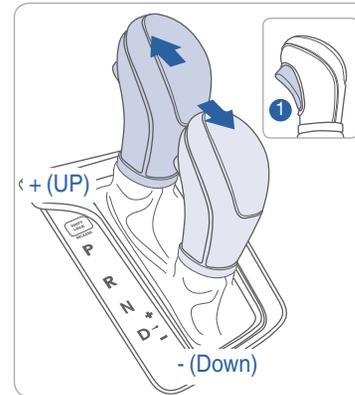




- (↔) : Depress the brake pedal and the lock release button ❶ when shifting.
- (↔) : The lock release button ❶ must be pressed while moving the shift lever.
- (↔) : The shift lever can be shifted without pressing the lock release button ❶.

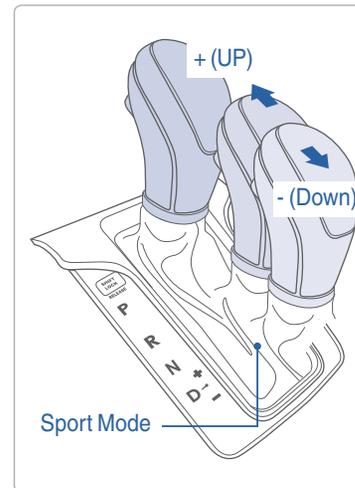

#### Sport mode

Move the shift lever from D (Drive) to the right gate to select. Move the shift lever forward (+) to upshift or rearward (-) to downshift.

## MANUAL TRANSMISSION

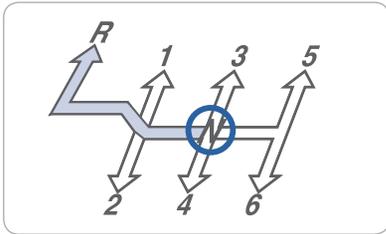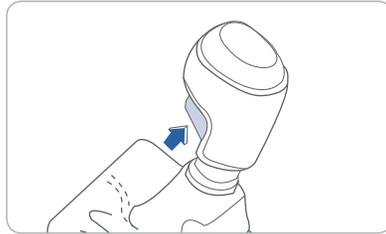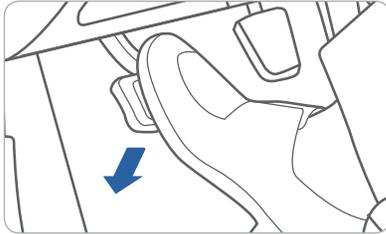

### Shifting into Reverse

1. Depress the clutch pedal fully.
2. Ensure shifter is in Neutral.
3. Press the reverse lock-out button and shift left and forward to Reverse.
4. Release Clutch slowly for smooth acceleration.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low Tire Pressure Indicator /  
TPMS Malfunction Indicator

### LOW TIRE PRESSURE INDICATOR


Illuminates if one or more of your tires is significantly under-inflated.

### TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS system. Have the system checked by an authorized Hyundai dealer.

**NOTE:** Tire pressure may vary in colder temperatures causing the low tire pressure light (⚠) to illuminate.

## ELECTRONIC STABILITY CONTROL (ESC)

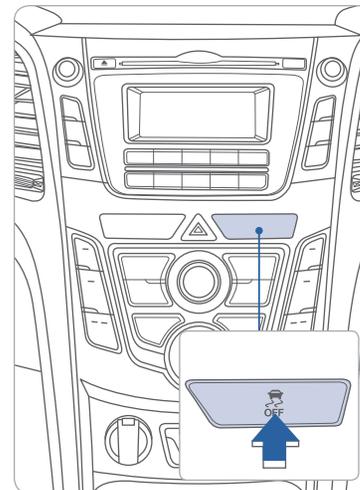

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.


**To turn off Engine Control**  
press the ESC OFF button shortly.

**To turn off Engine and Traction Control**  
press the ESC OFF button for more than 3 seconds.



FEATURES AND CONTROLS

ACTIVE ECO SYSTEM

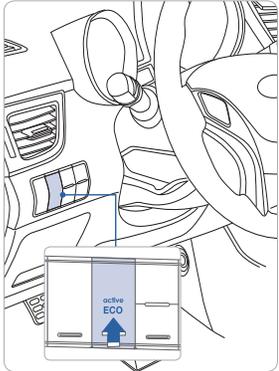

Active ECO system (automatic transmission)

Active ECO system helps to improve fuel efficiency. When the Active ECO system is activated, the vehicle acceleration, gear shift points and air conditioning performance will be reduced to conserve the fuel consumption.

Press the Active ECO button to activate. The LED on the button and the ECO indicator in the instrument cluster will illuminate.

ECO Shift (Manual Transmission)

▲ or ▼ symbol is displayed along with the current gear position, which informs you to up shift or down shift to the next recommended gear position for fuel efficiency.




To improve your fuel efficiency:

- Drive smoothly and accelerate at a moderate rate.
- Avoid heavy accelerations.
- Maintain steady cruising speed.
- Adjust the vehicle speed to the traffic condition and avoid speed changes.
- Avoid unnecessary braking.
- Keep the tires inflated to the recommended tire pressure.
- Don't idle the engine longer than necessary.



REARVIEW CAMERA

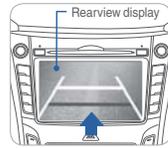

When you move the shift lever to the R(Reverse) the rearview camera cover will open and then the rearview camera will activate.

The rearview camera cover will close after 10 seconds.



NOTICE

Closing the rearview camera cover will make a slight sound, but this condition is normal.

Key Websites

Hyundai website - [www.hyundai.com](http://www.hyundai.com)

Hyundai owner website - [www.myhyundai.com](http://www.myhyundai.com)

Bluetooth phone compatibility - [www.hyundaiusa.com/bluetooth](http://www.hyundaiusa.com/bluetooth)

Blue Link - [www.hyundaiusa.com/technology/bluelink](http://www.hyundaiusa.com/technology/bluelink)

ELANTRA GT CUSTOMER DELIVERY CHECKLIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- CONFIRM "GOOD BATTERY" USING GR8 AND STAPLE TEST TICKET HERE
- SET TIRE PRESSURE LF \_\_\_ RF \_\_\_ RR \_\_\_ LR \_\_\_
- VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE

Sales Consultant	Date	Sales Manager	Date
Customer			Date
Email	@		