

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

☐ HOW TO DEFROST - page 18

- 1 Press the front defrost button
- 2 Set to the warmest temperature setting
- 3 Set to the highest fan speed


☐ TIRE PRESSURE MONITORING SYSTEM (TPMS) - page 42



LOW TIRE PRESSURE INDICATOR / TPMS MALFUNCTION INDICATOR


NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure indicator  to illuminate. Inflate tires according to the Tire Pressure Label located on the driver's side door pillar.

☐ WINDSHIELD WIPER / WASHER - page 13

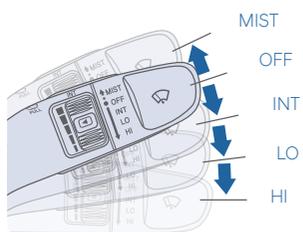

- To activate wipers, move the speed control switch down to one of the three positions (INT, LO, HI)
- To adjust "INT" speed, move the speed control switch.
- To spray the washer fluid, pull the lever towards you
- Push the lever up for a single wiper pass

☐ UNLOCKING VEHICLE - page 02

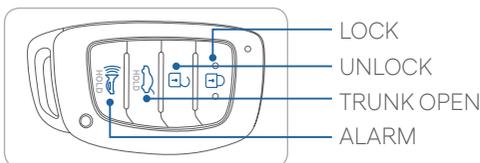

☐ BLUE LINK - pages 25

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link Users Manual & tear out Voice Commands / Quick Tip Card
- Encourage customer to download the MyHyundai with Blue Link app

MAINTENANCE

Scheduled Maintenance	2.0L	1.4T/1.6T
Engine Oil and Filter*	Replace 7,500 or 12 mos.	Replace 6,000 or 12 mos.
Fuel Additive*	Add 7,500 or 12 mos.	Add 6,000 or 12 mos.
Tire Rotation	Perform 7,500	Perform 6,000
Air Cleaner Filter	Inspect 7,500 Replace 22,500	Inspect 6,000 Replace 18,000
Vacuum Hose	Inspect 7,500	Inspect 6,000
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace 7,500	Replace 6,000
Air Conditioning Refrigerant	Inspect 7,500	Inspect 6,000
Brake Hoses & Lines	Inspect 7,500	Inspect 6,000
Drive Shafts & Boots	Inspect 7,500	Inspect 6,000
Exhaust Pipe & Muffler	Inspect 7,500	Inspect 6,000
Disc Brake Pads, Calipers	Inspect 7,500	Inspect 6,000
Rear Brake Drum / Linings	Inspect 7,500	Inspect 6,000
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect 7,500	Inspect 6,000
Suspension Mounting Bolts	Inspect 7,500	Inspect 6,000
Brake / Clutch Fluid	Inspect 15,000	Inspect 12,000
Crankcase Ventilation Hose	Inspect 15,000	Inspect 12,000
Fuel Filter	Inspect 15,000	Inspect 12,000
Fuel Lines, Fuel Hoses and Connections	Inspect 30,000	Inspect 24,000
Fuel Tank Air Filter	Inspect 15,000	Inspect 12,000
Parking Brake	Inspect 15,000	Inspect 12,000
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect 15,000	Inspect 12,000
Spark Plugs	Replace 97,500	Replace 42,000
Drive Belt (Alt, A / C)	1st Inspect 60,000 or 72 mos. Add'l Inspect 15,000 or 24 mos.	1st Inspect 60,000 or 72 mos. Add'l Inspect 12,000 or 24 mos.
Coolant	1st Replace 120,000 or 120 mos. Add'l Replace 30,000 or 24 mos.	1st Replace 120,000 or 120 mos. Add'l Replace 30,000 or 24 mos.
Manual Transmission Fluid	Inspect 30,000	Inspect 24,000
Automatic Transmission Fluid	No check, No service required	No check, No service required
Dual Clutch Transmission Fluid	-	Inspect 40,000
Intercooler, In / Out Hose, Air Intake Hose (1.4T/1.6T)	-	Inspect 6,000

*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.
*1 If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Hyundai dealer along with information on how to use them. Do not mix other additives.
*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

HYUNDAI ELANTRA

Quick Reference Guide



Roadside Assistance: 1-800-243-7766

Consumer Affairs: 1-800-633-5151

Sirius XM® Radio: 1-800-967-2346

Blue Link: 1-855-2BLUELINK
(1-855-225-8354)

HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.


You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 20850
Fountain Valley, CA 92728-0850
800-633-5151 consumeraffairs@hmasusa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.



Driver Position
Memory System
Page06

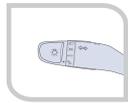

Headlights
Page12



Instrument
Cluster
Page14




Cruise Control/
Smart Cruise Control
Page38



Engine Start/
Stop Button
Page03



Navigation
Page30

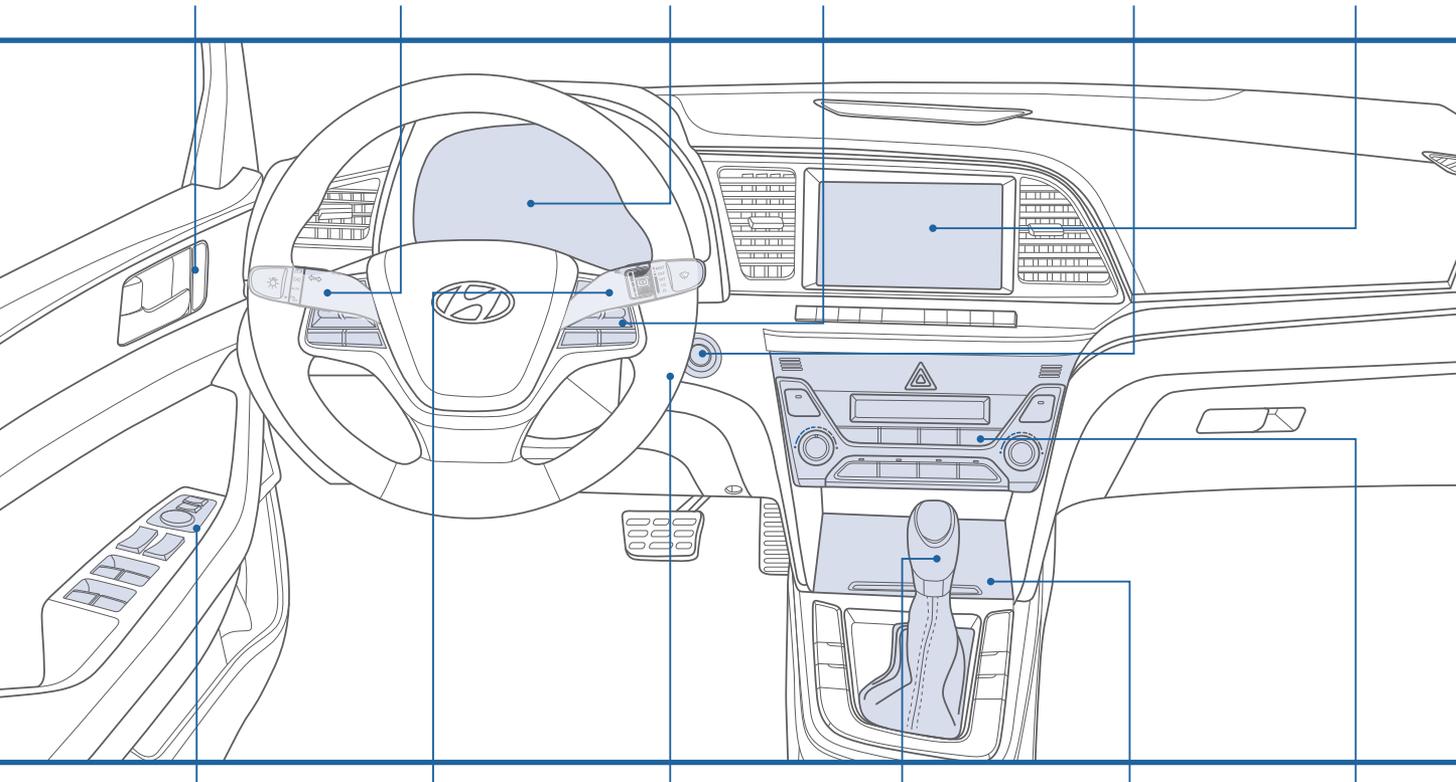

Driver's Main
Controls
Page07



Wipers and
Washer
Page13



Steering Wheel
Adjustment
Page03



Transmission
Page39



AUX, USB
and iPod
Page31



Climate
Control
Page18



WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

FEATURES AND CONTROLS

Automatic Climate Control	20
Child - Protector Rear Door Lock	08
Cluster (LCD) Display Mode Control	16
Cluster (LCD) Display Modes	16
Driver's Main Controls	07
Engine Start / Stop Button	03
Fuel Filler Lid	08
Headlights	12
Homelink Wireless Control System	11
Instrument Cluster	14
Instrument Panel Illumination	17
Interior Lights	10
Manual Climate Control	18
Seat-Driver Position Memory System	06
Seat-Front Seat Adjustment	04
Seat-Headrest Adjustment	05
Seat-Rear Seat Folding	05
Seat-Seat Belt Adjustment	05
Seat-Seat Warmer	06
Smart Key	02
Smart Trunk	11
Steering Wheel Adjustment	03
Sunroof	10
Trunk Opening	09
Warning and Indicators	17
Wipers and Washer	13

MULTIMEDIA


AUX, USB and iPod Port	31
Android Auto	32
Apple CarPlay™	34
Blue Link Telematics System	25
Bluetooth Operational Tips	22
Bluetooth Phone Pairing	24
Clock Adjustment	07
Navigation	30
Radio	28
Steering Wheel Audio Control	22

DRIVING


Automatic and DCT Transmission	43
Autonomous Emergency Braking (AEB)	43
Blind Spot Detection (BSD) System	46
Cruise Control / Smart Cruise Control	38
Drive Mode Integrated Control System	43
Dual Clutch Transmission	40
Electronic Stability Control (ESC)	44
Lane Keeping Assist System (LKAS)	44
Rear View Camera	45
Manual Transmission	39
Tire Pressure Monitoring System (TPMS)	42

* Some vehicles may not be equipped with all the listed features.

SMART KEY

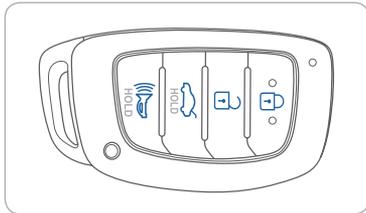


- Lock
- Unlock
- Trunk Open
- Panic

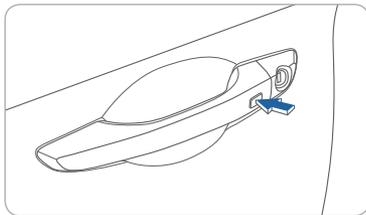


Driver's Door Lock / Unlock
Smart key must be within 28~40in. from the outside door handle.
Press: Once - Unlock driver door
Twice - Unlock all doors
Third - Lock all doors

NOTE:
To change the two press unlock setting, please refer to chapter 3 of your Owner's Manual.

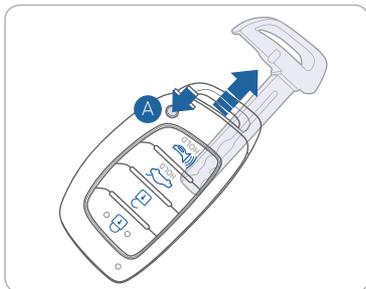

Removing the Mechanical Key
Press and hold the release button **A** to remove the mechanical key.

ENGINE START / STOP BUTTON

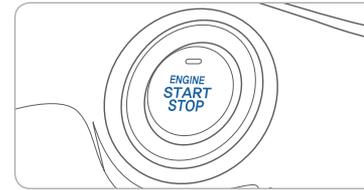

With the ignition OFF and foot OFF of the brake pedal, press the Engine Start / Stop button.

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine in any mode (including OFF), press the Engine Start / Stop button while pressing down on the brake pedal (and the clutch pedal for the manual transmission).

To shut the engine OFF, place the shift lever in P (Park) and press the Engine Start / Stop button.

To shut the engine OFF for manual transmission, place the shift lever in N (Neutral) and set parking brake, then press the Engine Start/Stop button.

Emergency Situations

Shut off engine while driving




Press the Engine Start / Stop button for over 2 seconds or 3 times consecutively within 3 seconds.

Restart engine while driving

Press the Engine Start / Stop button with the shift lever in N (Neutral).

For manual transmission, depress the clutch pedal with shift lever in N (Neutral), then press the Engine Start/Stop button.

STEERING WHEEL ADJUSTMENTS

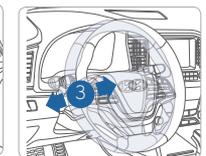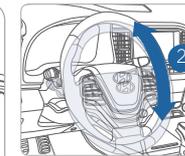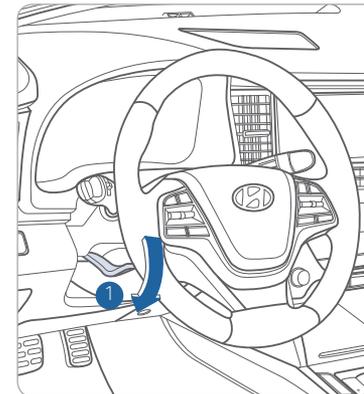

NOTE: Do not adjust while driving.

1. Pull the lever **1** down.
2. Set the angle **2** and **3** distance .
3. Pull the lever **1** up to lock position.


FRONT SEAT ADJUSTMENT (Manual)



Forward and Backward ①



Seat Height ②

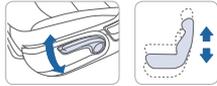

- Push down on the lever several times to lower the seat cushion.
- Pull up on the lever several times to raise it.


Seatback Angle ③



FRONT SEAT ADJUSTMENT (Power, for the Driver's Seat)



Forward and Backward ①

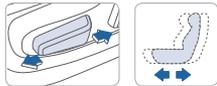


Seat Height




Seatback Angle ②



Lumbar Support ③

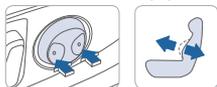


HEADREST ADJUSTMENT

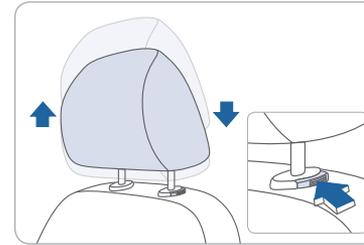


To Raise the Headrest:
Pull the headrest up.

To Lower the Headrest:
Press the lock button while
pressing down on the headrest.

SEAT BELT ADJUSTMENT (Front seat)


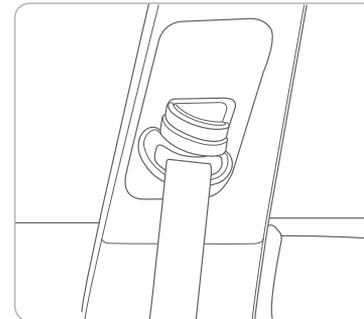


Pull up to raise.

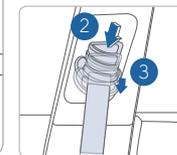


Press button and
push down to
lower.

REAR SEAT FOLDING

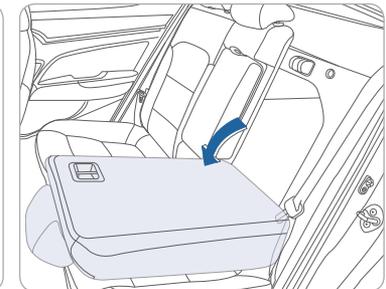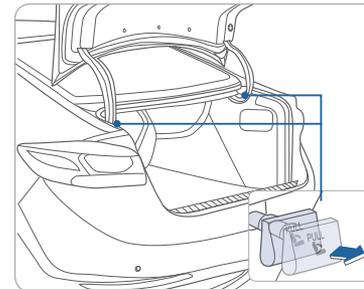

DRIVER POSITION MEMORY SYSTEM

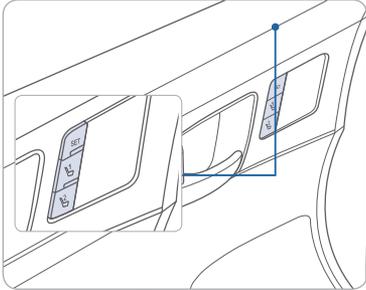

Storing


1. Adjust the driver's seat position, outside rearview mirror position and instrument panel illumination intensity.
2. Press the SET button. The system will beep once.
3. Press one of the memory buttons (1 or 2) within 5 seconds. The system will beep twice.

NOTE: Transmission must be in P (Park).

Recalling

Press the desired memory button (1 or 2). The system will beep once.


SEAT WARMER (Front seat)

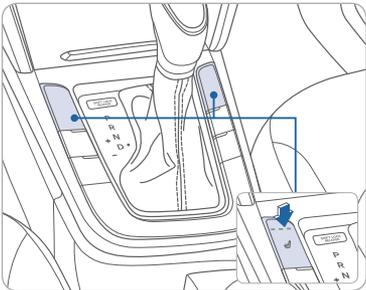

Each time you push the switch, the setting is changed as following:



DRIVER'S MAIN CONTROLS

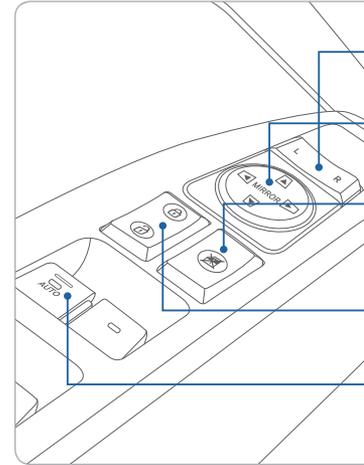

Side View Mirror

Press the lever towards L (Left) or R (Right) on the switch.

Adjust the mirror by using the mirror adjustment control switch.

Power Window Lock Button

Disables the power window switches on the passenger doors.


Door Lock

Locks / unlocks all doors.


Window Auto Down / Up (if equipped)

Press past detent to fully open / close the window.

CHILD-PROTECTOR REAR DOOR LOCK


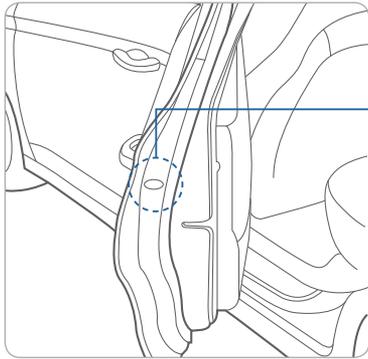


Lock 
Insert a screwdriver or key into the hole and turn it counter clockwise to the lock position.

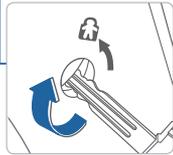



Unlock 
Insert a screwdriver into the hole and turn it clockwise to the unlock position.

FUEL FILLER LID

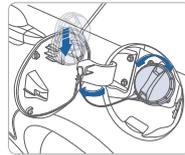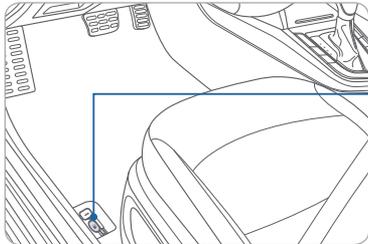

NOTE: To close, turn the fuel filler cap clockwise until one click is heard.

TRUNK OPENING

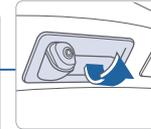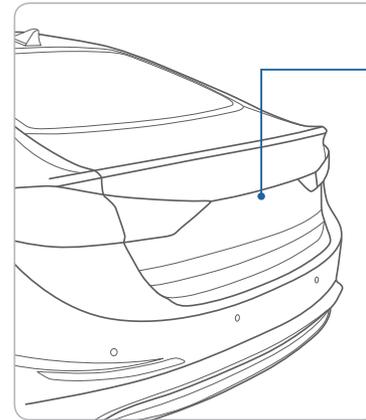


With Smart key
Press to open.
Smart key needs to be within the range.

NOTE:
If vehicle is unlocked, the trunk can be opened without the smart key.




Press and hold.

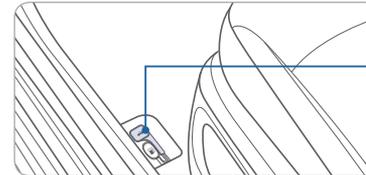

Pull the trunk release lever in the vehicle.

SMART TRUNK

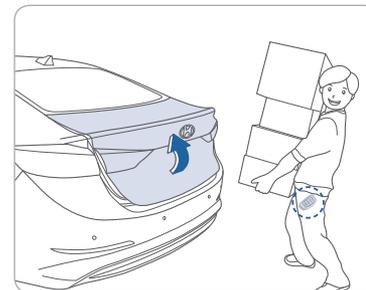

Smart Trunk

Trunk will open automatically when detecting smart key within the range (20-40 in) near the trunk for over 3 seconds.


To enable Smart Trunk function:
Vehicle must be in P (Park) to adjust the settings in the User Settings mode.

1. Select "Door / Trunk" in the User Settings in the instrument cluster.
2. Check "Smart Trunk".


NOTE:

Function is active after 15 seconds when all doors are closed and locked. The vehicle will also provide an audible and visual alarm while activating. Please refer to your Owner's Manual for further information.

SUNROOF

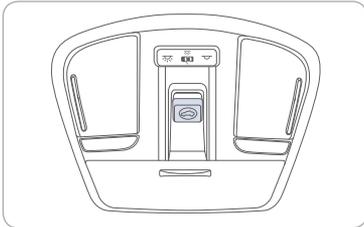


Sliding the Sunroof

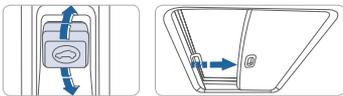


Press the sunroof control lever backward or forward to open or close the sunroof.
Press the sunroof control lever backward or forward to the second detent position to open or close the sunroof completely.

Tilting the Sunroof

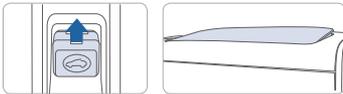


Push the sunroof control lever upward to tilt the sunroof.
Push the sunroof control lever upward once more to close the sunroof.

Sunshade

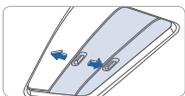

The sunshade will open with the sunroof when the glass panel opens.

INTERIOR LIGHTS

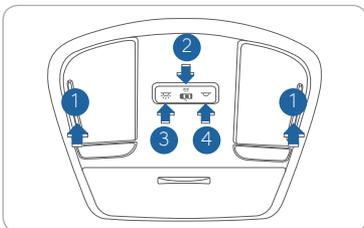

Front Map Lamp ①

Press the lens to turn on / off the map lamp.



Front Door Lamp () ②

Lights will turn on when any door is open.

Front Room Lamp () ③ ④

Press the switch to turn on/off all the interior room lamp.

HOMELINK WIRELESS CONTROL SYSTEM

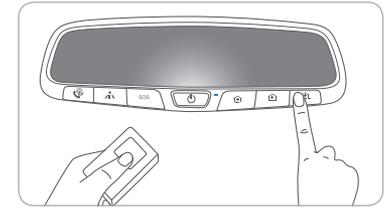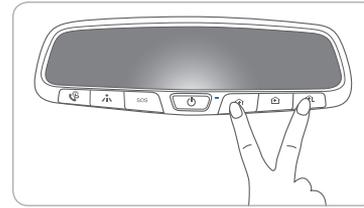


Standard Programming

To train most devices, follow these instructions:


1. For the first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 buttons, until the indicator light begins to flash (after 10 seconds). Release both buttons. Do not hold the buttons for over 20 seconds.
2. Position the end of your hand-held transmitter 1-3in. (2-8cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and the hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons, the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For more detailed information, please refer to Section 3 of your Owner's Manual, or visit www.homelink.com or call (800) 355-3515.

HEADLIGHTS

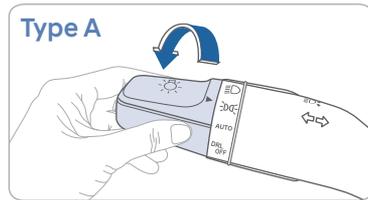

- ▶ | Headlight
- ▶ | Parking Light
- ▶ | **AUTO** Auto Light
- ▶ | **DRL OFF** All Lights Off

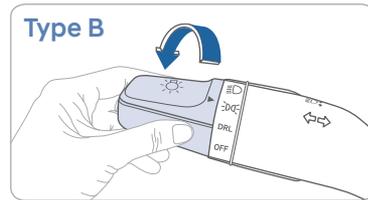


- ▶ | Headlight
- ▶ | Parking Light
- ▶ | **DRL** Daytime Running Lights
- ▶ | **OFF** All Lights Off


Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking up the vehicle. Press the remote lock button twice to turn off the headlights.


Turn Signals and Lane Change Signals

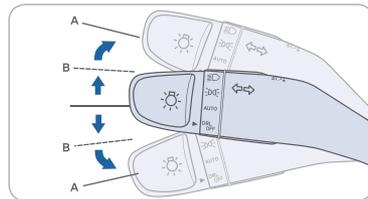


Flashing High Beam

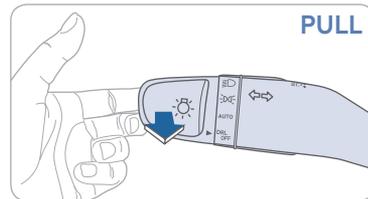

High Beam

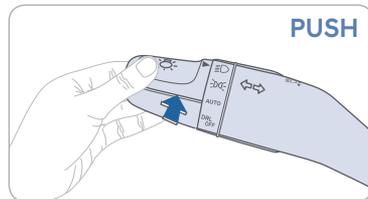

Smart High Beam

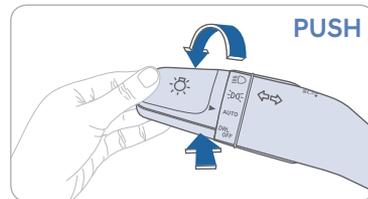


NOTE:

To turn off the high beam, pull the lever towards you.


Smart High Beam Function

1. Select the AUTO position on lever.
2. Push the lever forward to engage the Smart High beam.
3. Pull the lever towards you to disengage.

WIPERS AND WASHER

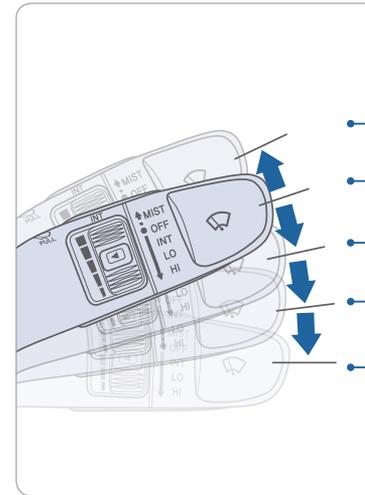


- MIST - Single wipe
- OFF
- INT - Intermittent wipe
- LO - Low wiper speed
- HI - High wiper speed

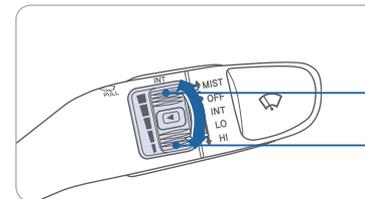

Intermittent Wipe Time Adjustment

Move the speed control switch

- Fastest wiper speed
- Slowest wiper speed

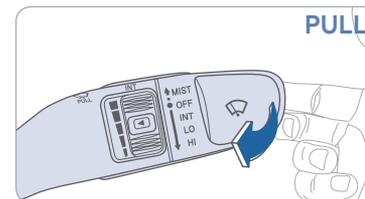


Windshield Washer

Pull the lever gently towards you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

INSTRUMENT CLUSTER

Conventional Cluster

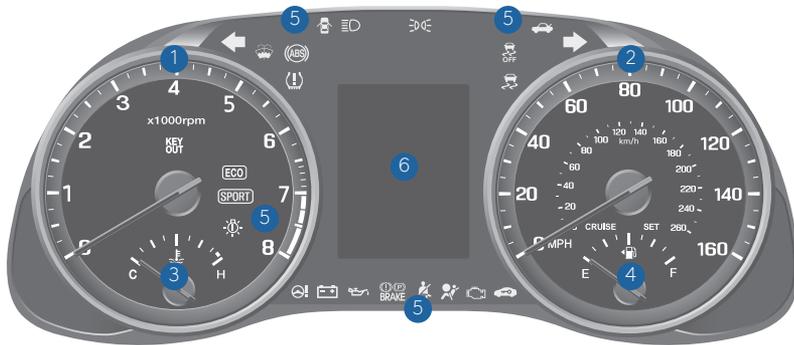

Supervision Cluster (Type B)



Supervision Cluster (Type A)



Supervision Cluster (Type C)



- 1 Tachometer
- 2 Speedometer
- 3 Engine Coolant Temperature Gauge
- 4 Fuel Gauge
- 5 Warning and Indicator Lights
- 6 LCD Display (including Trip Computer)

CLUSTER (LCD) DISPLAY MODES (for Supervision Clusters) —


Modes	Symbol	Description
Trip Computer		This mode displays driving information such as tripmeter, fuel economy, etc.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
SCC / LKAS (if equipped)		This mode displays the state of the Smart Cruise Control (SCC) and Lane Keeping Assist System (LKAS).
A / V (if equipped)		This mode displays the state of the A / V (Audio Visual) system.
Information	or or	This mode displays service interval and warning messages.
User Settings		Changes settings.

CLUSTER (LCD) DISPLAY MODE CONTROL (for Supervision Clusters)




- : MODE button for changing modes
- : MOVE switch for changing items
- : SELECT / RESET button for setting or resetting the selected item

Type A

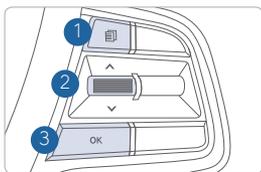


Type B

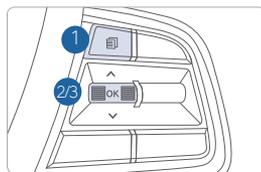


WARNINGS AND INDICATORS

Air Bag Warning Light	Seat Belt Warning Light	Parking Brake & Brake Fluid Warning Light
Anti-Lock Brake System (ABS) Warning Light	Electronic Brake Force Distribution (EBD) System Warning Light	
Electric Power Steering (EPS) Warning Light	Malfunction Indicator Lamp (MIL)	Icy road warning light
Engine Oil Pressure Warning Light	Low Fuel Level Warning Light	Charging System Warning Light
Autonomous Emergency Braking (AEB) Warning Light	Headlight Warning Light	Low Tire Pressure Warning Indicator/TPMS Malfunction Lamp
Master Warning Light	Door Ajar Warning Light	Adaptive Front Lighting System (AFLS) Warning Light/Dynamic Bending Light (DBL)
Electronic Stability Control (ESC) Indicator	Electronic Stability Control (ESC) OFF Indicator	Trunk Open Warning Light
Turn Signal Indicator	High Beam Indicator	Immobilizer Indicator
Smart High Beam Indicator	CRUISE Cruise Indicator	Light ON Indicator
SPORT Mode Indicator	ECO Mode Indicator	SET Cruise SET Indicator
Lane Keeping Assist System (LKAS) Indicator		


INSTRUMENT PANEL ILLUMINATION

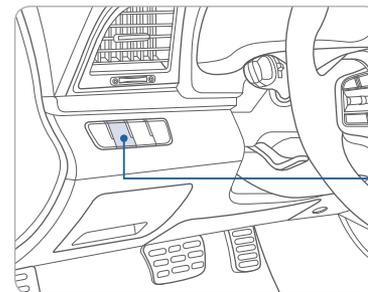

Press - or + to adjust the instrument cluster illumination brightness.

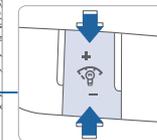

MANUAL CLIMATE CONTROL

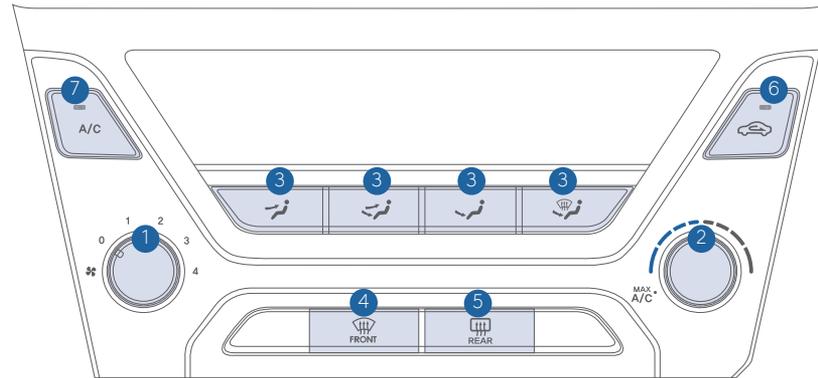

- ① Fan Speed Control Knob
- ② Temperature Control Knob
- ③ Mode Selection Buttons
- ④ Front Windshield Defroster Button
- ⑤ Rear Window Defroster Button
- ⑥ Air Intake Control Button
- ⑦ A / C (Air Conditioning) Button

DEFOGGING/ DEFROSTING



1. Press the defrost button.



3. Set the fan speed to the highest speed.



2. Select the warmest temperature.

AIR INTAKE CONTROL




Recirculated air position (LED on)



Outside (fresh) air position (LED off)


MODE SELECTION

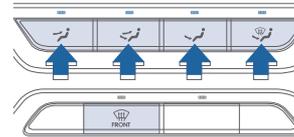

Changes the direction of the air flow as following:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor & Defrost-Level
-  Defrost-Level

REAR WINDOW DEFROSTER

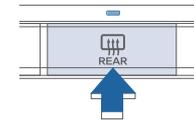


Press to activate / deactivate the rear defroster.

NOTE:

To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.


AUTOMATIC CLIMATE CONTROL

- 1 Driver's Temperature Control Knob
- 2 Passenger's Temperature Control Knob
- 3 AUTO (Automatic Control) Button
- 4 SYNC Button
- 5 OFF Button
- 6 Fan Speed Control Button

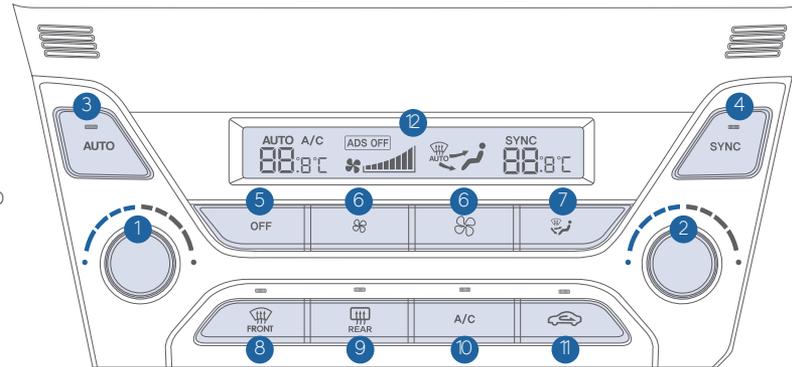

- 7 Mode Selection Button
- 8 Front Windshield Defrost Button
- 9 Rear Window Defrost Button
- 10 Air Conditioning Button
- 11 Air Intake Control Button
- 12 Climate Control Information Screen

DEFOGGING/DEFROSTING SYSTEM OFF

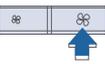1. Press the defrost button. 
2. Select the warmest temperature. 
3. Set the fan speed to the highest speed. 

Pressing the OFF button will place the system to the OFF mode.

- Climate control fan will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

NOTE:
To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

AUTOMATIC HEATING / AIR CONDITIONING


The modes, fan speeds, air intake and air conditioning will be controlled automatically by the temperature setting you select. 

Hyundai recommends to use the AUTO function for normal daily driving. Adjust the temperature as desired.

AIR INTAKE CONTROL

-  Recirculated air position (LED on)
-  Outside (fresh) air position (LED off)


MODE SELECTION

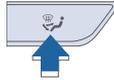Changes the direction of the air flow as following:  

BLUETOOTH PHONE PAIRING

Phone setup (pairing phone) with Audio (without touch screen)


1. Press the  button on the steering wheel controls.
2. Select the OK button to enter the Pair Phone screen.

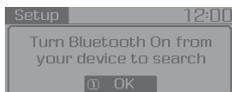

(In the head unit: press the SETUP / CLOCK button, select "Phone", select "Pair Phone")



3. Turn Bluetooth® on from your device. Select the car name shown on the screen to pair.
4. Enter the passkey.
 - Non SSP supported device: "0000" SSP supported device: 6 digit

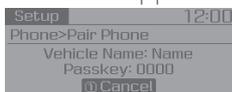

5. Connect Bluetooth.


NOTE: Vehicle must be parked to complete the pairing process.

Phone setup (pairing phone) with Audio (with touch screen) and Navigation

1. Press the PHONE button in the head unit or CALL button in the steering wheel remote control.




2. Search for the device name as displayed on your mobile phone and pair.
3. Confirm the 6-digit passkey displayed on the audio screen and the Bluetooth device are identical.

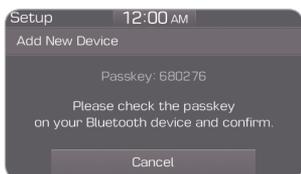

4. Press OK in your Bluetooth device.
5. Pairing is complete.

NOTE: Vehicle must be parked to complete the pairing process.

STEERING WHEEL AUDIO CONTROL

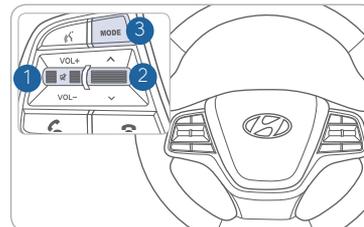


- 1 **VOLUME**
Raises or lowers the speaker volume. Press to mute.
- 2 **SEEK / PRESET**
Changes the station.
- 3 **MODE**
Changes the audio source.

BLUETOOTH® OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. When the Bluetooth® volume is too high. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and / or with the window open.
3. When the air conditioning vents are facing the microphone and / or when the air conditioning fan is at the max speed.

Steering wheel bluetooth® control

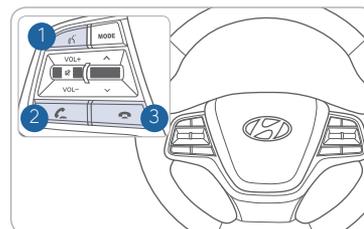

- 1 **TALK**
Activates voice recognition.
- 2 **CALL**
Places and transfers calls.
- 3 **END**
Ends calls or cancels functions.

To Answer a Call:

- Press the  button on the steering wheel.

To Reject a Call:

- Press the  button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone

(Private call on handset – do not use while driving):

- Press and hold the  button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:

- Press the  button on the steering wheel.

Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:


1. Press the  button.
2. Say the following command:
 - “Call <John Smith>”: Connects the call to John.
 - “Call <John Smith>” <on Mobile / at Work / at Home>: Connects the call to John’s Mobile, Home, or Work phone number.

Dialing by Number:

1. Press the  button.
2. Say “Dial Number.”
3. Say the desired phone number.

For the complete list of commands, please refer to chapter 4 of your vehicle Owner’s Manual or to your Multimedia Owner’s Manual.

BLUE LINK TELEMATICS SYSTEM

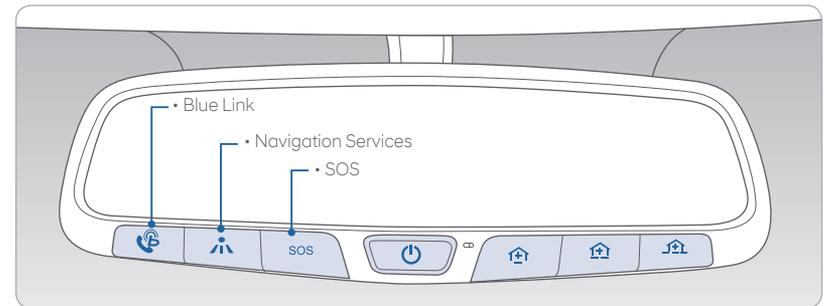

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the  button to access the voice-response menu of services.

- You can say:

- Service Link
- Roadside Assistance
- Blue Link Account Services
- Help
- Cancel

For vehicles equipped with factory-installed navigation, press the  button for Destination Voice Search Powered by Google™.

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User’s Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google™ is a registered trademark of Google, Inc.

Blue Link Mobile App



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android™ — Google Play™

Visit HyundaiBlueLink.com FAQs to see a list of compatible devices.



Scan to learn more about the Blue Link mobile app and Remote features.

Remote Start

Remote Start enables you to remotely start your vehicle virtually from anywhere. For vehicles equipped with full-automatic temperature control, you can also enable climate control remotely and turn on the front window defroster, ensuring a warm or cool car is ready to go when you are.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log in to www.MyHyundai.com.

Remember:

- Remote Start will automatically shut off after 10 minutes or after selected engine timer runs out.
- While this feature is active, the parking lights will blink until the vehicle is turned off or when vehicle is in operation.
- To continue to operate the vehicle, the proximity key must be inside the vehicle with the driver, prior to pressing the brake and being able to move the gearshift from the P (Park) position.

NOTE: Remote Start is not available on all models. Remote Start is only available for Push Start equipped vehicle with an Automatic Transmission. Remote Start with Climate Control additionally requires Fully Automatic Temperature Control.

Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security / panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

Remote Start will terminate:

- After 10 minutes or after selected engine timer runs out
- Brake is pressed without the proximity key inside the vehicle
- Alarm is triggered without the proximity key inside the vehicle
- Door / trunk is opened from inside the vehicle

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so, or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.

WARNING!


Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and / or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

CAUTION!

If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

RADIO

Standard Audio

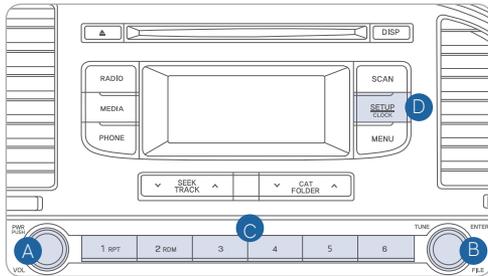

Press the **POWER** button **A** to turn on the radio.

• TUNING / LISTENING TO CHANNELS

1. Press the **RADIO** button to select FM / AM / XM, or press each FM / AM / XM button.
2. Rotate the **TUNE** knob **B** to a desired channel.

NOTE:

A clear view of the southern sky is recommended to ensure Sirius XM® radio reception.

• SETTING THE PRESET MEMORY BUTTONS (FM / AM / Sirius XM®)

Press and hold any preset button **C**.

• ADJUSTING THE SOUND CONTROL


1. Press the **SETUP / CLOCK** button **D**.
2. Select “Sound” on the screen.
3. Select “Tone” or “Position” on the screen.

NOTE:


Rotate the **TUNE** knob to scroll to desired menu / number. Press the **TUNE** knob to select / set the highlighted option.

Please refer to your Owner's Manual for more detailed information on how to use your audio system. Complimentary XM subscription ends three months following the vehicle date of sale. Please contact Sirius XM® at 1-888-539-7474 to renew your XM subscription.

Display Audio

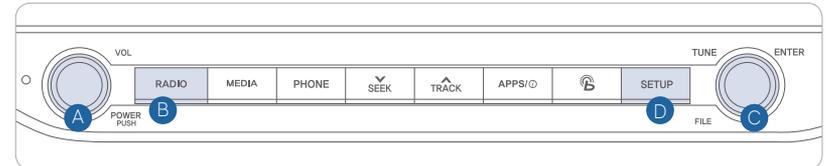

Navigation

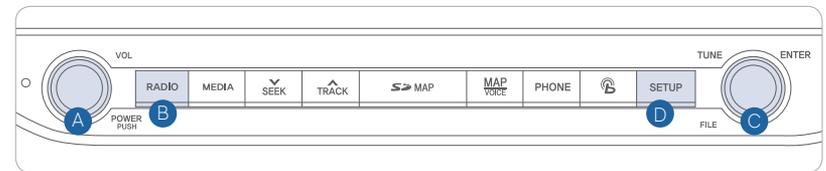

Press the **POWER** button **A** to turn on the radio.

• TUNING / LISTENING TO CHANNELS

1. Press the **RADIO** button **B**.
2. Rotate the **TUNE** knob **C** to a desired channel.

NOTE:

A clear view of the southern sky is recommended to ensure Sirius XM® radio reception.

• SETTING THE PRESET MEMORY BUTTONS (FM / AM / Sirius XM®)

Press and hold any preset button until an audible beep is heard to store current channel.



• ADJUSTING THE SOUND CONTROL

1. Press the **SETUP** button **D**.
2. Press the “Sound” button on the screen.
3. Touch the on-screen arrows to adjust the desired setting.



NAVIGATION

Basic features on the map screen



- 1 Move to the Home Screen
- 2 Change the map view mode
- 3 Adjust the volume
- 4 Zoom in the map
- 5 Set the zoom level automatically according to the guidance
- 6 Zoom out the map
- 7 Quick and easy selection of a destination and options
- 8 Enter the navigation menu screen
- 9 Unified search
- 10 Quick and easy selection of a destination from the map screen
- 11 Set a waypoint to the current route
- 12 Save frequently used address to the address book
- 13 Find a POI (Point Of Interest) around the current position
- 14 View the vehicle's current position on the map screen
- 15 Enter the navigation menu screen

Basic features on the Navi Menu screen




- 1 Set the destination by address search
- 2 Select from the previously input addresses and POI's
- 3 Runs Google Local Search
- 4 Select the desired item in the POI sub-categories
- 5 Search gas stations
- 6 Search restaurants
- 7 Search emergency facilities
- 8 Search the destination with the address book
- 9 Search the destination by phone number
- 10 Type freeway name and exit / entrance to search
- 11 Type the 1st Street name, the State, the 2nd Street name
- 12 Type coordinates to search

NOTE: Flick up / down to scroll through the Navigation Menu.

CLOCK ADJUSTMENT

With Audio (without touch screen)

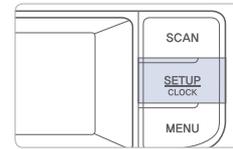

1. Press the SETUP / CLOCK button.
2. Select "Clock", then select "Clock Settings".
3. Adjust the number and press the TUNE knob to set the time.


NOTE: Rotate the TUNE knob to scroll to desired menu / number. Press the TUNE knob to select / set the highlighted option.

With Audio (touch screen)




1. Press the SETUP button on the head unit.
2. Touch the "Clock" icon on the screen.
3. Press the arrow button to change the Hour, Minute, etc.
4. Press back button **A** to save changes and go to previous screen.

With Navigation

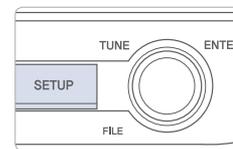

1. Press the SETUP button.
2. Touch the "Clock" icon on the screen.
3. Select GPS time to ON.
4. Press back button **A** to save changes and go to previous screen.

AUX, USB AND iPod PORT

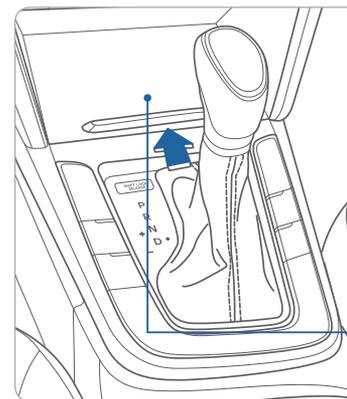

Use the input jack to connect an external audio device and listen to it through the audio system in your vehicle.

To open the cover:

Push the lip on the cover forward.

To close the cover:

Push and release the lip of the cover forward and it will slowly close.

ANDROID AUTO™

REQUIREMENTS:

- Micro USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the micro USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

PHONE SETUP

Turn on the Bluetooth® on your phone and connect the micro USB cable to your phone and the USB port on the vehicle.


Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

NOTE: Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Vehicle and phone setup should be completed in one sitting. If phone setup needs to be resumed, we recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

CAR SETUP

1. Press the SETUP button.
2. Touch the “Connectivity” icon on the screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

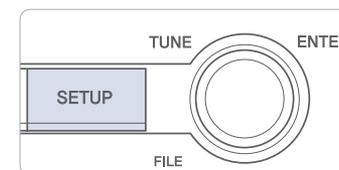

For more detailed information on how to operate Android Auto, please refer to your navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website
<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

APPLE CARPLAY™

REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

PHONE SETUP


On your phone, go to Settings > General > Restrictions > CarPlay to allow CarPlay access.

On your phone, go to Settings > General > Siri and ensure Siri is turned ON.

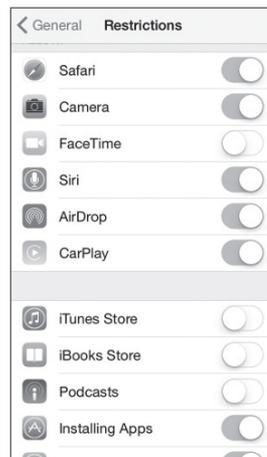


CAR SETUP

1. Press the SETUP button.
2. Touch the “Connectivity” icon on the screen.
3. Touch “iOS” on the Connectivity Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

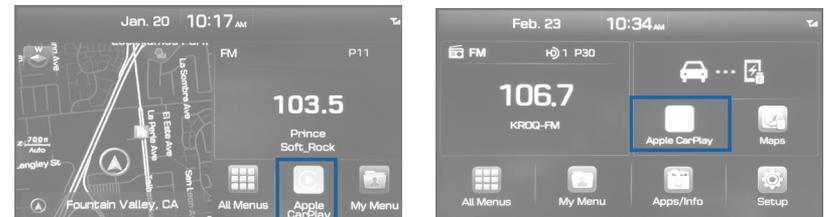

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

CarPlay Home Screen

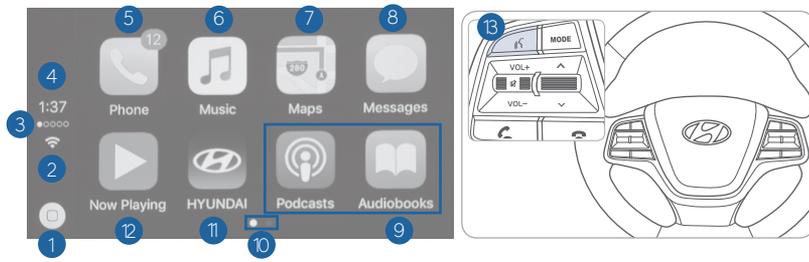

- | | |
|-------------------------|----------------------------------|
| 1 HOME ICON | 7 APPLE MAPS |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES |
| 3 CELLULAR SIGNAL | 9 3RD PARTY APPS |
| 4 PHONE TIME | 10 SCREEN PAGE INDICATOR |
| 5 PHONE | 11 EXIT TO HYUNDAI |
| 6 APPLE MUSIC™ | 12 CURRENT CARPLAY AUDIO PLAYING |

SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
 - “Text <John Smith> ‘Call you later’” to send a text message.
 - “Read text messages” to read available text message.
 - “Call <John Smith>” to make a phone call.
 - “Find <POI/Destination>” to locate a POI/Destination.

PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically asks ‘Who you would like to call’ when the PHONE 5 icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically asks ‘To hear unread messages or create a new one’ when the MESSAGE icon is selected.


3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>


Ensure phone has latest version of the 3rd Party Apps.

CRUISE CONTROL / SMART CRUISE CONTROL

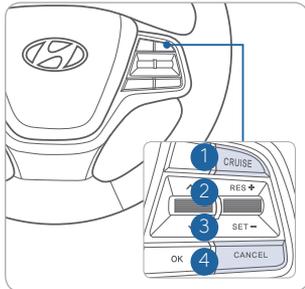

The Cruise Control system allows you to program the vehicle to maintain a constant speed without depressing the accelerator pedal.


- 1 To turn On / Off the Cruise Control
- 2 To Resume or Increase the Cruise Control speed
- 3 To Set or Decrease the Cruise Control speed
- 4 To Cancel the Cruise Control

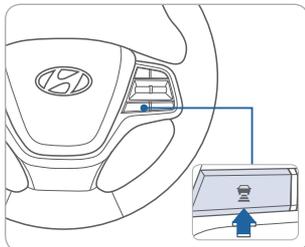

Setting Vehicle Distance (Smart Cruise Control only)

This system assist you in setting the distance from the vehicle ahead and will maintain the selected distance without you depressing the accelerator or the brake pedal.

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal. The vehicle-to-vehicle distance 1 will automatically activate when you set the cruise speed 2. Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:

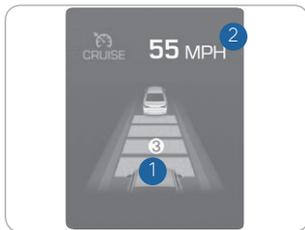

Setting Cruise Control

1. Press the “CRUISE” button 1 to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle “-SET” switch (3) DOWN to set cruising speed.

Adjusting the vehicle speed

1. Toggle “+RES” switch 2 UP to increase cruising speed.
2. Toggle “-SET” switch 3 DOWN to decrease cruising speed.

Note Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 10 mph.

To Cancel Cruise Control

Press the “CANCEL” button 4 or depress the brake pedal.



MANUAL TRANSMISSION



Engaging reverse

When shifting into R (Reverse) gear, depress the button 1 and then shift into R (Reverse) gear position.

AUTOMATIC AND DCT TRANSMISSION

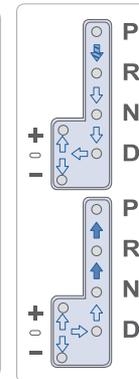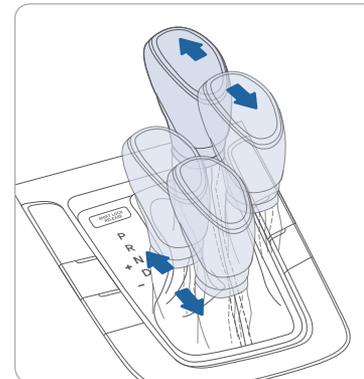

(→): Press the shift button, then move the shift lever.

(↔): Depress the brake pedal, press the shift button, and then move the shift lever.

(↔): Move the shift lever.

Manual shift mode

Move the shift lever from D (Drive) into the manual gate to select. Move the shift lever forward (+) to up shift or rearward (-) to downshift.

DUAL CLUTCH TRANSMISSION

NOTE- Dual Clutch Transmission Characteristics

The Dual Clutch Transmission behaves just like a manual transmission, but with the added convenience of an automatic transmission.

- The dual clutch transmission eliminates the need for a torque converter. This direct drive structure and the ability to pre-select the upshift gear allows shifts to be quick and responsive with constant power through the shifts.
- The Dual Clutch Transmission comes equipped with Hillstart Assist Control. If you remove your foot from the brake pedal while you are stopped on a hill, the vehicle will remain stationary for approximately 2 seconds to prevent the vehicle from rolling backwards. If you press the accelerator pedal during the two-second period, the vehicle will accelerate. If you wait for over two seconds, the vehicle will enter into creep mode and may roll backwards if the hill is steep.
- Always come to a complete stop before shifting into Park (P), Drive (D), or Reverse (R).

Caution

A few common conditions that may make the transmission susceptible to overheating include:

- Holding the vehicle on an incline with just your foot on the accelerator pedal

TIP: When holding the vehicle on a hill, use the foot brake rather than trying to hold the vehicle by keeping your foot on the accelerator pedal.

- Driving in stop-and-go traffic with frequent accelerating and decelerating at low speed

TIP: Allow a gap to form ahead of you before moving the vehicle forward.

Under certain conditions, such as stop-and-go driving, launching the vehicle on a steep grade, or backing the vehicle up a long inclined driveway, the transmission clutch temperatures may increase excessively. When the clutch temperature is elevated above the normal operating condition, the high temperature warning message is displayed. If this occurs, stop the vehicle as soon as safely possible and allow the transmission to cool with the engine running and the shift lever in Park (P). After the warning message clears, you can continue to drive the vehicle with caution.

What is the Transmission High Temperature Warning Message?

- Under certain driving conditions such as stop-and-go driving or driving slowly up a hill, the clutches tend to have more slip. This condition tends to heat up the transmission.
- If the transmission temperature gets too high, a chime will sound and a warning message will appear in the instrument cluster LCD display.




- If this occurs, stop the vehicle as soon as safely possible and allow the transmission to cool with the engine running. After the transmission cools, the vehicle may be driven normally.

What if I'm Driving in Stop-and-Go Traffic?

- Whenever possible, come to a complete stop with your vehicle and allow a gap to form in front of you. Then accelerate and move forward.

Refer to your Owner's Manual for additional info on the DCT.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

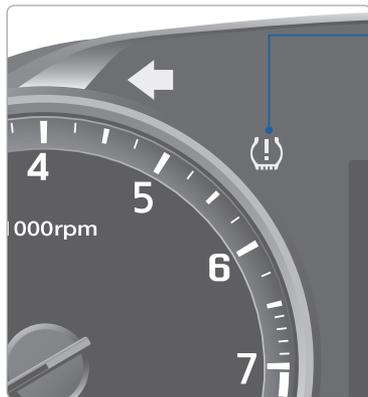

Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Position Indicator and Tire Pressure Indicator (Shown on the LCD display)


LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tire is significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized Hyundai dealer as soon as possible.

LOW TIRE PRESSURE POSITION INDICATOR AND TIRE PRESSURE INDICATOR (LCD DISPLAY)

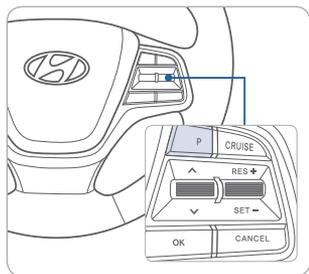


Select the Assist mode  by pressing the mode button on the steering wheel to display tire pressure.

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator  will illuminate and the LCD  display will indicate tire(s) requiring air.

The Tire Specification and Pressure Label located on the driver's side center pillar gives the tire pressures recommended for your car.

For information regarding your Spare Tire Kit or Tire Mobility Kit, please refer to chapter 6 in your Owner's Manual."

DRIVE MODE INTEGRATED CONTROL SYSTEM

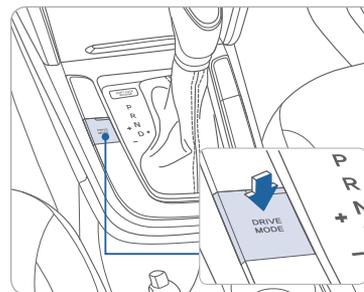

You can select the drive mode according to your preference or the road condition.

The system resets to NORMAL mode (except if it is in ECO mode) every time the engine is restarted.

Each time you press the button, the drive mode changes as following :



NORMAL mode is not displayed on the instrument cluster.

NORMAL mode

Normal mode provides regular daily driving performance with some fuel efficiency. When Normal mode is selected, no indicator will illuminate on the instrument cluster.

ECO mode

Eco mode system helps to improve fuel efficiency. When the Eco mode system is activated, the vehicle acceleration, gear shift points and air conditioning performance will be reduced to conserve the fuel consumption.


SPORT mode

Sport mode focuses on engaging driving dynamics by adjusting the steering feel along with the responsiveness of the engine and transmission.

To improve your fuel efficiency:

- Drive smoothly and accelerate at a moderate rate.
- Avoid heavy accelerations.
- Maintain steady cruising speed.
- Adjust the vehicle speed to the traffic condition and avoid speed changes.
- Avoid unnecessary braking.
- Keep the tires inflated to the recommended tire pressure.
- Do not idle the engine longer than necessary.

ELECTRONIC STABILITY CONTROL (ESC)

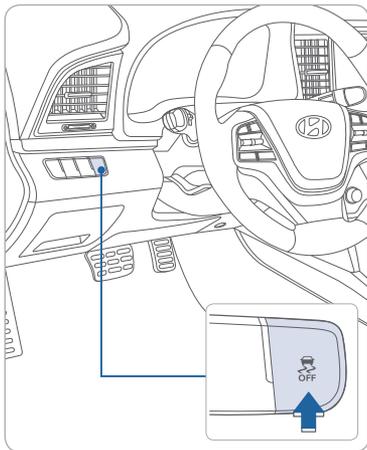


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

ESC automatically selects the ON position when the engine is started.

To turn off the Traction Control
Press the ESC OFF button.

To turn off the Traction and the Stability Control
Press and hold the ESC OFF button for over 3 seconds.

LANE KEEPING ASSIST SYSTEM (LKAS)

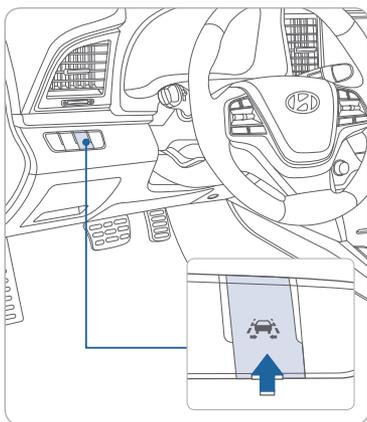


The Lane Keeping Assist System detects lane markers on the road, and assist the driver's steering to help keep the vehicle between lanes.

- To turn on the LKAS, press the LKAS switch. The indicator in the cluster display will initially illuminate white.
- To turn off the LKAS, press the switch again.

LKAS operates only while the vehicle speed is over 40mph and below 110mph.



AUTONOMOUS EMERGENCY BRAKING (AEB)

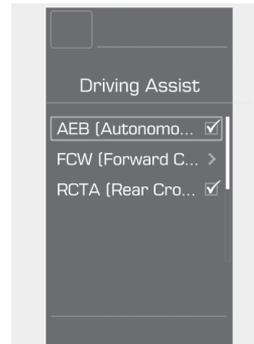

The Autonomous Emergency Braking (AEB) system is designed to detect and monitor the vehicle ahead or detect a pedestrian in the roadway and warn the driver if a collision is imminent.

To operate the system, select the AEB (Autonomous Emergency Braking) in the LCD cluster display under the User Settings. Please refer chapter 5 in your Owner's Manual for further information.

REAR VIEW CAMERA

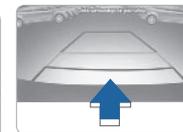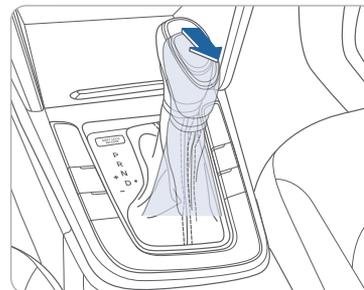

When the transmission is shifted into R (Reverse), the rear view camera displays the area behind the vehicle.

