


WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

Emergency/ Manual Door Lock- page 02

- Doors without an outside key hole can be locked as follows:
1. Open the door.
 2. Insert the key into the emergency door lock hole and turn key horizontally to lock.
 3. Close the door securely.

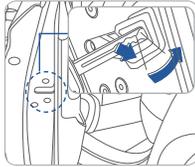


Central Door Lock/ Unlock Switch - page 02

- Press the central door lock/unlock switch to lock/unlock all vehicle doors.




Fuel Filler Door - page 03

- Unlock the doors and press the fuel door lid at the 3 o'clock position.

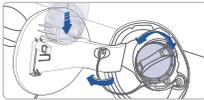

Windshield Wiper Service Position (to lift the wipers off the windshield) - page 10

- Within 20 seconds of turning off the engine, lift and hold the wiper lever up to the MIST position until the wipers move to the top wiper position.

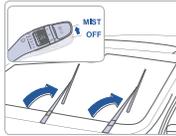

Liftgate - page 03

- Unlock the doors, press the liftgate handle button and open the liftgate.



How to Defrost - page 22-23

- 1 Press the front defrost button.
- 2 Set to warmest temperature setting.
- 3 Set to highest fan speed.

Blue Link - pages 28-30

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link Users Manual & tear out Voice Commands/ Quick Tip Card
- Encourage customers to press the Blue Link button

Tire Pressure Monitoring System (TPMS) - page 34

- LOW TIRE PRESSURE INDICATOR / TPMS MALFUNCTION INDICATOR



NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure indicator to illuminate. Inflate tires according to the Tire Pressure Label located on the driver's side door pillar.

MAINTENANCE

Scheduled Maintenance (Normal Usage)	2.0 GDI	1.6 T-GDI
Engine Oil and Filter	Replace 7,500 or 12 mos.	Replace 6,000 or 12 mos.
Fuel Additives	Add 7,500 or 12 mos.	Add 6,000 or 12 mos.
Tire Rotation	Perform 7,500	Perform 6,000
Vacuum Hose	Inspect 7,500 or 12 mos.	Inspect 6,000 or 12 mos.
Air Cleaner Filter	Inspect 7,500 or 12 mos. Replace 22,500 or 36 mos.	Inspect 6,000 or 12 mos. Replace 18,000 or 36 mos.
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace 7,500 or 12 mos.	Replace 6,000 or 12 mos.
Air Conditioning Refrigerant		
Brake Hoses & Lines		
Drive Shafts & Boots		
Front Brake Disc/Pads, Calipers	Inspect 7,500 or 12 mos.	Inspect 6,000 or 12 mos.
Rear Brake Disc/Pads		
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint, Upper Arm Ball Joint		
Suspension Mounting Bolts		
Exhaust Pipe & Muffler		
Fuel Tank Air Filter		
Vapor Hose & Fuel Filler Cap, Fuel Tank	Inspect 15,000 or 24 mos.	Inspect 12,000 or 24 mos.
Brake/Clutch Fluid		
Parking Brake		
Fuel Filter		
Fuel Lines, Fuel Hoses and Connections	Inspect 30,000 or 48 mos.	Inspect 24,000 or 48 mos.
Drive Belt	Inspect First 60,000 or 72 mos. Subsequent, every 15,000 or 24 mos.	Inspect First 60,000 or 72 mos. Subsequent, every 12,000 or 24 mos.
Spark Plugs	Replace 97,500	Replace 42,000
Coolant	Replace First 120,000 or 120 mos. Subsequent, every 30,000 or 24 mos.	Replace First 120,000 or 120 mos. Subsequent, every 30,000 or 24 mos.
Valve Clearance	-	Inspect 60,000 or 72 mos.
Dual Clutch Transmission Fluid	Inspect 30,000 or 48 mos.	Inspect 24,000 or 48 mos.
Manual Transmission Fluid		
Automatic Transmission Fluid	No checks or services required for Normal Usage driving.	

*Check the engine oil regularly between recommended oil change intervals. We recommend Quaker State oil.

*See Owner's Manual for details regarding Severe Usage maintenance recommendations.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

NP150-82018-A
(Rev 05/05/17)
Printing 05/08/17

HYUNDAI **Elantra GT**
Quick Reference Guide

www.hyundai.com

HYUNDAI
NEW THINKING.
NEW POSSIBILITIES.

Roadside Assistance: **1-800-243-7766**
Consumer Affairs: **1-800-633-5151**
Sirius XM® Radio: **1-800-967-2346**
Blue Link: **1-855-2BLUELINK**
(1-855-225-8354)

Table of contents

GETTING STARTED

Central door lock/ unlock switch	02
Child-protector rear door lock	03
Emergency manual door lock	02
Engine start/stop button	07
Front seat adjustment (manual)	05
Front seat adjustment (power)	05
Fuel filler door	03
Head restraint adjustment	06
Inner door handle	02
Liftgate	03
Rear seat folding	06
Remote & smart key	04
Seat belt adjustment (front seat)	06
Steering wheel adjustments	07

FEATURES AND CONTROLS

Air ventilation seat (front seat)	13
Climate control	20-23
Clock adjustment	16
Driver's main controls	08
Headlights	09
Homelink wireless control system	14
Instrument cluster	17
Instrument panel illumination	18
Interior lights	12
LCD display control	19
LCD display modes	19
Rear view camera	15
Seat warmer (front seats)	13
Sunroof	11
Warning and indicators	18
Wireless cellular phone charging system	15
Wipers and washer	10

MULTIMEDIA

AUX, USB and iPod® port	32
Blue link telematics system	28-30
Bluetooth® phone call operational tips	24-25
Bluetooth® phone operation	27
Navigation	31-32
Steering wheel audio control	24
Voice recognition tips	26

DRIVING

Auto hold	33
Automatic emergency braking (AEB)	39
Automatic transmission & Dual clutch transmission	36
Blind spot detection system (BSD)	39
Cruise control/advanced smart cruise control	42
Driver attention alert system	40
Drive mode integrated control system	41
Electronic parking brake (EPB)	33
Electronic stability control (ESC)	38
Lane keeping assist system (LKAS)	38
Manual transmission	35
Tire pressure monitoring system (TPMS)	34
Paddle shifter	37

* Some vehicles may not be equipped with all the listed features.


Instrument panel illumination
Page18

Instrument cluster
Page17

Wiper and washer
Page10

Navigation
Page31-32

Cruise control/
Smart cruise control
Page42

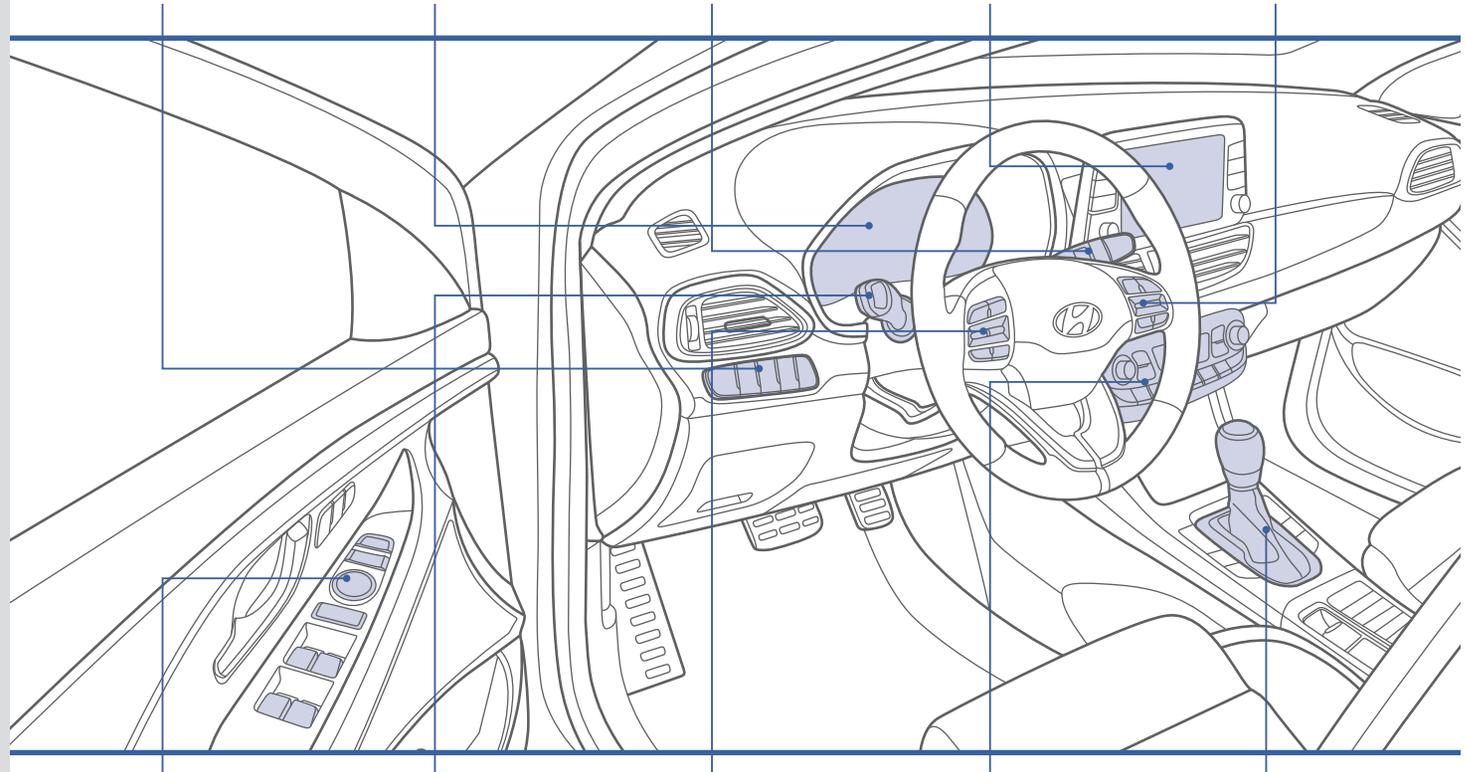

Driver's main controls
Page08

Headlights
Page09

Steering wheel audio control
Page24

Climate control
Page20-23

Transmission
Page36

WARNING!


To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.



GETTING STARTED

INNER DOOR HANDLE

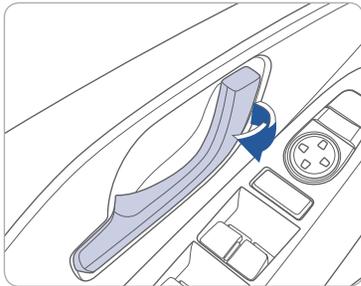


Front door

Pull the inner door handle to unlock and open the door.

Rear door

Pull the inner door handle :
Once -> Unlocks the door
Twice -> Opens the door


CENTRAL DOOR LOCK/UNLOCK SWITCH

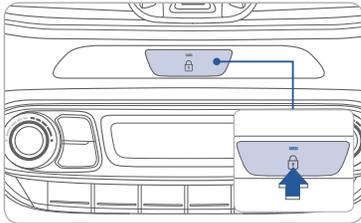

Press the central door lock/unlock switch to lock/unlock all vehicle doors. All doors must be closed to use the central door lock switch.

LED on = doors are locked.
LED off or blinking = doors are not locked

EMERGENCY / MANUAL DOOR LOCK


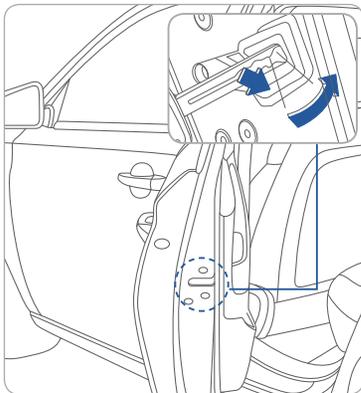


Doors without an outside key hole can be locked as follows:

1. Open the door.
2. Insert the key into the emergency door lock hole and turn key horizontally to lock.
3. Close the door securely.




CHILD-PROTECTOR REAR DOOR LOCK

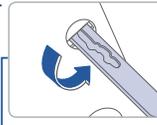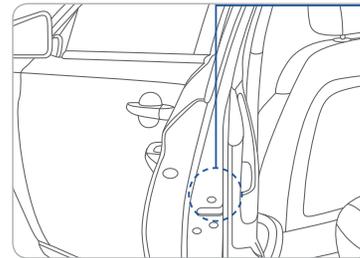

Lock


Insert a key or screw driver into the hole and turn it to the lock position.

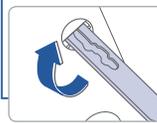


Unlock

Insert a key or screw driver into the hole and turn it clockwise to the unlock position.

FUEL FILLER DOOR

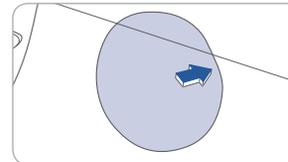

1. Push the center edge of the fuel filler door when the driver's door is unlocked.

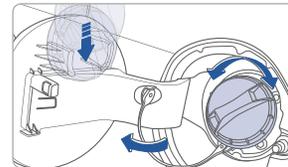


2. Remove the fuel tank cap.

NOTE:

Tighten the fuel filler cap until one click is heard.

LIFTGATE

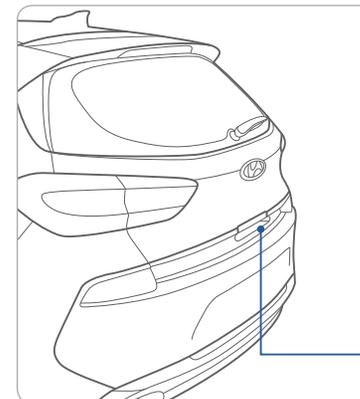

Type A



Remote Key

Press and hold to unlock the trunk.

Press the Liftgate handle button and open the liftgate.

Type B




Smart Key

Press the liftgate handle button to open.




GETTING STARTED


REMOTE & SMART KEY

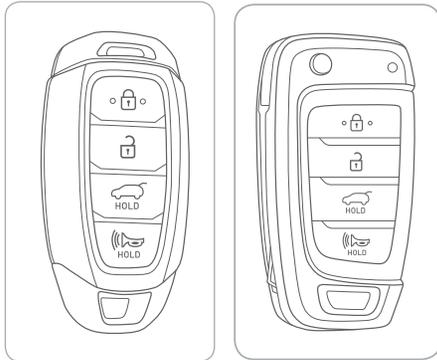

- Lock
- Unlock
- Liftgate Unlock
- Panic

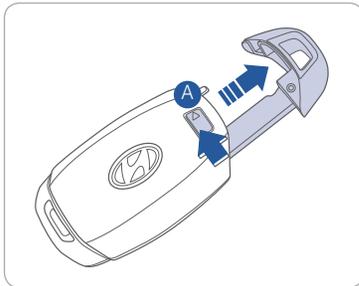


Removing the mechanical key
Slide and hold the release button **A** to remove the mechanical key.

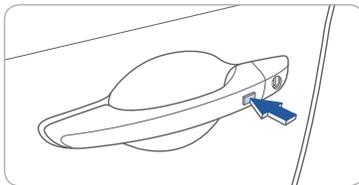

Driver's door Lock / Unlock
Smart key must be within 28~40in. from the outside door handle.

Press: Once - Unlock driver door
Twice - Unlock all doors
Third - Lock all doors

NOTE: User selectable option : Please see section 3 from Owner's Manual for more details.

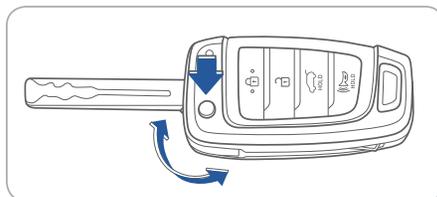

To unfold the mechanical key, press the release button on the remote.




FRONT SEAT ADJUSTMENT (Manual)



Forward and backward **1**



Seat cushion height **2**

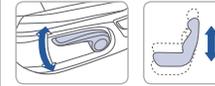

Push down/ Pull up on the lever several times to lower/ raise the seat cushion height.


Seatback angle **3**




FRONT SEAT ADJUSTMENT (Power)



Forward and backward **1**

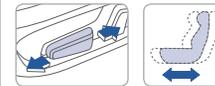

Seat cushion height **1**

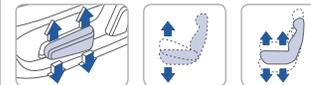

Seatback angle **2**




Lumbar support **3**





GETTING STARTED



HEAD RESTRAINT ADJUSTMENT

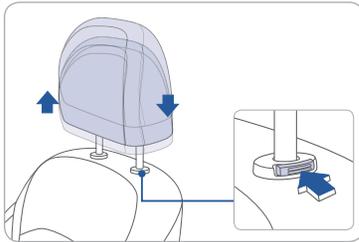


To Raise the Head Restraint:
Pull headrest up.

To Lower the Head Restraint:
Press lock button while pressing down on headrest.

SEAT BELT ADJUSTMENT (Front seat)

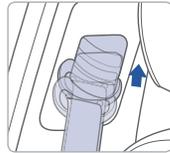
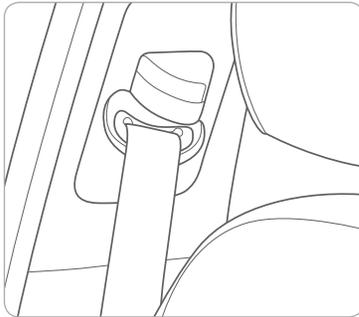


Pull up to raise.

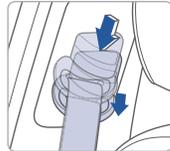


Press button and push down to lower.

REAR SEAT FOLDING

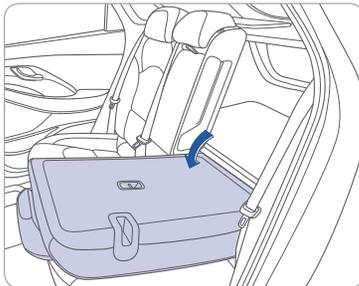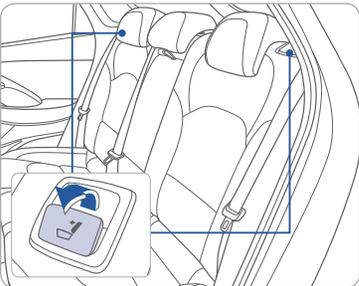

ENGINE START / STOP BUTTON

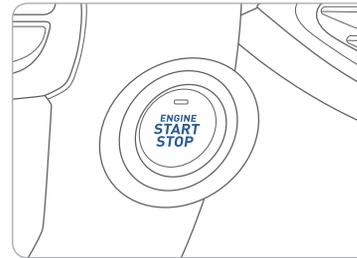

With the ignition OFF and foot OFF of brake pedal, press the Engine Start / Stop button.

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Third for OFF.

To start the engine in any mode (including OFF), press the Engine Start / Stop button while pressing down on the brake pedal (and clutch pedal for the manual transmission).

To turn off the engine, place the shift lever in P (Park) and press the Engine Start / Stop button.

Emergency Situations




To turn the engine off while moving

Press the Engine Start / Stop button for more than 2 seconds or 3 times consecutively within 3 seconds.

To restart the engine while moving

Press the Engine Start / Stop button with the shift lever in N (Neutral).

STEERING WHEEL ADJUSTMENTS

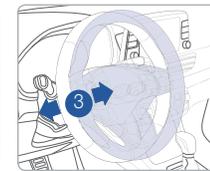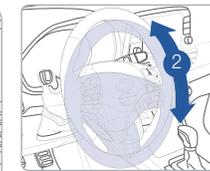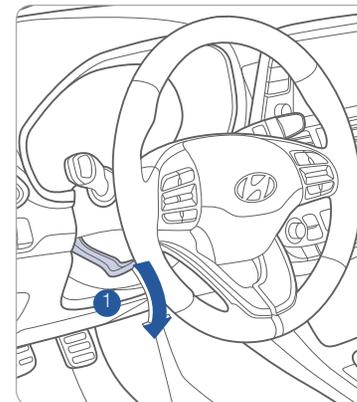


NOTE: Do not adjust while driving.

1. Pull the lever ① down.
2. Set the angle ② and distance ③.
3. Pull the lever ① up to lock position.



FEATURES AND CONTROLS

DRIVER'S MAIN CONTROLS

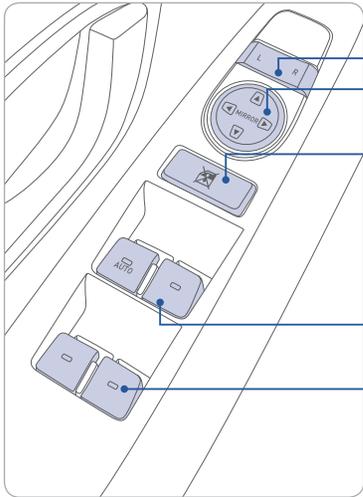

Side view mirror

- Press the L or R button.
- Adjust the mirror by using the directional switch.

Power window lock button


Disables the power window switches on the rear passenger doors.

Window switches

- Front doors power window switches.
- Rear doors power window switches.



HEADLIGHTS

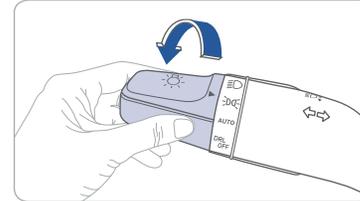

Headlights on



Parking lights on



Auto headlights on




DRL OFF


Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press the lock button on the remote key or smart key twice to turn the headlights off.


Turn signals and lane change signals

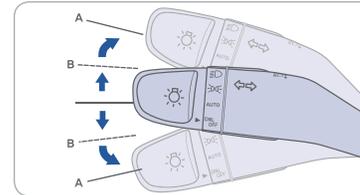


Flashing headlights

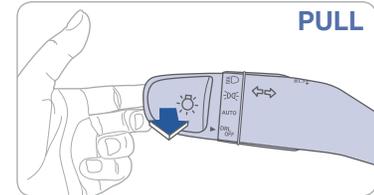

High beams

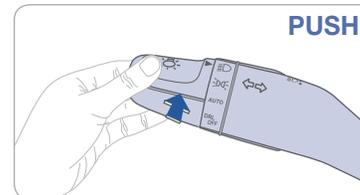

Smart High Beam

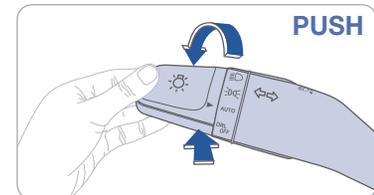

NOTE: To turn off the high beam, pull the lever towards you.

Smart High Beam Function


1. Select the AUTO position on stalk.
2. Push the lever forward to engage the Smart High beam.
3. Pull the lever towards you to disengage.




FEATURES AND CONTROLS




WIPERS AND WASHER

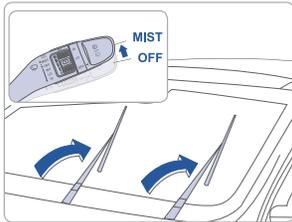


Windshield Wiper Service Position
(to lift the wipers off the windshield)
Within 20 seconds of turning off the engine, lift and hold the wiper lever up to the MIST position until the wipers move to the top wipe position.

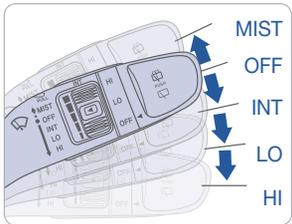


MIST - Single wipe
OFF - Off
INT - Intermittent wipe
LO - Low wiper speed
HI - High wiper speed

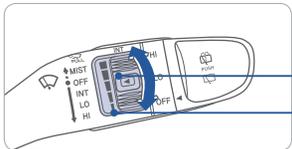


Intermittent wipe time adjustment
Move the speed control switch
Fast wiper speed
Slow wiper speed

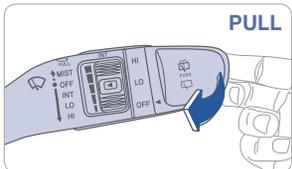

Windshield Washer
Front: Pull the lever towards you to spray washer fluid and run the wipers briefly.

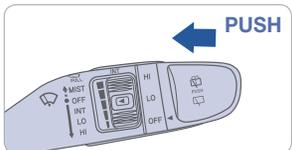


Rear: Push the lever away from you to spray washer fluid on the rear window and run the wiper briefly.

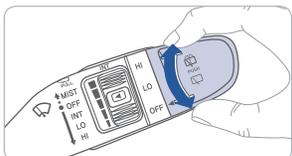

Rear Wiper Control
HI - High wiper speed
LO - Low wiper speed
OFF - Off

SUNROOF

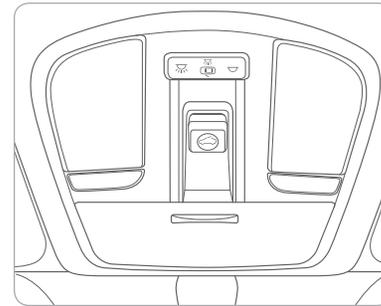


Sunshade




To open the sunshade, pull the sunroof control lever lightly backward to the first detent position. Push the sunroof control lever forward to close.

Sliding the Sunroof

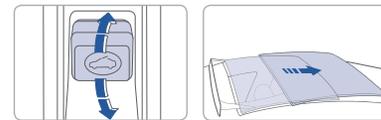


Pull the sunroof control lever backward past the first detent to slide open the sunroof glass. Push the sunroof control lever forward to the second detent position to close sunroof glass with the sunshade.

Tilting the Sunroof

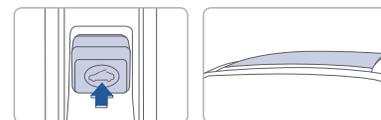

Push the sunroof control lever upward to tilt open the sunroof. Push again the sunroof control lever upward to tilt the sunroof glass closed.

INTERIOR LIGHTS

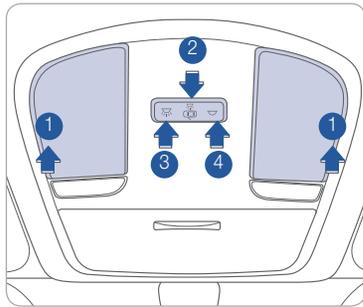


Front map lamp ①
Press the lens to turn the map lamp on or off.

Front door lamp () ②
Lights will turn on when any door is open.

Front room lamp () ③
Push the switch to turn the room lamp on.

Front room lamp () ④
Push the switch to turn the room lamp off.

SEAT WARMER (Front seat)

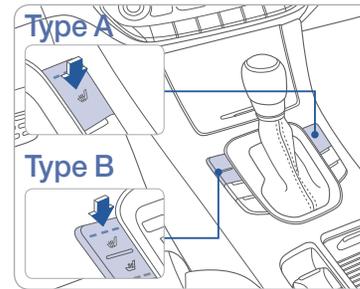


Each time you push the button, the setting is changed as follows:

OFF → HIGH → MIDDLE → LOW

If you want to turn it off immediately, press and hold the button.

AIR VENTILATION SEAT (Front seat)

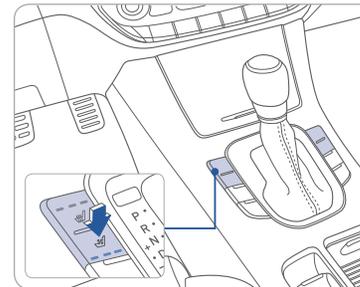


Each time you push the button, the setting is changed as follows:

OFF → HIGH → MIDDLE → LOW

If you want to turn it off immediately, press and hold the button.

HOMELINK WIRELESS CONTROL SYSTEM

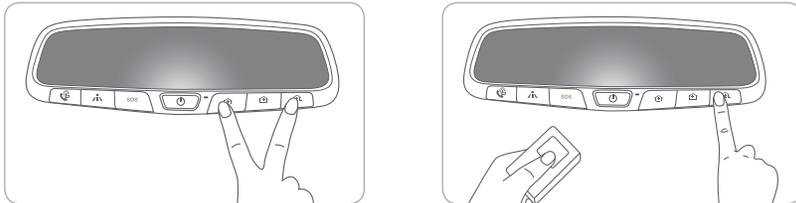


Standard Programming

To train most devices, follow these instructions:

1. For the first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 buttons, until the indicator light begins to flash (after 10 seconds). Release both buttons. Do not hold the buttons for over 20 seconds.
2. Position the end of your hand-held transmitter 1-3in. (2-8cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and the hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons, the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For more detailed information, please refer to Section 3 of your Owner's Manual, or visit www.homelink.com or call (800) 355-3515.


WIRELESS CELLULAR PHONE CHARGING SYSTEM

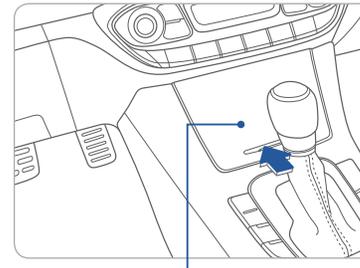

There is a wireless cellular phone charging system inside the front console. The system operates with all doors closed, and the ignition switch is in the ACC/ON position.

NOTE:



The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).

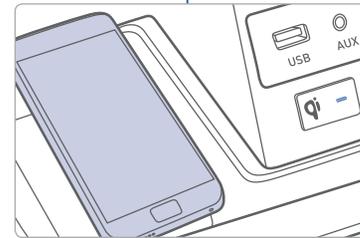

NOTE:

Do not place any metallic items such as coins, keys on the charger. Avoid to put credit cards, etc. on the charger as they might get damaged by the magnetic field.

REAR VIEW CAMERA

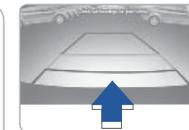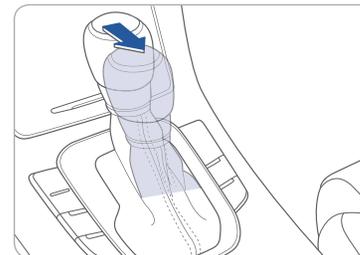

When the shift lever is moved to R(Reverse), rear view camera displays the area behind the vehicle.





FEATURES AND CONTROLS



CLOCK ADJUSTMENT

With Audio

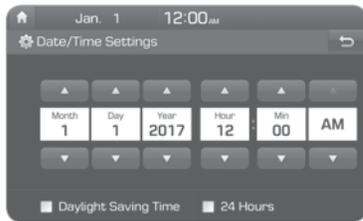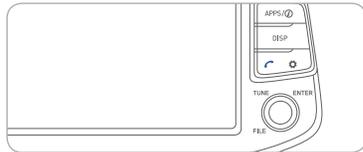

1. Press the SETUP(⚙️) button on the audio head unit.
2. Select Date/Time.
3. Select the desired items.

Date/Time

If you tap any value, you can directly enter the number in the screen.



Daylight Saving Time

The daylight saving time(DST) is applied.

24 Hours

Choose between 12-hour and 24-hour time format.

With Navigation

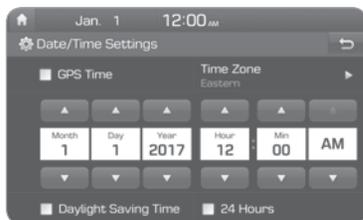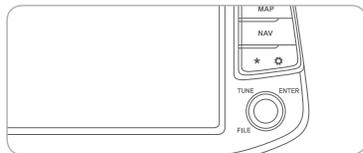

1. Press the SETUP(⚙️) button on the navigation head unit.
2. Select Date/Time.
3. Select the desired items.

GPS time

Displays time according to the received GNSS(Global Navigation Satellite System) time.


INSTRUMENT CLUSTER

Type A



- 1 Tachometer
- 2 Speedometer
- 3 Engine coolant temperature gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 LCD display (including Trip computer)

Type B

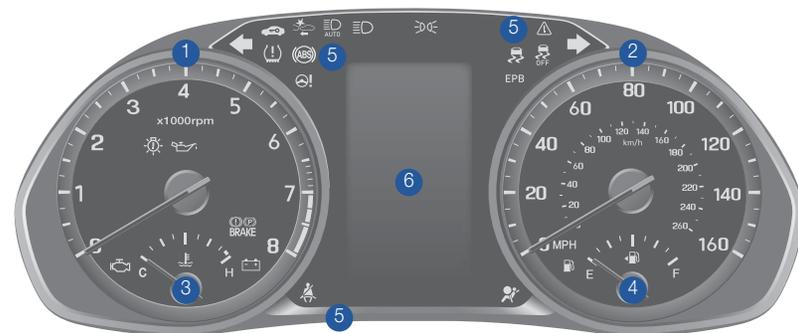




FEATURES AND CONTROLS


WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & brake fluid warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake force Distribution (EBD) System warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine oil pressure warning light	Low fuel level warning light	Low tire pressure warning light / TPMS malfunction
Master warning light	Electric Parking Brake (EPB) warning light	AUTO HOLD indicator
Electronic Stability Control (ESC) Indicator Light	Electronic Stability Control (ESC) OFF indicator light	Immobilizer indicator
Turn signal indicator light	High beam indicator light	Light ON indicator light
Exterior light warning light	Smart high beam indicator	Icy road warning light
Cruise indicator	Cruise SET indicator	SPORT mode indicator
Washer fluid warning light (if equipped)	Automatic Emergency Braking (AEB) warning light	Lane Keeping Assist System (LKAS) Indicator


INSTRUMENT PANEL ILLUMINATION

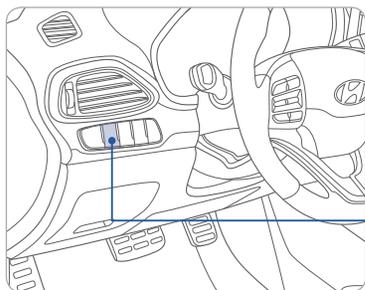

Press the illumination control button to adjust the instrument cluster illumination brightness.

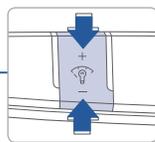


LCD DISPLAY CONTROL

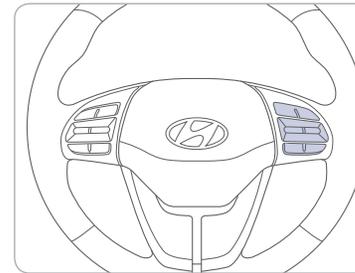


- : MODE button for changing modes
- : MOVE switch for changing items
- : SELECT / RESET button for setting or resetting the selected item

Type A

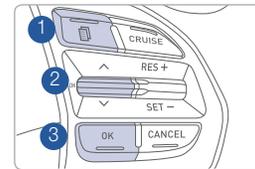

Type B

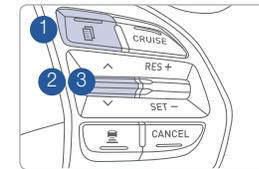


LCD DISPLAY MODES

Modes	Symbol	Explanation
Trip Computer		This mode displays driving information such as the tripmeter, fuel economy, etc.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist		This mode displays the state of : - Lane Keeping Assist System (LKAS) - Advanced Smart Cruise Control - Driver Attention Alert (DAA) - Tire Pressure
User Settings		In this mode, you can change settings of the doors, lamps, etc.
Warning		This mode displays warning messages related to the Blind Spot Detection system, etc.




FEATURES AND CONTROLS

MANUAL CLIMATE CONTROL

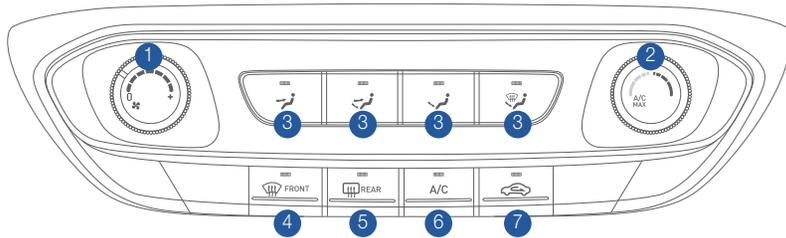


- 1 Fan speed control knob
- 2 Temperature control knob
- 3 Mode selection buttons
- 4 Front windshield defroster button
- 5 Rear window defroster button
- 6 A/C (Air conditioning) button
- 7 Air intake control button


DEFOGGING/DEFROSTING

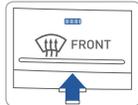

1. Press the front windshield defrost button.

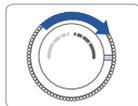

2. Set the temperature control to the warmest setting.

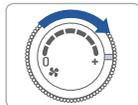

3. Set the fan speed to the highest setting.

AIR INTAKE CONTROL




Recirculated air position



Outside (fresh) air position


MODE SELECTION

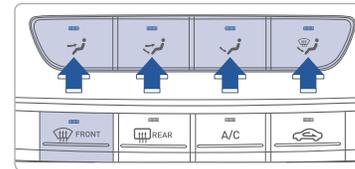

Changes the direction of the air flow as follow.

- Face-Level
- Bi-Level
- Floor-Level
- Floor & Defrost-Level
- Defrost-Level

REAR WINDOW DEFROSTER

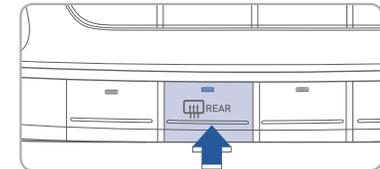


Press to activate/deactivate the rear window defroster.



FEATURES AND CONTROLS



AUTOMATIC CLIMATE CONTROL

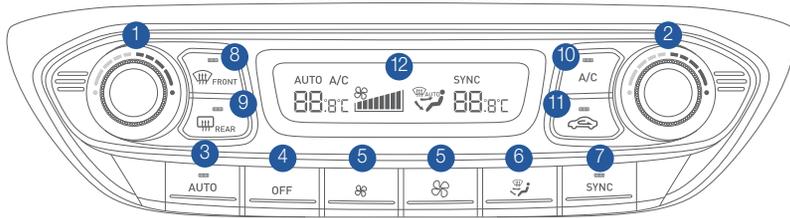


- | | |
|--|---------------------------------------|
| 1 Driver's temperature control knob | 7 SYNC button |
| 2 Passenger's temperature control knob | 8 Front windshield defroster button |
| 3 AUTO (automatic control) button | 9 Rear window defroster button |
| 4 OFF button | 10 Air conditioning button |
| 5 Fan speed control button | 11 Air intake control button |
| 6 Mode selection button | 12 Climate control information screen |

DEFOGGING/DEFROSTING



1. Press the front windshield defrost control button.

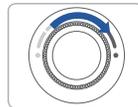


2. Set the temperature control to the warmest setting.



3. Set the fan speed to the highest setting.

NOTE: To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

SYSTEM OFF

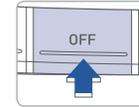

Pressing the OFF button will place the system in the OFF mode.

- Blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

MODE SELECTION



Changes the direction of the air flow as follow.



AIR INTAKE CONTROL




Recirculated air position




Outside (fresh) air position

SYNC BUTTON

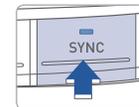

Press the SYNC button to adjust the driver and passenger side temperature and air flow direction equally.

AUTOMATIC HEATING / AIR CONDITIONING

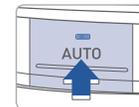

1. Press the AUTO button.



2. Set the temperature control to the desired setting.

Controls the modes, fan speeds, air intake and air-conditioning automatically.

REAR WINDOW DEFROSTER




Press to activate/deactivate the rear window defroster.



MULTIMEDIA



STEERING WHEEL AUDIO CONTROL

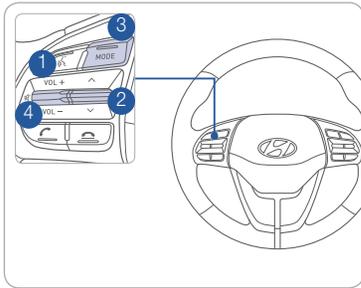

- 1 **VOICE RECOGNITION**
Activates the voice recognition system.
- 2 **SEEK / PRESET (▲/▼)**
Changes station.
- 3 **MODE**
Changes the audio source.
- 4 **VOLUME (VOL + / -)**
Increase or decrease the volume. Press to Mute.


Position, tone, priority and advanced sound settings can be customized in the audio/ navigation unit. Press the SETUP  button then select Sound.

BLUETOOTH® PHONE CALL OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth® control

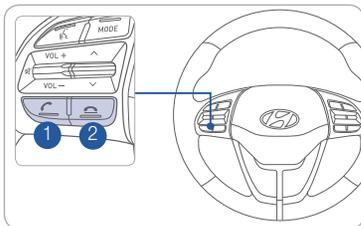

- 1 **CALL**
Places and transfers calls.
- 2 **END**
Ends calls or cancels functions.

To Answer a Call:

- Press the  button on the steering wheel.

To Reject a Call:

- Press the  button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel while it is ringing.

To Transfer a Call to the Phone


(Private call on handset – do not use while driving):

- Press and hold the  button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:

- Press the  button on the steering wheel.

Making a call using voice recognition:

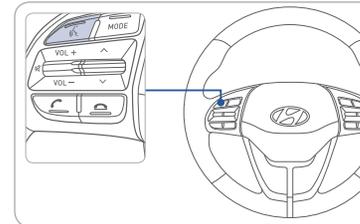

Press  button on the steering wheel control to activate voice recognition.

Press and hold  button to end voice recognition.

Calling by Name:

1. Press the  button.
2. Say the following command:
 - “Call <John Smith>”: Connects the call to John.
 - “Call <John Smith> on <on Mobile / at Work / at Home / on Other>”: Connects the call to John’s Mobile, Work, Home, or Other phone number.

Dialing by Number:

1. Press the  button.
2. Say “Dial Number.”
3. Say the desired phone number.
For the complete list of commands, refer to your Owner’s Manual.



MULTIMEDIA

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when driving in a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands


To start voice command, press the  key, the following commands are available:

Command	Function
Call	Displays downloaded Contacts.
Call <Name>	Calls <Name> saved in Contacts.
Dial Number	Displays a screen where you can say a phone number to dial.
Dial <Phone #>	You can directly say the number to call. ex) Dial 111 555 1234
Redial	Calls the number you last dialed.
Call History	Displays your Call History.



BLUETOOTH® PHONE OPERATION


Phone setup (pairing phone) with Audio

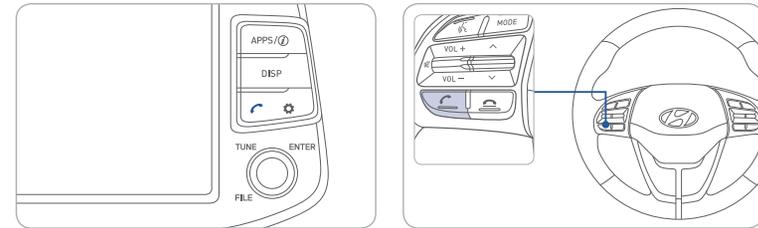

1. Press the PHONE() button in the head unit or CALL() button in the steering wheel remote control.
2. Pair your car after your mobile phone detects the Bluetooth device.
3. Enter the passkey or accept the authorization popup.
4. Connect Bluetooth.

NOTE: Vehicle must be parked to complete pairing process.

Phone setup (pairing phone) with Navigation

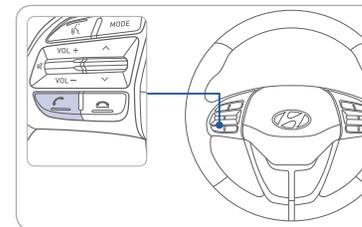

1. Press the CALL() button in the steering wheel remote control.
2. Pair your car after your mobile phone detects the Bluetooth device.
3. Enter the passkey or accept the authorization popup.
4. Connect Bluetooth.


NOTE: Vehicle must be parked to complete pairing process.



MULTIMEDIA



BLUE LINK TELEMATICS SYSTEM

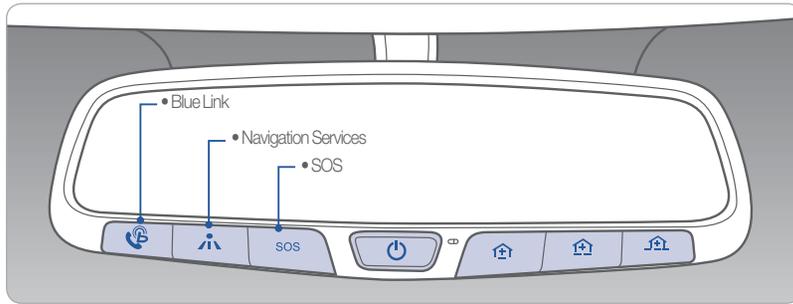

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the  button to access the voice-response menu of services.

- You can say:

- Service Link
- Roadside Assistance
- Blue Link Account Services
- Help
- Cancel

For vehicles equipped with factory-installed navigation, press the  button for Destination Voice Search Powered by Google™.

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User's Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google™ is a registered trademark of Google, Inc.

Remote Start



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android™ — Google Play™

Visit HyundaiBlueLink.com FAQs to see a list of compatible devices.



Scan to see list of compatible devices and to download the app.

Remote Start enables you to remotely start your vehicle from virtually anywhere. For navigation vehicles, you can also enable climate control remotely and turn on the rear-window defroster, ensuring a warm or cool car is ready to go when you are.

-  To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

Remember:

- Remote Start with Climate Control will automatically shut off after 10 minutes or after selected engine timer runs out in navigation vehicles.
- While this feature is active, the parking lights will blink until vehicle is turned off or when vehicle is in operation.
- To continue operation of the vehicle, the proximity key must be inside the vehicle with the driver prior to pressing the brake and being able to move the gearshift from the P (Park) position.



MULTIMEDIA

Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security/panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

Remote Start will terminate:

- After 10 minutes or after selected engine timer runs out in navigation vehicles
- Brake is pressed without proximity key inside vehicle
- Alarm is triggered without proximity key inside vehicle
- Door/trunk is opened from inside the vehicle

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.

WARNING!

Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

CAUTION!

If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.



NAVIGATION

Basic features on map screen



- 1 Place button : Go to the Place menu.
- 2 Home button : Go to the Home screen.
- 3 Map button : Change the map view mode.
- 4 NAV volume button : Adjusts the volume.
- 5 Zoom in button : Zoom the map view screen in.
- 6 Map scale display : Set the zoom level automatically according to the guidance.
- 7 Zoom out button : Zoom the map view screen out.
- 8 Quick menu button : Quick menu for destination selection and options.
- 9 Map scroll mark : Touch to scroll the map.
- 10 Guidance button : Start the preferred navigation route to selected location.
- 11 Routes : Choose the preferred navigation route to selected location.
- 12 Waypoint button : Set a waypoint to the current route.
- 13 Save button : Save frequently used address to address book.
- 14 POI button : Find a POI(Point Of Interest) around the current position.
- 15 Vehicle position mark : View the vehicle's current position on the map screen.



MULTIMEDIA


Destination search screen



Press **[NAV]** button in the navigation head unit, and finds a destination by using the **[Destination]** menu.

- 1 Address : Set destination by address search.
- 2 Previous destinations : Select from previously inputted addresses and POIs.
- 3 Local search : Runs Google Local Search.
- 4 POI categories : Select the desired item in the sub-categories.
- 5 Gas stations : Select the desired destinations among the searched gas stations.
- 6 Restaurants : Select the desired destination among the searched restaurants.
- 7 Emergency : Select the desired destination among the searched emergency facilities.
- 8 Address Book : Search the destination with the address book.
- 9 Coordinates : You can find a destination by entering the coordinates of latitude and longitude.

AUX, USB AND iPod® PORT

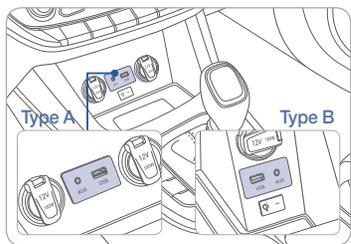


Use the input jack to connect an external audio device and listen to it through the audio system in your vehicle.

iPod® is a trademark of Apple, Inc.



ELECTRONIC PARKING BRAKE (EPB)

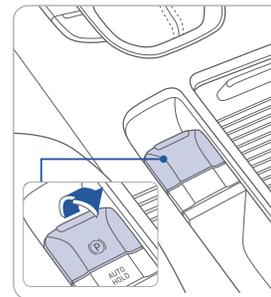


Applying EPB

Depress the brake pedal and then pull up the EPB switch.

Releasing EPB

Turn the engine ON, depress the brake pedal and push the EPB switch down or Automatically release EPB. With engine ON, doors closed, and seat belt fastened shift from P (Park) to R (Reverse) or D (Drive). Depress the accelerator pedal.


AUTO HOLD

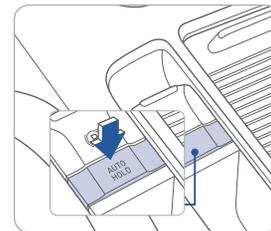

The Auto Hold feature assists in hilly areas. It applies the brake until the accelerator pedal is pressed.

WHITE
AUTO HOLD

1. Press the AUTO HOLD switch. When the AUTO HOLD indicator is white, the system is on and in standby mode.

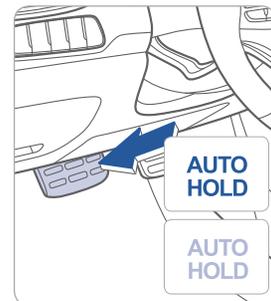

GREEN
AUTO HOLD

2. When you stop the vehicle completely by using the brake pedal and the AUTO HOLD indicator turns green, Auto Hold will maintain the brake pressure to hold the vehicle stationary. Press the accelerator pedal to resume driving.


LIGHT OFF
AUTO HOLD

3. To turn off the Auto Hold feature, press the brake pedal and press the AUTO HOLD switch. The AUTO HOLD indicator light will turn off.

This feature resets to OFF every time the engine is restarted.



TIRE PRESSURE MONITORING SYSTEM (TPMS)

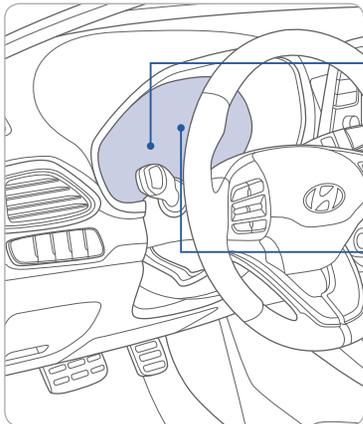

Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure / Tire Pressure Monitor / TPMS Malfunction Display (shown on the cluster LCD display)

LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tire is significantly under-inflated.



TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, we recommend the vehicle be checked by an authorized HYUNDAI dealer.

LOW TIRE PRESSURE / TIRE PRESSURE MONITOR / TPMS MALFUNCTION DISPLAY(LCD DISPLAY)

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator (🚗) will illuminate and the LCD display will indicate Tire(s) requiring air.

MANUAL TRANSMISSION

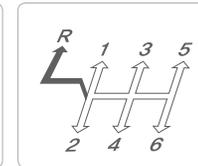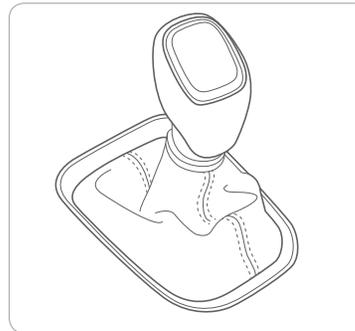


Engaging reverse

When shifting into R (Reverse) gear, depress the button 1 and then shift into R (Reverse) gear position.



AUTOMATIC TRANSMISSION & DUAL CLUTCH TRANSMISSION (DCT)

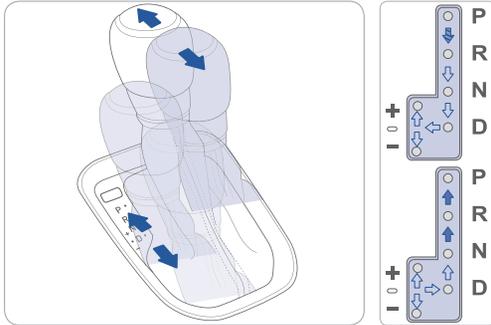

- (⏏) : Depress the brake pedal and press the shift button while moving the shift lever.
- (➡) : Press the shift button while moving the shift lever.
- (⇄) : The shift lever can freely operate.

Manual shift mode

Move the shift lever from D (Drive) into the manual gate to select.
Move the shift lever forward (+) to up shift or rearward (-) to downshift

NOTE: Dual Clutch Transmission (DCT) characteristics
The technology of the Dual Clutch Transmission is different from a traditional automatic transmission:


- The DCT can be thought of as an automatically shifting manual transmission. It gives the driving feel of a manual transmission, yet provides the ease of a fully automatic transmission.
- When you turn the engine on and off, you may hear clicking sounds as the system goes through a self test. This is a normal sound for the DCT.

- When you stop on a hill, if you remove your foot from the brake pedal, the vehicle will remain stationary for approximately two seconds to prevent the vehicle from rolling backwards. If you depress the accelerator pedal during the two second interval, the vehicle will accelerate.
If you wait more than two seconds, the vehicle will enter creep mode and may roll backwards if the hill is steep.
- Engage AUTO HOLD in hilly areas to eliminate vehicle creep or roll back.

Caution

- You should always use the foot brake or AUTO HOLD to hold the car on a hill until you are ready to drive. Using creep mode to hold the car on a hill may damage the clutch.
- If the clutch becomes overheated by excessive use of the clutch to hold on a hill, you may notice a shudder feeling and a blinking display on the instrument cluster. When this occurs, the clutch is disabled until the clutch cools to normal temperatures. If this occurs, pull over to a safe location, shift into P (Park) and apply the foot brake for a few minutes.

PADDLE SHIFTER

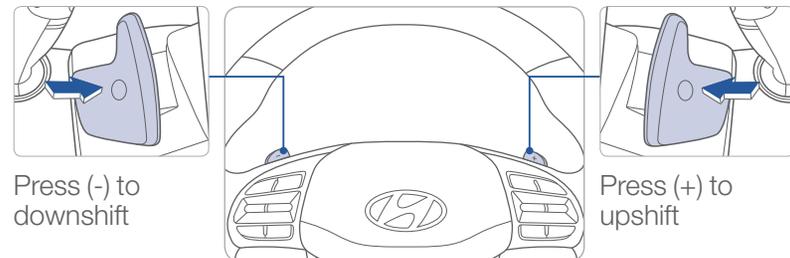


Press (-) to downshift

Press (+) to upshift

The paddle shifter is available when the shift lever is in the D (Drive) position or the manual shift mode. Pull the [+] or [-] paddle shifter once to shift up or down one gear.
Move the shift lever from manual shift mode back to D (Drive) to return to automatic shift mode.

ELECTRONIC STABILITY CONTROL (ESC)

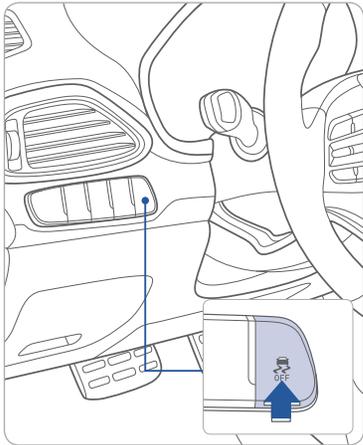


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

ESC automatically selects the ON position when the engine is started.

To turn off Traction Control
Press the ESC OFF button once.

To turn off Traction & Stability Control
Press the ESC OFF button for more than 3 seconds.

LANE KEEPING ASSIST SYSTEM (LKAS)

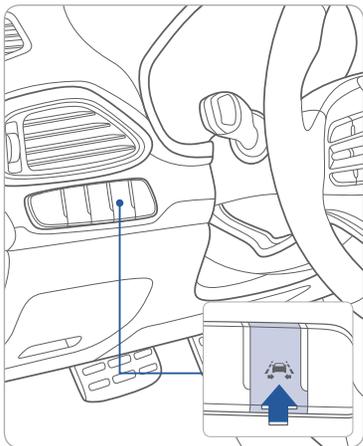


The Lane Keeping Assist System detects lane markers on the road, and assist the driver's steering to help keep the vehicle between lanes.

- To turn on the LKAS, press the LKAS switch.
- To turn off the LKAS, press the switch again.

LKAS operates only while the vehicle speed is over 40mph and below 110mph. For more detailed information, please refer to Section 5 of the Owner's Manual.

BLIND SPOT DETECTION SYSTEM (BSD)

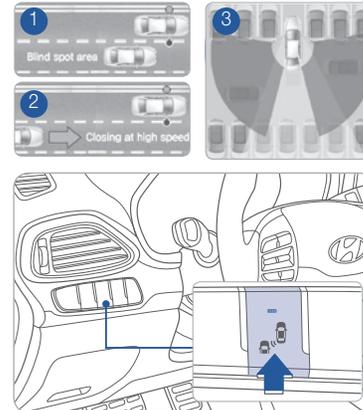

The Blind Spot Detection system uses radar sensors to monitor and warn the driver of an approaching vehicle in the driver's blind spot area.

- 1 Blind Spot Detection (BSD)
 - 2 Lane Change Assist (LCA)
 - 3 Rear Cross Traffic Alert (RCTA)
- To turn on the BSD, press the BSD button (indicator illuminated).
 - BSD and LCA operate in D (Drive) over appx. 20mph.
 - RCTA operates in R (Reverse) under appx. 6mph.
 - To turn off the BSD, press the BSD button again.

Rear Cross Traffic Alert

When the vehicle is in R (Reverse), the system provides an alert if a vehicle or pedestrian is approaching from the sides.

AUTOMATIC EMERGENCY BRAKING (AEB)

The Automatic Emergency Braking (AEB) system is designed to help detect and monitor the vehicle ahead or detect a pedestrian in the roadway through radar signals and camera recognition to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

To activate or deactivate the AEB system, select or deselect: "User Settings → Driving Assist → Automatic Emergency Braking" The AEB deactivates when system setting is deselected. A warning light  will illuminate on the LCD display when the AEB system is deactivated. Please refer to the Owner's Manual for more information.

Caution: Do not try to test the AEB system.



DRIVER ATTENTION ALERT SYSTEM




The Driver Attention Alert (DAA) system displays the condition of the driver's fatigue level and inattentive driving practices. The DAA system monitors the lane markers and driver's inputs to the steering wheel, accelerator pedal and brake pedal.

To turn ON the Driver Attention Alert system, turn on the engine, and then select 'User Settings → Driving Assist → Driver Attention Alert → Normal / Early' on the LCD Display.

The Driver Attention Alert system is operable when driving over 40mph. The system can be reset when the driver turns the engine OFF.

For more detailed information on any of these topics, please refer to Section 5 of the Owner's Manual.

DRIVE MODE INTEGRATED CONTROL SYSTEM

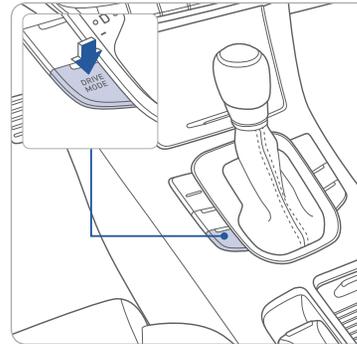

The drive mode may be selected according to the driver's preference or road condition. The system resets to NORMAL mode every time the engine is restarted. Each time you press the button, the drive mode changes as following :



NORMAL mode

Normal mode provides regular daily driving performance with some fuel efficiency. When Normal mode is selected, it is not displayed on the instrument cluster.

SPORT mode

Sport mode focuses on enhanced driving dynamics by adjusting the steering feel along with the responsiveness of the engine and transmission. In Sport mode, the fuel efficiency may decrease.

To improve your fuel efficiency:

- Drive smoothly and accelerate at a moderate rate.
- Avoid heavy accelerations.
- Maintain steady cruising speed.
- Adjust the vehicle speed to the traffic condition and avoid speed changes.
- Avoid unnecessary braking.
- Keep the tires inflated to the recommended tire pressure.
- Do not idle the engine longer than necessary.

HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 20850
Fountain Valley, CA 92728-0850
800-633-5151 consumeraffairs@hmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

ELANTRA GT CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- CONFIRM "GOOD BATTERY" USING CADEX AND STAPLE TEST TICKET HERE
- SET TIRE PRESSURE LF ___ RF ___ RR ___ LR ___
- VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE

Sales Consultant	Date	Sales Manager	Date
Customer			Date
Email			