

## WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

### How to Defrost - page 24

- 1 Press the front defrost button.
- 2 Set to warmest temperature setting.
- 3 Set to highest fan speed.


### Tire Pressure Monitoring System (TPMS) - page 38



LOW TIRE PRESSURE INDICATOR /  
TPMS MALFUNCTION INDICATOR


NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure indicator  to illuminate. Inflate tires according to the Tire Pressure Label located on the driver's side door pillar.

### Windshield Wiper / Washer - page 15

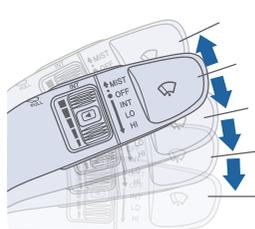

- MIST** • To activate wipers, move the switch down to one of the three positions (INT, LO, HI).
- OFF**
- INT** • To adjust "INT" speed, move switch.
- LO** • To spray washer fluid, pull lever toward you.
- HI** • Push lever up for a single wiper pass.

### Unlocking vehicle - page 02

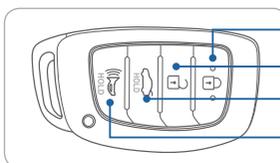

- LOCK
- UNLOCK
- LIFTGATE UNLOCK
- PANIC

### BLUE LINK - pages 31

- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link Users Manual
- Encourage customer to download the MyHyundai with Blue Link app

## MAINTENANCE

Scheduled Maintenance	Normal Usage	Severe Usage*
Engine Oil and Filter*	Replace 7,500 or 12 mos.	Replace 3,750 or 6 mos.
Fuel Additive	Add 7,500 or 12 mos.	Add Same as Normal
Tire Rotation	Perform 7,500	Perform 7,500
Air Cleaner Filter	Inspect 7,500 Replace 30,000	Inspect 7,500 Replace Same As Normal More Frequently
Vacuum Hose	Inspect 7,500	Inspect Same As Normal
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace 15,000	Replace More Frequently
Air Conditioning Refrigerant	Inspect 15,000	Inspect Same As Normal
Brake Hoses & Lines	Inspect 15,000	Inspect Same As Normal
Drive Shafts & Boots	Inspect 15,000	Inspect 7,500
Exhaust Pipe & Muffler	Inspect 15,000	Inspect Same As Normal
Front Disc Brake/Pads, Calipers & Rotors	Inspect 15,000	Inspect More Frequently
Rear Brake Disc/Pads	Inspect 15,000	Inspect More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect 15,000	Inspect More Frequently
Suspension Mounting Bolts	Inspect 15,000	Inspect Same As Normal
Brake Fluid	Inspect 30,000	Inspect Same As Normal
Engine Clutch Actuator Fluid	Replace 22,500	Replace Same As Normal
Crankcase Ventilation Hose	Inspect 30,000	Inspect Same As Normal
Fuel Filter	Inspect 30,000	Inspect Same As Normal
Fuel Lines, Fuel Hoses and Connections	Inspect 30,000	Inspect Same As Normal
Fuel Tank Air Filter	Inspect 30,000	Inspect Same As Normal
Parking Brake	Inspect 30,000	Replace More Frequently
Vapor Hose, Fuel Tank & Fuel Filler Cap	Inspect 30,000	Replace Same As Normal
Spark Plugs	Replace 105,000	Replace More Frequently
HSG Belt	Inspect 7,500 or 12 mos. Replace 60,000 or 48 mos.	Inspect 3,750 or 6 mos. Replace 30,000 or 24 mos.
Coolant	1st Replace 120,000 or 120 mos. Add'l Replace 30,000 or 24 mos.	Replace Same As Normal
Dual Clutch Transmission Fluid	Inspect 37,500	Replace 75,000

\*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.  
\*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

# HYUNDAI IONIQ PLUG-IN

Quick Reference Guide



Roadside Assistance: 1-800-243-7766

Consumer Affairs: 1-800-633-5151

Sirius XM® Radio: 1-800-967-2346

Blue Link: 1-855-2BLUELINK  
(1-855-225-8354)


## **HYUNDAI VEHICLE OWNER PRIVACY POLICY**

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America  
Hyundai Customer Connect Center  
P.O. Box 20850  
Fountain Valley, CA 92728-0850  
800-633-5151 [consumeraffairs@hmausa.com](mailto:consumeraffairs@hmausa.com)

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

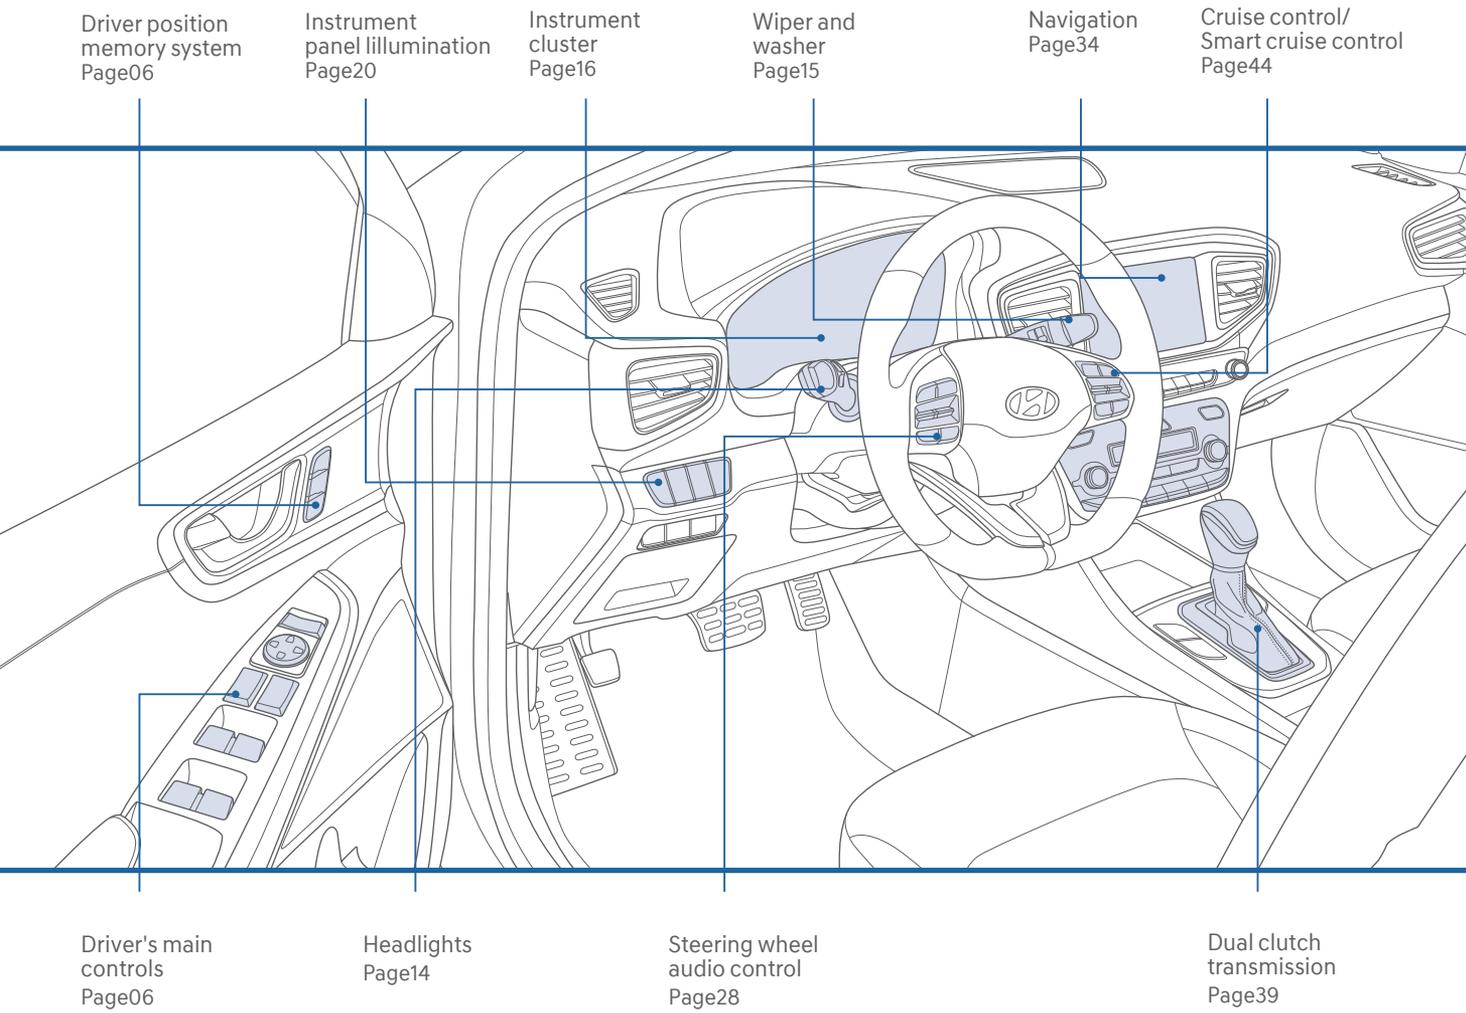

**FEATURES AND CONTROLS**

Automatic climate control	24
Aux. Battery saver+	20
Charging the vehicle	07
Child-protector rear door lock	10
Driver's main controls	06
Dynamic bending light (DBL)	15
Engine start/stop button	03
Fuel filler door	10
Headlights	14
High voltage battery cooling duct	07
Homelink wireless control system	12
Hybrid battery SOC(State Of Charge) gauge	19
Hybrid system gauge	19
Instrument cluster	16
Instrument panel illumination	20
Interior lights	13
LCD display control	22
LCD display modes	22
Liftgate opening	11
Plug-in Hybrid electric vehicle system modes	21
Plug-in hybrid mode	19
Seat-Driver position memory system	06
Seat-Front seat adjustment (manual)	04
Seat-Front seat adjustment (power)	04
Seat-Headrest adjustment	05
Seat-Rear seat folding	05
Seat-Seat belt adjustment (front seat)	05
Seat-Seat warmer (front seats)	05
Smart key	02
Steering wheel adjustments	03
Sunroof	13
Warning and indicators	18
Wiper and washer	15

**MULTIMEDIA**

AUX, USB and iPod® port	35
Blue Link Telematics System	31
Bluetooth® phone call operational tips	28
Bluetooth® phone pairing	26
Clock adjustment	36
Navigation	34
Radio mode	38
Steering wheel audio control	28
Voice recognition tips	30
Wireless cellular phone charging system	37

**DRIVING**


Autonomous emergency braking (AEB)	44
Blind spot detection system (BSD)	43
Coasting guide	41
Cruise control/smart cruise control	44
Dual clutch transmission	39
Electronic stability control (ESC)	42
Hybrid driving tips	46
Lane keeping assist system (LKAS)	42
Paddle shifter	41
Rear view camera	43
Tire pressure monitoring system (TPMS)	38
Virtual engine sound system (VESS)	43

**WARNING!**  
 To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

\* Some vehicles may not be equipped with all the listed features.

## SMART KEY

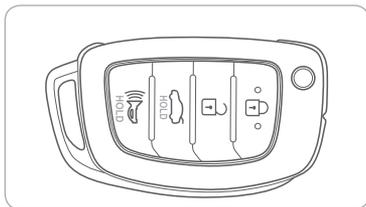

- Lock
- Unlock
- Liftgate Unlock
- Panic

### Door Lock / Unlock

Smart key must be within about 90 feet from the vehicle.


**Press:** Lock once – Lock all doors

Unlock once – Unlock driver door

Unlock Twice – Unlock all doors

\* within 4 seconds after driver door unlock

**NOTE:** User selectable option : see the Owner's Manual for more details.

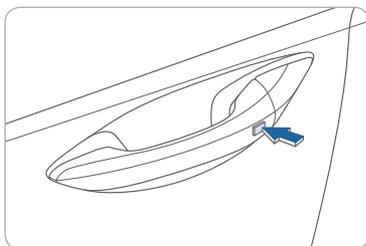

### Driver's door Lock / Unlock

Smart key must be within 28~40in. from the outside door handle.

**Press:** Once - Unlock driver door

Twice - Unlock all doors

\* within 4 seconds after driver door unlock


Third - Lock all doors

### Passenger's door Lock / Unlock

Smart key must be within about 28~40 in. from the passenger's outside door handle.

**Press:** Once - Unlock all doors


Twice - Lock all doors

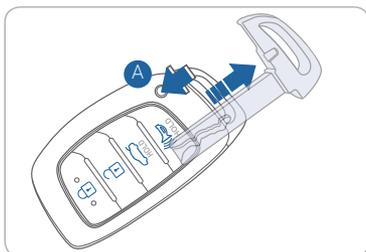

### Removing the mechanical key

Press and hold the release button **A** to remove the mechanical key.

## ENGINE START / STOP BUTTON

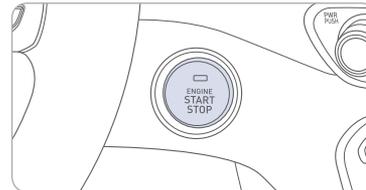

With the ignition OFF and foot OFF of brake pedal, press the Engine Start / Stop button.

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Third for OFF.

To start the vehicle in any mode (including OFF), press the Engine Start / Stop button while pressing down on the brake pedal.

To turn off the vehicle, place the shift lever in P (Park) and press the Engine Start / Stop button.

### Emergency Situations




#### To turn the vehicle off while moving

Press the Engine Start / Stop button for more than 2 seconds or 3 times consecutively within 3 seconds.

#### To restart the vehicle while moving

Press the Engine Start / Stop button with the shift lever in N (Neutral).

## STEERING WHEEL ADJUSTMENTS

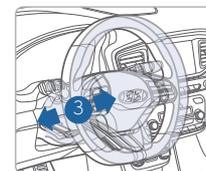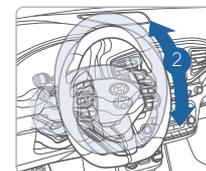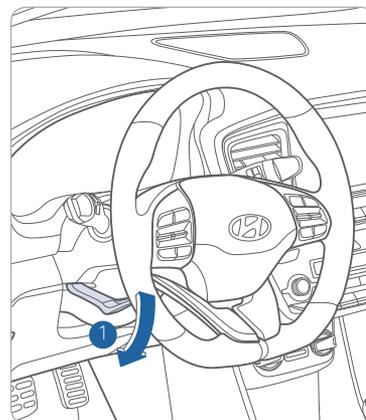

**NOTE:** Do not adjust while driving.

1. Pull the lever **1** down.
2. Set the angle **2** and distance **3**.
3. Pull the lever **1** up to lock position.


## FRONT SEAT ADJUSTMENT (Manual)



Forward and backward ①




Seat height ②

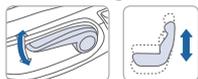

- Push down on the lever several times to lower the seat.
- Pull up the lever several times to raise it.

Seatback angle ③

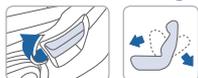

## FRONT SEAT ADJUSTMENT (Power)



Forward and backward ①



Seat height ①




Seatback angle ②



Lumbar support ③





## HEADREST ADJUSTMENT

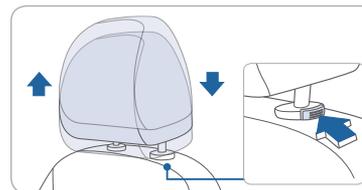


To Raise the Headrest:  
Pull headrest up.

To Lower the Headrest:  
Press lock button while pressing down on headrest.

## SEAT BELT ADJUSTMENT (Front seat)

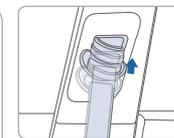
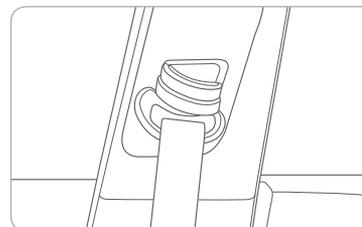


Pull up to raise.

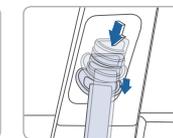


Press button and push down to lower.

## REAR SEAT FOLDING

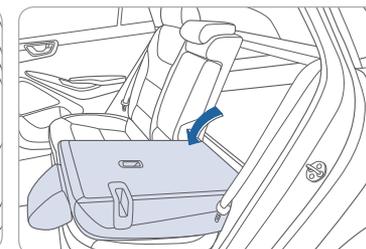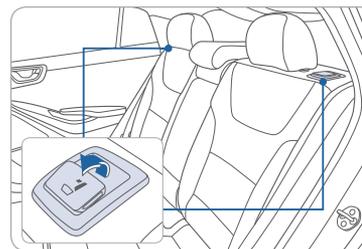

Pull the lever up and fold the seat back down

## SEAT WARMER (Front seat)

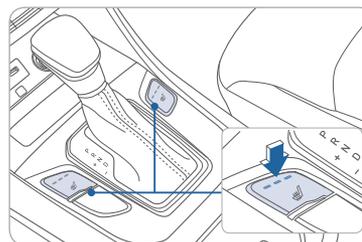


Each time you push the button, the setting is changed as follows:

OFF → HIGH → MIDDLE → LOW

If you want to turn it off immediately, press and hold the button.

## DRIVER POSITION MEMORY SYSTEM

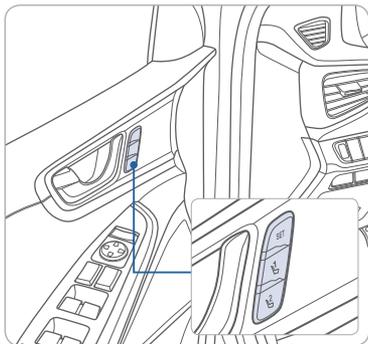

### Storing


1. Adjust the driver's seat position, outside rearview mirror position and instrument panel illumination intensity.
2. Press the SET button. The system will beep once.
3. Press one of the memory buttons (1 or 2) within 4 seconds. The system will beep twice.

**NOTE:** The shift lever must be in P (Park).

### Recalling

Press the desired memory button (1 or 2). The system will beep once.

## DRIVER'S MAIN CONTROLS

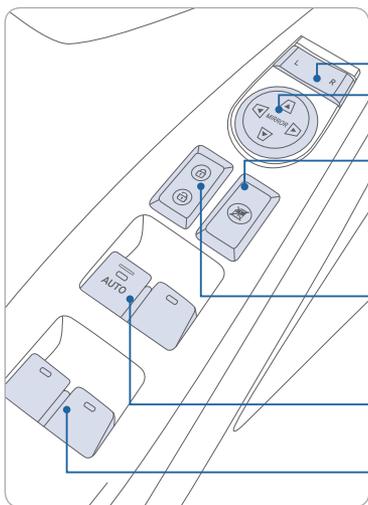

### Side view mirror

- Press the L or R button.
- Adjust the mirror by using the directional switch.

### Power window lock button

Disables the power window switches on the rear passenger doors.


### Door lock

Locks/unlocks all doors.

### Window switches


- Front doors power window switches.
- Rear doors power window switches.

## HIGH VOLTAGE BATTERY COOLING DUCT

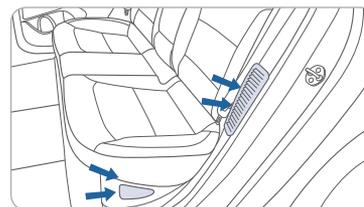


The high-voltage battery cooling duct is located on the left side of the rear seats. Do not obstruct the cooling duct with any objects.

## CHARGING THE VEHICLE

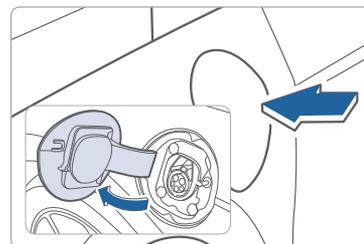


1. Move the shift lever to P (Park), turn off all switches, and turn OFF the vehicle.
2. Press center edge of the charging door to open the charging door. The charging door opens only when the vehicle door is unlocked.

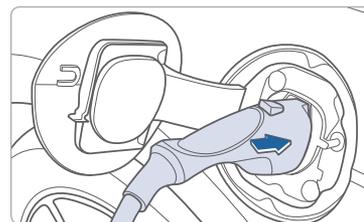


3. Insert the charging connector into the charging inlet until you hear a clicking sound.
4. Connect the charging plug to the electric outlet at a normal charging station to start charging.



5. Check if the charging cable indicator light of the high voltage battery on the instrument cluster is turned ON.

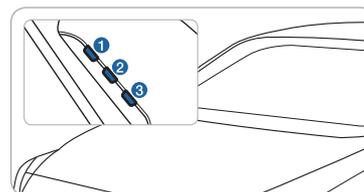


### Unlock Charging Connector in Emergency

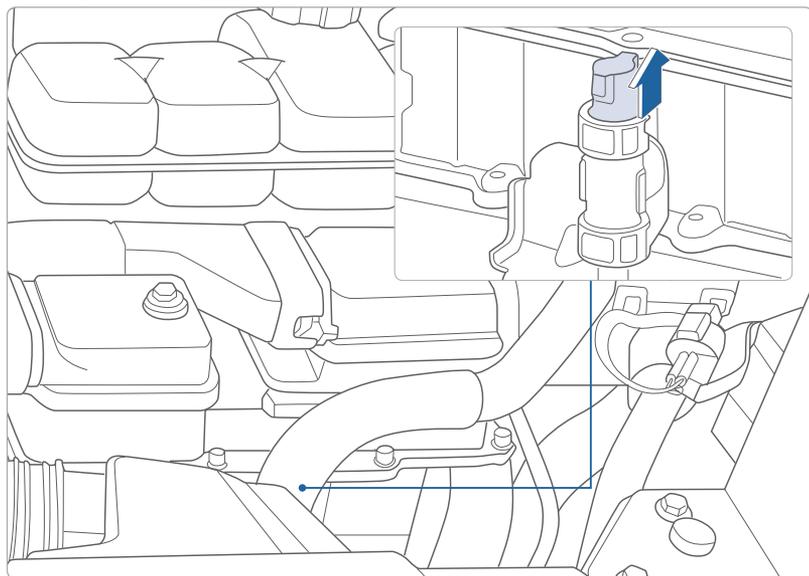


If the charging connector does not disconnect due to battery discharge and failure of the electric wires, open the hood and slightly pull the emergency cable. The charging connector will then disconnect.


### Level 1 Charger

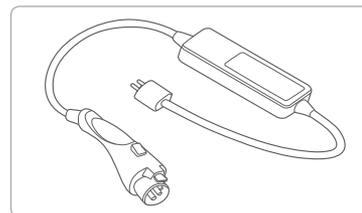


Level 1 charging can be used if a Level 2 charger is not available.

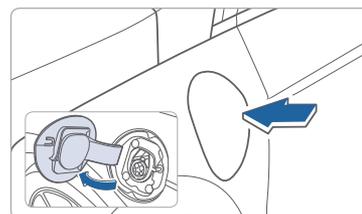


1. Move the shift lever to P (Park), turn off all switches, and turn OFF the vehicle.
2. Press center edge of the charging door to open the charging door. The charging door opens only when the vehicle door is unlocked.

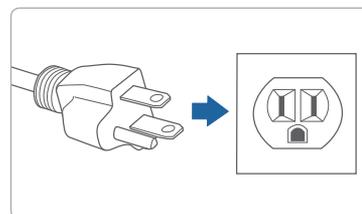

3. Connect the plug to a household electric outlet.
4. Check if the power lamp (green) illuminates on the control box.

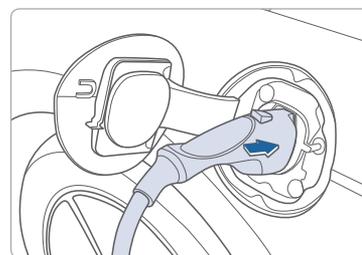


5. Insert the charging connector into the charging inlet until you hear a clicking sound.
6. Charging starts automatically (charging lamp on the control box blinks).

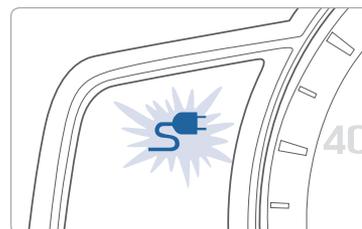

7. Check if the charging indicator light of the high voltage battery on the instrument cluster is turned ON.


## FUEL FILLER DOOR

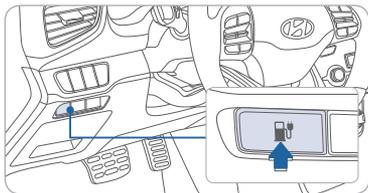

1. Push the fuel filler door opener button.




2. Wait until the fuel tank is depressurized. It may take up to 20 seconds to open the fuel filler door.

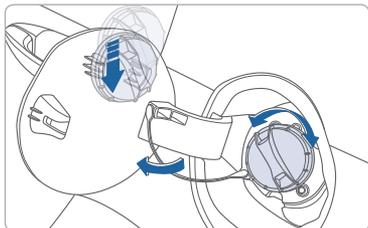

3. Remove the fuel tank cap.

**NOTE:** Tighten the fuel filler cap until one click is heard.

## LIFTGATE OPENING

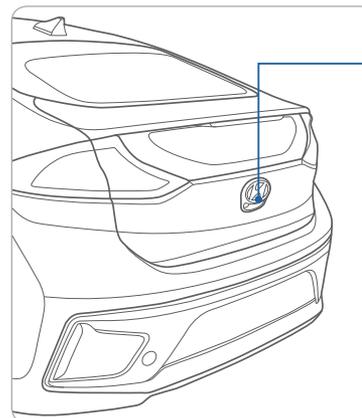


Press to open. Smart key needs to be within the range.



Press and hold button to unlock tailgate.

## CHILD-PROTECTOR REAR DOOR LOCK

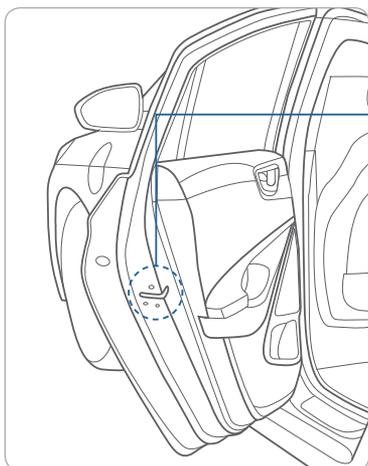


**Lock**  
Insert a key into the hole and turn it to the lock position.



**Unlock**  
Insert a key into the hole and turn it clockwise to the unlock position.

## HOMELINK WIRELESS CONTROL SYSTEM

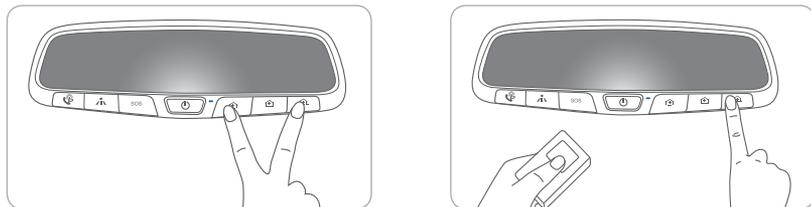


### Standard Programming

To train most devices, follow these instructions:


1. For the first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 buttons, until the indicator light begins to flash (after 10 seconds). Release both buttons. Do not hold the buttons for over 20 seconds.
2. Position the end of your hand-held transmitter 1-3in. (2-8cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and the hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons, the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For more detailed information, please refer to your Owner's Manual, or visit [www.homelink.com](http://www.homelink.com) or call (800) 355-3515.

## SUNROOF

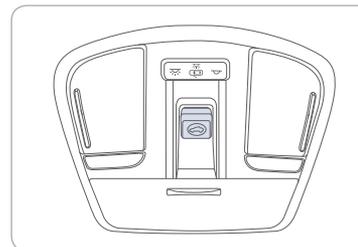


### Sunshade

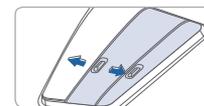

The sunshade will open automatically with the sunroof when the glass panel moves.

### Sliding the Sunroof

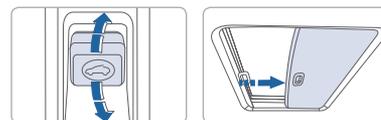


#### To open

Press the switch backward past the detent to open completely.

#### To close

Press the switch forward past the detent to close completely.

### Tilting the Sunroof

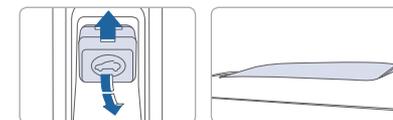


#### To tilt

Press the switch up.

#### To close

Pull the switch forward.

## INTERIOR LIGHTS

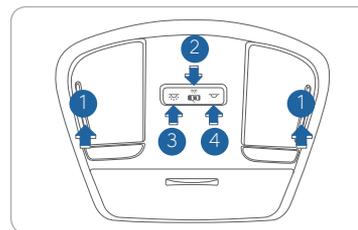

### Front map lamp ①

Push the switch to turn the map lamp on or off.

### Front door lamp ( ) ②

Lights will turn on when any door is open.


### Front door lamp ( ) ③

Push the switch to turn the room lamp on.

### Front room lamp ( ) ④

Push the switch to turn the room lamp off.

## HEADLIGHTS

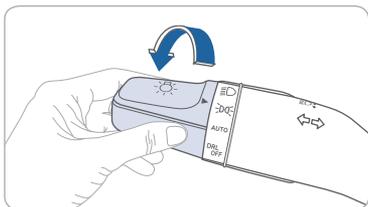


- ▶ Headlights
- ▶ Parking lights
- ▶ **AUTO** Auto headlights
- ▶ **DRL OFF** All Lights Off


### Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press the lock button on the smart key twice to turn the headlights off.


### Turn signals and lane change signals

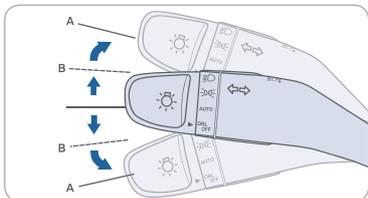

### Flashing headlights

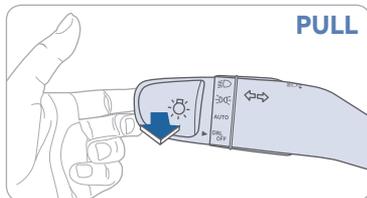


### High beams

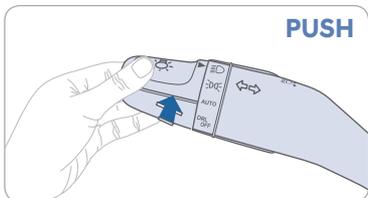

**NOTE:** To turn off the high beam, pull the lever towards you.


## DYNAMIC BENDING LIGHT (DBL)

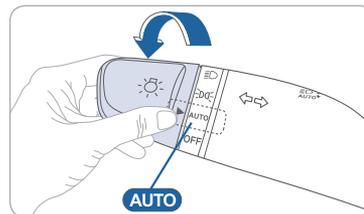

DBL uses the steering angle and vehicle speed to help keep your field of vision wide by swiveling and leveling the headlamp.

- To turn DBL on, turn the knob to the AUTO position when the vehicle is in the ready (🚗) mode.
- To turn DBL off, turn the knob back to the former position.

## WIPERS AND WASHER

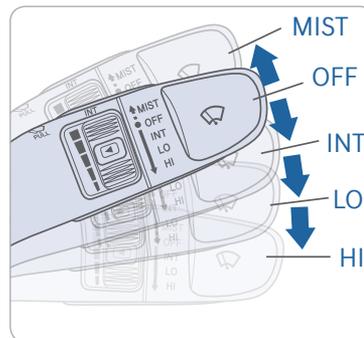


**MIST** - Single wipe

**OFF** - Off

**INT** - Intermittent wipe

**LO** - Low wiper speed


**HI** - High wiper speed

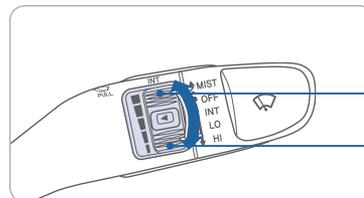

**Intermittent wipe time adjustment**  
Move the speed control switch

Fastest wiper speed

Slowest wiper speed

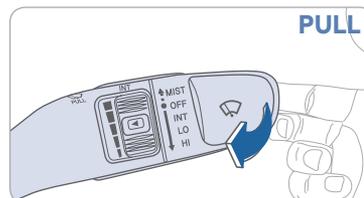

### Windshield Washer

Pull the lever gently towards you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

## INSTRUMENT CLUSTER

### Type A



- ① Power gauge
- ② Speedometer
- ③ Battery SOC (State of Charge) gauge
- ④ Fuel gauge
- ⑤ Warning and indicator lights
- ⑥ LCD display (including Trip computer)

### Type B



**WARNINGS AND INDICATORS**


Ready indicator	Service warning light	EV EV mode indicator
Charging cable connection indicator*	Parking brake & brake fluid warning light	Regenerative brake warning light
Air bag warning light	Seat belt warning light	Electric Power Steering (EPS) warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake force Distribution (EBD) System warning light	Engine oil pressure warning light
Malfunction Indicator Lamp (MIL)	Charging system warning light	Low tire pressure warning light / TPMS malfunction
Low fuel level warning light	Engine coolant temperature warning light	Electronic Stability Control (ESC) OFF indicator light
Master warning light	Electronic Stability Control (ESC) Indicator Light	High beam indicator light
Immobilizer indicator	Turn signal indicator light	CRUISE Cruise indicator
Light ON indicator light	LED Headlight warning light	Exterior light warning light
SET Cruise SET indicator	SPORT SPORT mode indicator	ECO ECO mode indicator
Autonomous Emergency Braking (AEB) warning light	Lane Keeping Assist System (LKAS) indicator	

\*: Plug-in hybrid

Main indicators in cluster for Hybrid Vehicle

- Ready indicator**  
When the vehicle is ready to be driven, this indicator is illuminated. When the ready indicator goes off or blinks, we recommend the vehicle be checked by an authorized HYUNDAI dealer.
- EV mode indicator**  
This indicator illuminates when the vehicle is driven by the electric motor.
- Service warning light**  
If a problem with the hybrid vehicle control system occurs, the service warning light will illuminate. We recommend the vehicle be checked by an authorized HYUNDAI dealer.
- Charging cable connection indicator (Plug-in Hybrid)**  
This indicator illuminates in red when the charging cable is connected.

**HYBRID SYSTEM GAUGE**

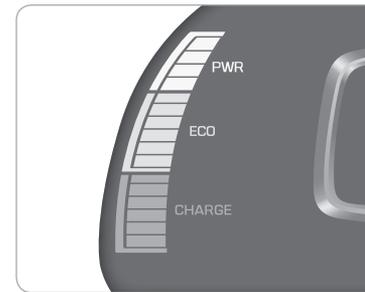

The hybrid system gauge indicates whether the current driving condition is fuel efficient or not.

**CHARGE**

Shows that the energy made by the vehicle is being converted to electrical energy. (Regenerated energy)


**ECO**

Shows that the vehicle is being driven in an Eco-friendly manner.

**POWER**


Shows that the vehicle is exceeding the Eco-friendly range.

**HYBRID BATTERY SOC (STATE OF CHARGE) GAUGE**

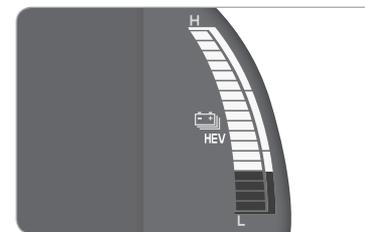

This gauge indicates the remaining hybrid battery power. If the SOC is near the "L (Low)" level, the vehicle automatically operates the engine to charge the battery.

**PLUG-IN HYBRID MODE**

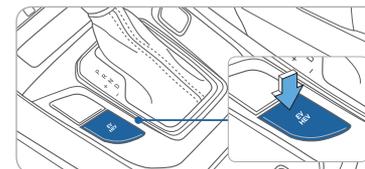

**EV/HEV Button**

Press the [EV/HEV] button to change the plug-in hybrid system modes, between Electric (CD) mode and Hybrid (CS) mode.



**CD (Charge Depleting, Electric) mode**


The high-voltage (hybrid) battery is used to drive the vehicle.




**CS (Charge Sustaining, Hybrid) mode**

The high-voltage (hybrid) battery and gasoline engine is used to drive the vehicle.


## INSTRUMENT PANEL ILLUMINATION

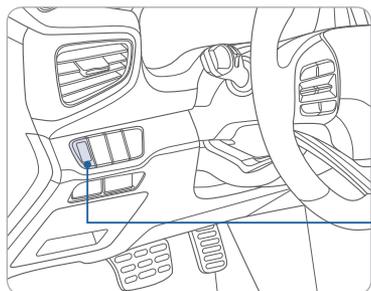

Press the illumination control button to adjust the instrument cluster illumination brightness.

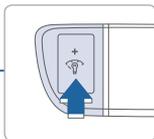


## AUX. BATTERY SAVER+

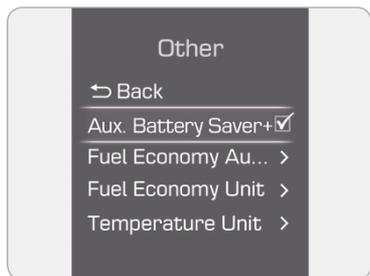

The Aux. Battery Saver+ function monitors the charging status of the 12 V auxiliary battery. If the auxiliary battery level is low, the main high voltage battery charges the auxiliary battery. The default setting for Aux. Battery Saver+ is ON. The driver may cancel the function. Go to 'User Settings → Other Features → Aux. Battery Saver+'.



The message is displayed if the Aux. Battery Saver+ function was activated.

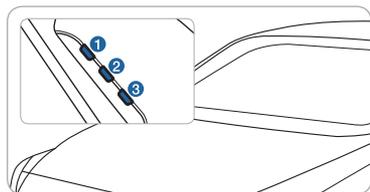

When the function is activating the third Charging Indicator Lamp will blink.


**NOTE:** Do not touch the high voltage electric wire (orange), connector, and all electric components and devices when the function is activating.

## PLUG-IN HYBRID ELECTRIC VEHICLE SYSTEM MODES

### Type A



### Type B

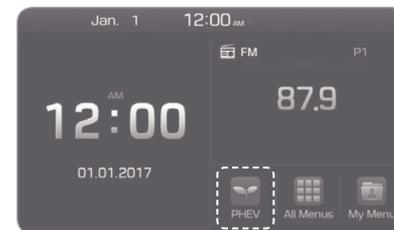

Select the PHEV menu on the home screen, or select the PHEV menu from the main menu.

### Type A




### Type B




- 1 ECO driving : Displays a real-time image for fuel economy or ECO level based on the user's selection.
- 2 Energy information : Displays a real-time image showing information about the battery and the flow of energy based on the user's selection.
- 3 EV range : Displays the possible driving distance on a map (for type B).
- 4 Charging settings : Goes to the menu to set times for charging.
- 5 Charging stations : Displays a list of EV charging stations nearby.
- 6 Gas stations : Displays a list of gas stations nearby.
- 7 Settings : Goes to the settings menu to select the real-time information that will be displayed on the home screen.

## LCD DISPLAY CONTROL

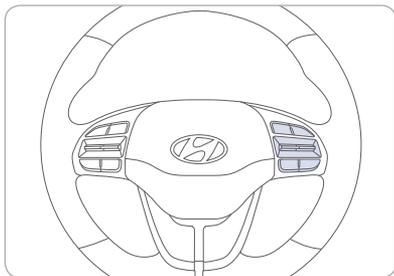


- 1  : MODE button for changing modes
- 2  : MOVE switch for changing items
- 3 **OK** : SELECT / RESET button for setting or resetting the selected item


### Type A

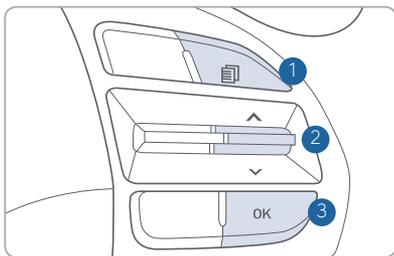

### Type B

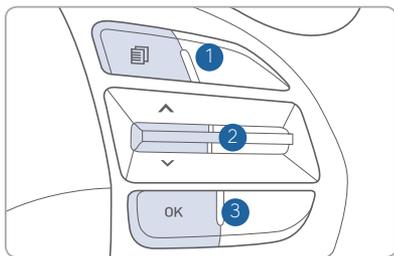

### Type C

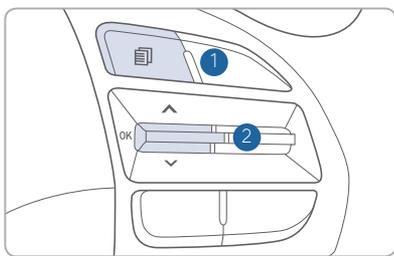

## LCD DISPLAY MODES


### Type A

Modes	Symbol	Description
Trip Computer		This mode displays driving information like the tripmeter, fuel economy, etc.
Turn By Turn (TBT)		This mode displays the state of the navigation.
SCC / LKAS		This mode displays the state of the Smart Cruise Control (SCC) and Lane Keeping Assist System (LKAS).
A / V		This mode displays the state of the A / V (Audio / Video) system.
Information	 or  or 	This mode displays the service interval (mileage or days) and warning messages related to the Blind Spot Detection system, etc.
User Settings		In this mode, you can change settings of the doors, lamps, etc.

### Type B

Modes	Symbol	Explanation
Trip Computer		This mode displays driving information such as the tripmeter, fuel economy, etc.
Turn By Turn (TBT)		This mode displays the state of the navigation.
Assist		<ul style="list-style-type: none"> <li>• This mode displays the state of the Smart Cruise Control (SCC) and Lane Keeping Assist System (LKAS).</li> <li>• This mode displays information related to Tire Pressure.</li> </ul>
User Settings		In this mode, you can change settings of the doors, lamps, etc.
Warning		This mode displays warning messages related to the Blind Spot Detection system, etc.

## CLIMATE CONTROL

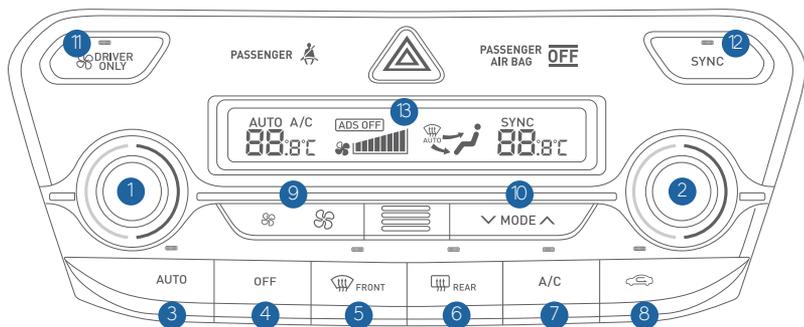

- |  |                                      |
|--|--------------------------------------|
| ① Driver's temperature control knob    | ⑧ Air intake control button          |
| ② Passenger's temperature control knob | ⑨ Fan speed control button           |
| ③ AUTO (automatic control) button      | ⑩ Mode selection button              |
| ④ OFF button                           | ⑪ Driver only button                 |
| ⑤ Front windshield defrost button      | ⑫ SYNC button                        |
| ⑥ Rear window defrost button           | ⑬ Climate control information screen |
| ⑦ Air conditioning button              |                                      |


### DEFOGGING / DEFROSTING



1. Press the front windshield defrost control button.




2. Set the temperature control to the warmest setting.

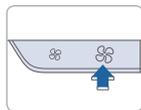

3. Set the fan speed to the highest setting.

**NOTE:** To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

### AUTOMATIC HEATING / AIR CONDITIONING

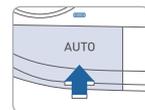


1. Press the AUTO button.



2. Set the temperature control to the desired setting.

Controls the modes, fan speeds, air intake and air-conditioning automatically.


### SYSTEM OFF

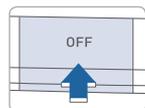

Pressing the OFF button will place the system in the OFF mode.

- Blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.


### MODE SELECTION

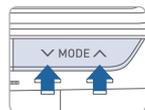

Changes the direction of the air flow as follow.



### AIR INTAKE CONTROL

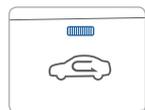


Recirculated air position




Outside (fresh) air position

### SYNC BUTTON

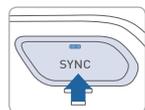


Press the SYNC button to adjust the driver and passenger side temperature and air flow direction equally.

### DRIVER ONLY

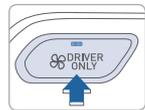

Only the driver's vent will operate if enabled (LED on).



### REAR WINDOW DEFROSTER

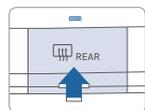

Press to activate/deactivate the rear window defroster.

## BLUETOOTH® PHONE PAIRING

### With Display Audio

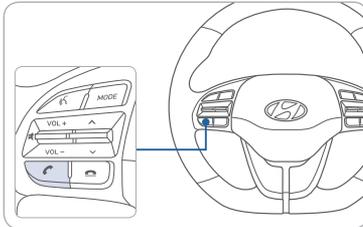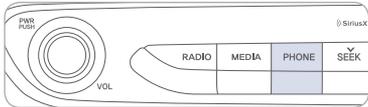

1. Press the PHONE button in the head unit or CALL button in the steering wheel remote control.



2. Search for the device name as displayed on your mobile phone and pair.




3. Confirm the 6-digit passkey displayed on the audio screen.

4. Press OK in your Bluetooth device.
5. Pairing is complete.

**NOTE:** Vehicle must be parked to complete pairing process.


### With Navigation

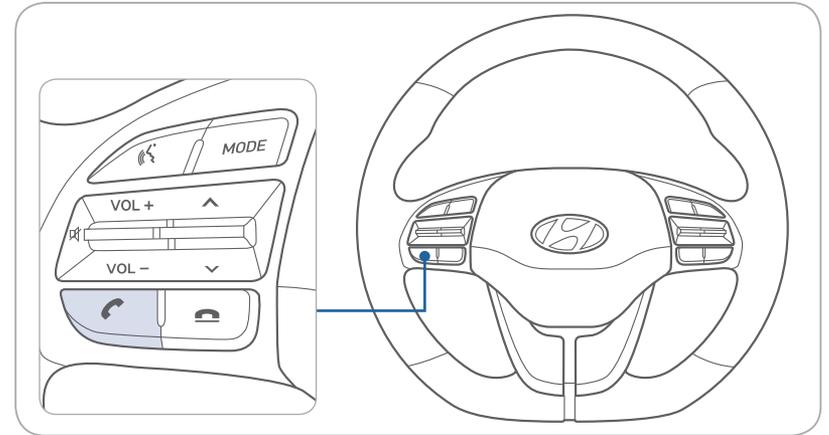

1. Press the CALL button in the steering wheel remote control.
2. Pair your car after your mobile phone detects the Bluetooth device.
3. Enter the passkey or accept the authorization popup.
4. Connect Bluetooth.

**NOTE:** Vehicle must be parked to complete pairing process.

## STEERING WHEEL AUDIO CONTROL

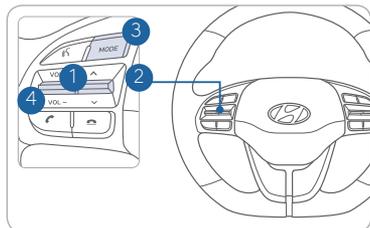


- 1 **VOLUME (VOL + / -)**  
Increases or decreases the volume.
- 2 **SEEK / PRESET (▲ / ▼)**  
Changes station.
- 3 **MODE**  
Changes the audio source.
- 4 **MUTE (🔇)**  
Mute the sound.

## BLUETOOTH® PHONE CALL OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the overhead console and/or when the air conditioning fan is at the max speed.

### Steering wheel bluetooth® control

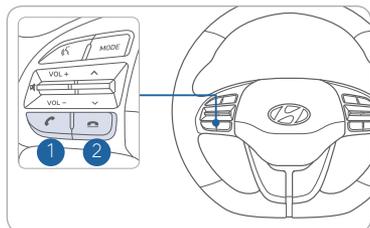

- 1 **CALL**  
Places and transfers calls.
- 2 **END**  
Ends calls or cancels functions.

### To Answer a Call:

- Press the button on the steering wheel.

### To Reject a Call:

- Press the button on the steering wheel.

### To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

### To Transfer a Call to the Phone


#### (Private call on handset – do not use while driving):

- Press and hold the button on the steering wheel until the audio system transfers a call to the phone.

### To Finish a Call:

- Press the button on the steering wheel.

### Making a call using voice recognition:

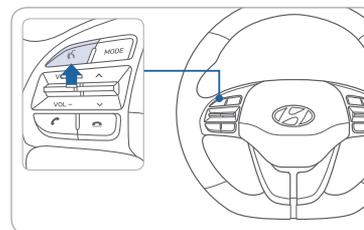

Press button on the steering wheel control to activate voice recognition.

Press and hold button to end voice recognition.

### Calling by Name:

1. Press the button.
2. Say the following command:
  - “Call <John Smith>”: Connects the call to John.
  - “Call <John Smith> <on Mobile / at Work / at Home / on Other>”: Connects the call to John’s Mobile, Work, Home, or Other phone number.

### Dialing by Number:

1. Press the button.
2. Say “Dial Number.”
3. Say desired phone number. For complete list of commands, refer to your Owner’s Manual.

**NOTE:** Android Auto and Apple CarPlay are also available.

## VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.


Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing in a tunnel or when driving on rugged and uneven roads.

### Quick reference on using voice commands

To start voice command, press the  key, the following commands are available:

Command	Function
Call	Displays downloaded Contacts.
Call <Name>	Calls <Name> saved in Contacts.
Dial Number	Displays a screen where you can say a phone number to dial.
Dial <Phone #>	You can directly say the number to call. ex) Dial 111 555 1234

## BLUE LINK TELEMATICS SYSTEM

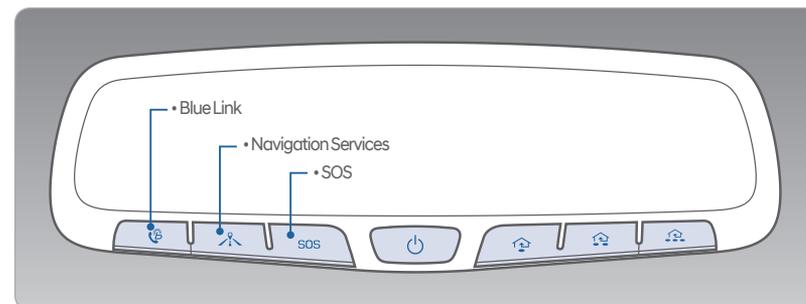

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the  button for access to the voice-response menu of services.

- You can say:
  - Service Link
  - Roadside Assistance
  - Blue Link Account Services
  - Help
  - Cancel

Press the  button for Destination Search Powered by Google™.

- For vehicle equipped with factory-installed navigation systems.
- For non-navigation, this button functions with Android Auto or Apple Carplay.

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User's Manual for detailed information on system operation.


For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google™ is a registered trademark of Google, Inc.



## RADIO MODE

### Display Audio

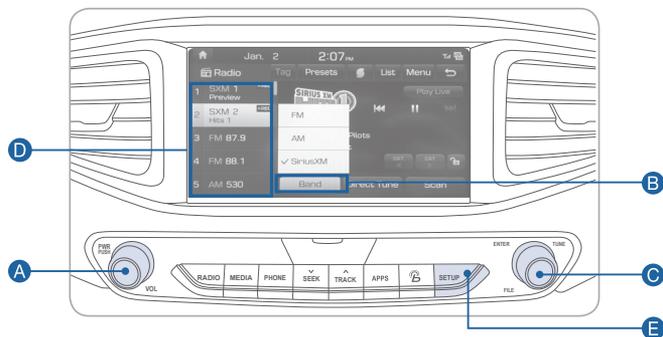

Press POWER button **A** to turn radio on.

#### TUNING/LISTENING TO CHANNELS

1. Press BAND button **B** on screen to select FM/AM/SiriusXM®.
2. ROTATE TUNE knob **C** to desired channel.

**NOTE** A clear view of the southern sky helps ensure SiriusXM® radio reception.

#### SETTING PRESET MEMORY BUTTONS

Press and hold any preset button **D** on the screen until an audible beep is heard to store current channel.

#### ADJUSTING THE SOUND CONTROL

1. Press the SETUP button **E** and press the SOUND button on screen to display the Sound Settings screen.
2. Touch on-screen arrows to adjust desired setting.



### Navigation



Press POWER button **A** to turn radio on.

#### TUNING/LISTENING TO CHANNELS

1. Press BAND button **B** on screen to select FM/AM/SiriusXM®.
2. ROTATE TUNE knob **C** to desired channel.

**NOTE** A clear view of the southern sky helps ensure SiriusXM® radio reception.

#### SETTING PRESET MEMORY BUTTONS

Press and hold any preset button **D** on the screen until an audible beep is heard to store current channel.

#### ADJUSTING THE SOUND CONTROL

1. Press the SETUP button **E** and press the SOUND button on screen to display the Sound Settings screen.
2. Touch on-screen arrows to adjust desired setting.



## NAVIGATION

### Basic features on map screen



- 1 Place button : Move to the Place menu.
- 2 Home button : Go to the Home screen.
- 3 Map button : Change the map view mode.
- 4 NAV volume button : Adjusts the volume.
- 5 Zoom in button : Zoom in the map.
- 6 Map scale display : Set the zoom level automatically according to the guidance.
- 7 Zoom out button : Zoom out the map.
- 8 Quick menu button : Quick Menu for destination selection and options.
- 9 Map scroll mark : Touch to scroll the map.
- 10 Guidance button : Start the preferred navigation route to selected location.
- 11 Route button : Choose the preferred navigation route to selected location.
- 12 Waypoint button : Set a waypoint to the current route.
- 13 Save button : Save frequently used address to address book.
- 14 POI button : Find a POI(Point Of Interest) around the current position.
- 15 Vehicle position mark : View the vehicle's current position on the map screen.


### Destination search screen



Press the NAV button in the navigation head unit. Select the [Destination] tab and find a destination by using the [Destination] menu.

- 1 Address : Set destination by address search.
- 2 Previous destinations : Select from previously inputted addresses and POIs.
- 3 Local search : Run Google Local Search.
- 4 POI categories : Select the desired item in the sub-categories.
- 5 Charging stations : Select the desired destinations among the searched charging stations.
- 6 Restaurants : Select the desired destination among the searched restaurants.
- 7 Emergency : Select the desired destination among the searched emergency facilities.
- 8 Address Book : Search the destination with the address book.
- 9 Coordinates : You can find a destination by entering the coordinates of latitude and longitude.

## AUX, USB AND iPod® PORT

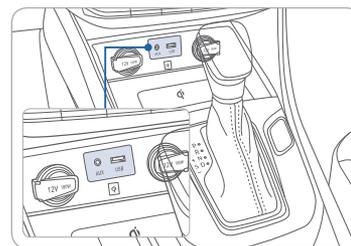


Use the input jack to connect an external audio device and listen to it through the audio system in your vehicle.

iPod® is a trademark of Apple, Inc.

## CLOCK ADJUSTMENT

### With Audio

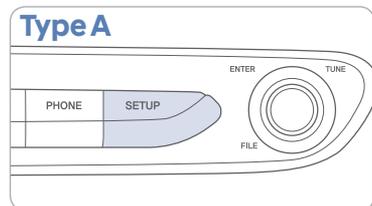

1. Press the SETUP button on the audio head unit.
2. Select Date/Time.

#### Set Time


Set the time displayed on the audio screen.

#### Time Format

Choose between 12-hour and 24-hour time formats.

#### Set Date

Set the date displayed on the audio screen.

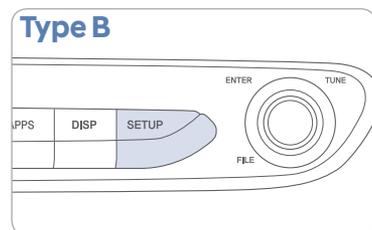

1. Press the SETUP button on the audio head unit.
2. Select Date/Time.
3. Select the desired items.

#### Date/Time

If you tap any value, you can directly enter the number in the screen.


#### 24 Hours

The time display is set in 24-hour format.

#### Daylight Saving Time

The daylight saving time(DST) is applied.

### With Navigation

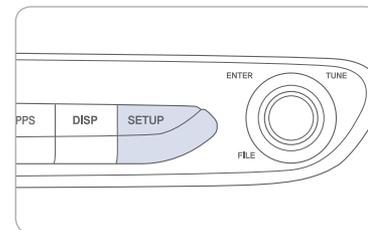

1. Press the SETUP button on the navigation head unit.
2. Select Date/Time.
3. Select the desired items.

#### Date/Time

Using the arrow buttons, you can change the values. If you tap any value, you can directly enter the number in the screen.

#### GPS time

Displays time according to the received GNSS(Global Navigation Satellite System) time.


#### Daylight Saving Time

The daylight saving time(DST) is applied.

#### 24 Hours

The time display is set in 24-hour format.

## WIRELESS CELLULAR PHONE CHARGING SYSTEM

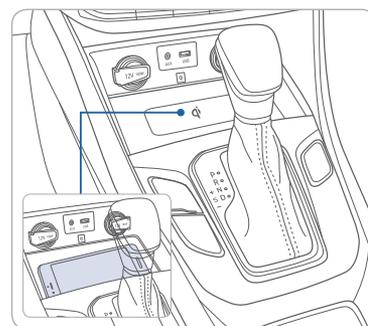


There is a wireless cellular phone charging system inside the front console. The system operates with all doors closed, and the Engine Start/Stop button in the ACC/ON/START position.

**NOTE:** The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).

**NOTE:** Do not place any metallic items such as coins, keys on the charger. Avoid to put credit cards, etc. on the charger as they might get damaged by the magnetic field.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)

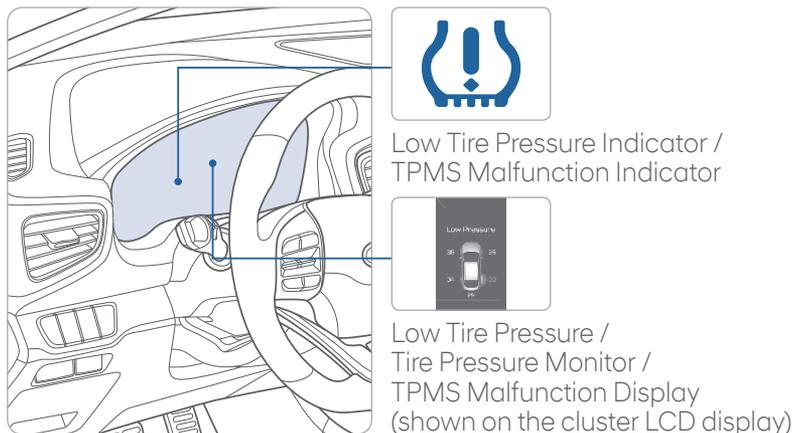

### LOW TIRE PRESSURE INDICATOR


Illuminates if one or more tires are significantly under-inflated.

### TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, we recommend the vehicle be checked by an authorized HYUNDAI dealer.


### LOW TIRE PRESSURE / TIRE PRESSURE MONITOR / TPMS MALFUNCTION DISPLAY(LCD DISPLAY)

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator (⚠️) will illuminate and the LCD display will indicate Tire(s) requiring air.

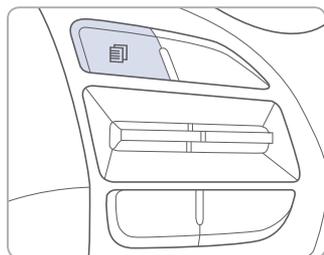

- \* To check the tire pressure
1. Press the Mode button on the steering wheel.
  2. Go to the 'Information' mode (cluster type A) or 'Assist' mode (cluster type B) on the LCD display.
  3. The tire pressure will be displayed after the vehicle is driven for 3 to 5 minutes.

## DUAL CLUTCH TRANSMISSION

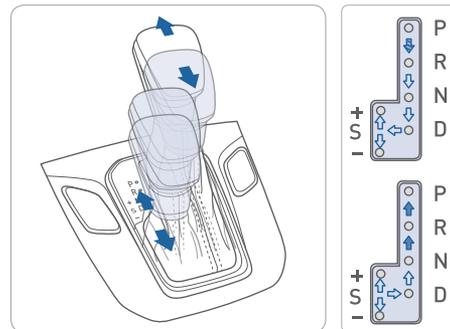


(↕️) : Depress the brake pedal and press the shift button while moving the shift lever.

(➡️) : Press the shift button while moving the shift lever.

(↔️) : The shift lever can freely operate.

### Manual shift mode

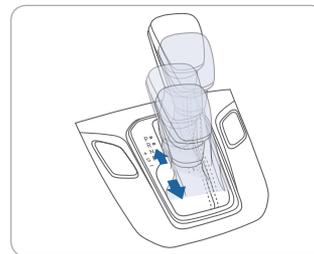

Shift the lever from D into the manual gate to activate manual shift mode. Manual shift mode is a recalibrated automatic mode that will hold gears longer and downshift at higher RPM for a more dynamic driving style. Gasoline engine will be engaged more frequently.

### NOTE: Dual Clutch Transmission characteristics

The new technology of the Dual Clutch Transmission is different from a traditional automatic or manual transmission:


- The Dual Clutch Transmission is an automatically shifting manual transmission.
- Dual Clutch Transmission utilizes two clutches connected to a computer-controlled manual gearbox. It provides the convenience of a transmission that shifts automatically, with the efficiency of a manual transmission.
- When you turn the engine on and off, you may hear clicking sounds as the system goes through a self test. This is a normal sound for the Dual Clutch Transmission.

- When you stop on a hill, if you remove your foot from the brake pedal, the vehicle will remain stationary for approximately two seconds to prevent the vehicle from rolling backwards. If you depress the accelerator pedal during the two second interval, the vehicle will accelerate. If you wait more than two seconds, the vehicle will enter creep mode and may roll backwards if the hill is steep.

**Caution**

- You should always use the foot brake to hold the car on a hill until you are ready to drive. Using creep mode to hold the car on a hill may damage the clutch.
- If the clutch becomes overheated by excessive use of the clutch to hold on a hill, you may notice a shudder feeling and a blinking display on the instrument cluster. When this occurs, the clutch is disabled until the clutch cools to normal temperatures. If this occurs, pull over to a safe location, shift into P (Park) and apply the foot brake for a few minutes.

**ECO/SPORT mode**

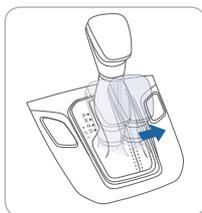

**ECO mode**


If you drive the vehicle with the shift lever in D (Drive), the vehicle will automatically change to ECO mode. The ECO indicator will illuminate on the instrument cluster. When driving in ECO mode, the vehicle improves fuel efficiency for eco-friendly driving.



**SPORT mode**

If you drive the vehicle with the shift lever in S (Sport), the vehicle will automatically change to SPORT mode. The SPORT indicator will illuminate on the instrument cluster. When driving in SPORT mode, the vehicle provides more responsive powertrain performance, sporty but firm handling, and the fuel efficiency may decrease.

**PADDLE SHIFTER**

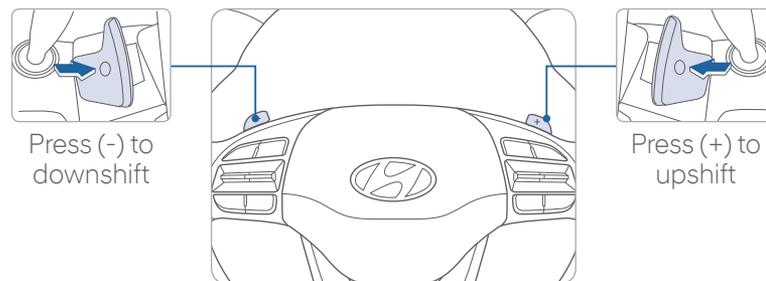

The paddle shifter is available when the shift lever is in the D (Drive) or S (Sport) position, or the manual shift mode. It will operate when the vehicle speed is more than 3mph. Pull the [+] or [-] paddle shifter once to shift up or down one gear.

**COASTING GUIDE**



Type A




Type B

**Vehicle with factory installed navigation system:**

After an address is inputted and navigation is in progress, the coasting guide informs the driver when to take the foot off from the accelerator by anticipating a decelerating event based on the analysis of driving routes and road conditions of the navigation. This helps increase fuel efficiency by allowing coasting down the road with EV motor only.

To activate the system, select "User Settings → Driving Assist → Coasting Guide". The driving speed should be between 25 mph and 100 mph.

## ELECTRONIC STABILITY CONTROL (ESC)

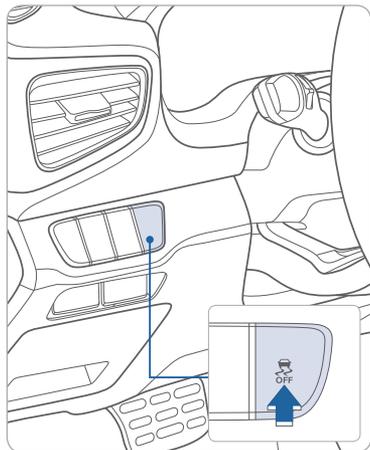


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

ESC automatically selects the ON position when the engine is started.

**To turn off Traction Control**  
Press the ESC OFF button shortly.

**To turn off Traction & Stability Control**  
Press the ESC OFF button for more than 3 seconds.

## LANE KEEPING ASSIST SYSTEM (LKAS)

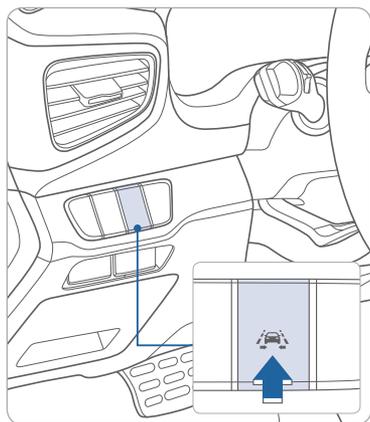



The Lane Keeping Assist System detects lane markers on the road with a camera and assists the driver's steering to help keep the vehicle between lanes.

The system operates when the vehicle speed is between 40 mph and 110 mph

- To turn on the LKAS, press the LKAS switch
- To turn off the LKAS, press the switch again.

**NOTE:** In some circumstances, LKAS may not activate as intended. ex: blurred lane condition, backlight, heavy fog, reflection of light due to water on the road, sharp bend in the road, etc. Please refer to the Owner's Manual for more information.

## REAR VIEW CAMERA

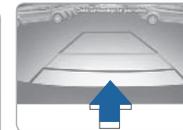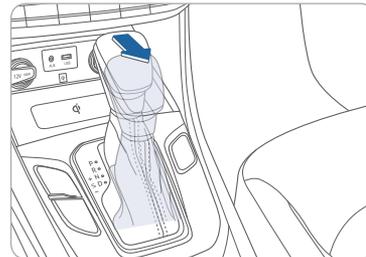

When the shift lever is moved to R (Reverse), rear view camera displays the area behind the vehicle.

## VIRTUAL ENGINE SOUND SYSTEM (VESS)


The Virtual Engine Sound System generates engine sound for pedestrians to hear vehicle sound because there is limited sound while electric power is used.

## BLIND SPOT DETECTION SYSTEM (BSD)



The BSD (Blind Spot Detection) system uses a radar sensor to alert the driver while driving. It monitors the rear area of the vehicle and provides information to the driver.

- 1 Blind Spot Detection
- 2 Lane Change Assist
- 3 Rear Cross Traffic Alert

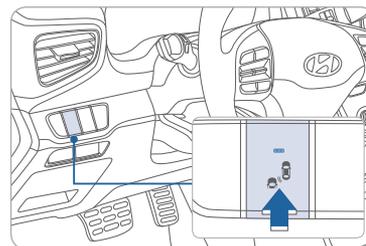

- To turn on the BSD, press the BSD button (indicator illuminated).
- To turn off the BSD, press the BSD button again.


The system will activate if vehicle speed exceeds 20 mph.

### Rear Cross Traffic Alert


When the vehicle is in R (Reverse), the system provides an alert if a vehicle is approaching from the sides.

## AUTONOMOUS EMERGENCY BRAKING (AEB)

### Type A

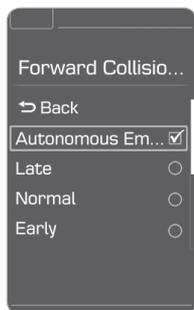

### Type B

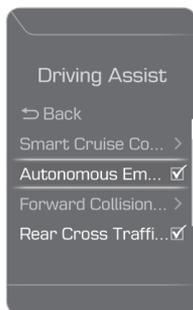

The Autonomous Emergency Braking (AEB) system is designed to detect and monitor the vehicle ahead or detect a pedestrian in the roadway through radar signals and camera recognition to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

To activate the system,

**Cluster type A :** Select “User Settings → Driving Assist → Forward Collision Warning → Autonomous Emergency Braking”


**Cluster type B :** Select “User Settings → Driving Assist → Autonomous Emergency Braking”

The system deactivates, when the system setting is canceled.

### NOTE:


- The main role of AEB is to assist braking but not to automatically stop the vehicle by braking.
- If vehicle speed is high, a crash may occur even when AEB was activated.

## CRUISE CONTROL / SMART CRUISE CONTROL

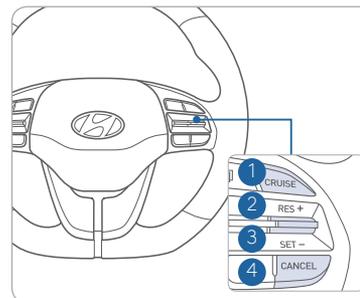



The Cruise Control system allows you to program the vehicle to maintain a constant speed without depressing the accelerator pedal.

- 1 To turn On/Off cruise control.
- 2 Toggle switch UP to Resume or Increase the cruise control speed.
- 3 Toggle switch DOWN to Set or Decrease the cruise control speed.
- 4 To Cancel the Cruise Control.

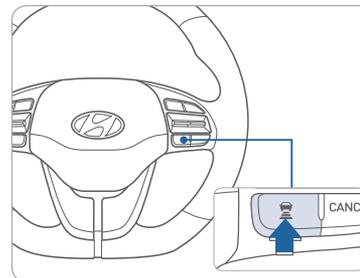

### Setting Vehicle Distance (Smart Cruise Control only)

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal. The vehicle-to-vehicle distance **1** will automatically activate when you set the cruise speed **2**. Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:

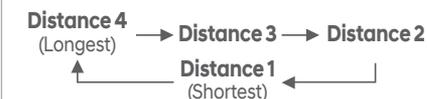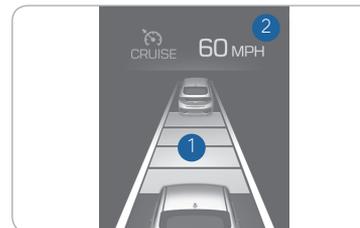

### Setting Cruise Control

1. Press the “CRUISE” button **1** to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle “-SET” switch (3) DOWN to set cruising speed.

### Adjusting the vehicle speed

1. Toggle “+RES” switch **2** UP to increase cruising speed.
2. Toggle “-SET” switch **3** DOWN to decrease cruising speed.

**Note** Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 10 mph.

### To Cancel Cruise Control

Press the “CANCEL” button **4** or depress the brake pedal.



