

VOICE RECOGNITION TIPS (If equipped)

BLUETOOTH®
Command **Example**
 Dial <Phone #> — “Dial 7-1-4-9-6-5-3-0-0”
 Call <Name> — “Call John Smith”


Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:
 • Use full names instead of short or single-syllable names (“John or Dad”)
 • Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

NAVIGATION
Command **Example**
 Find Address — “1-2-3-4-5 1st Street, <House #, Street, City, State>
 Find <POI Name> — “Find McDonald’s”

Located on Rearview Mirror
DESTINATION SEARCH BY VOICE
Command **Example**
 Find <POI Name> — “Find Lowe’s near me”
 <POI Name> — “Starbucks”

- HOW TO DEFROST - page 19
 - 1 Press the front defrost button.
 - 2 Set to warmest temperature setting.
 - 3 Set to highest fan speed.

WINDSHIELD WIPER / WASHER - page 10

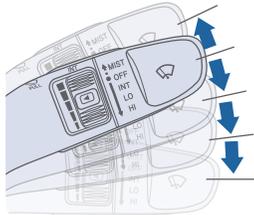

- MIST** • To activate wipers, move the switch down to one of the three positions (INT, LO, HI).
- OFF**
- INT** • To adjust "INT" speed, move switch.
- LO** • To spray washer fluid, pull lever toward you.
- HI** • Push lever up for a single wiper pass.


- INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT
- SET FIRST SERVICE APPOINTMENT
- REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE
- WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?
- BLUE LINK
 - Assist with creating MyHyundai.com account
 - Assist with Blue Link enrollment
 - Show Blue Link User's Manual
 - Encourage customer to download the MyHyundai with Blue Link app

Sales Consultant	Date	Sales Manager	Date
Customer		Date	
Email			

MAINTENANCE				
Scheduled Maintenance	Normal Usage		Severe Usage*	
Tire Rotation	Perform	5,000	Perform	5,000
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	15,000	Replace	More Frequently
Air Conditioning Refrigerant	Inspect	15,000	Inspect	Same As Normal
Brake Hoses & Lines	Inspect	15,000	Inspect	Same As Normal
Drive Shafts & Boots	Inspect	15,000	Inspect	7,500
Front Disc Brake/Pads, Calipers & Rotors	Inspect	15,000	Inspect	More Frequently
Rear Brake Disc/Pads	Inspect	15,000	Inspect	More Frequently
Steering Gear Box, Linkage & Boots/ Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	15,000	Inspect	More Frequently
Suspension Mounting Bolts	Inspect	15,000	Inspect	Same As Normal
Brake fluid	Inspect	30,000	Inspect	Same As Normal
Coolant	1st Replace 120,000 or 120 mos. Add'l Replace 30,000 or 24 mos.		Replace	Same As Normal
Reduction Gear Fluid	Inspect	37,500 or 30 mos.	Replace	75,000

*Check the engine oil regularly between recommended oil change. Hyundai recommends Quaker State oil.
 *See Owner's Manual for details.

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, we recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

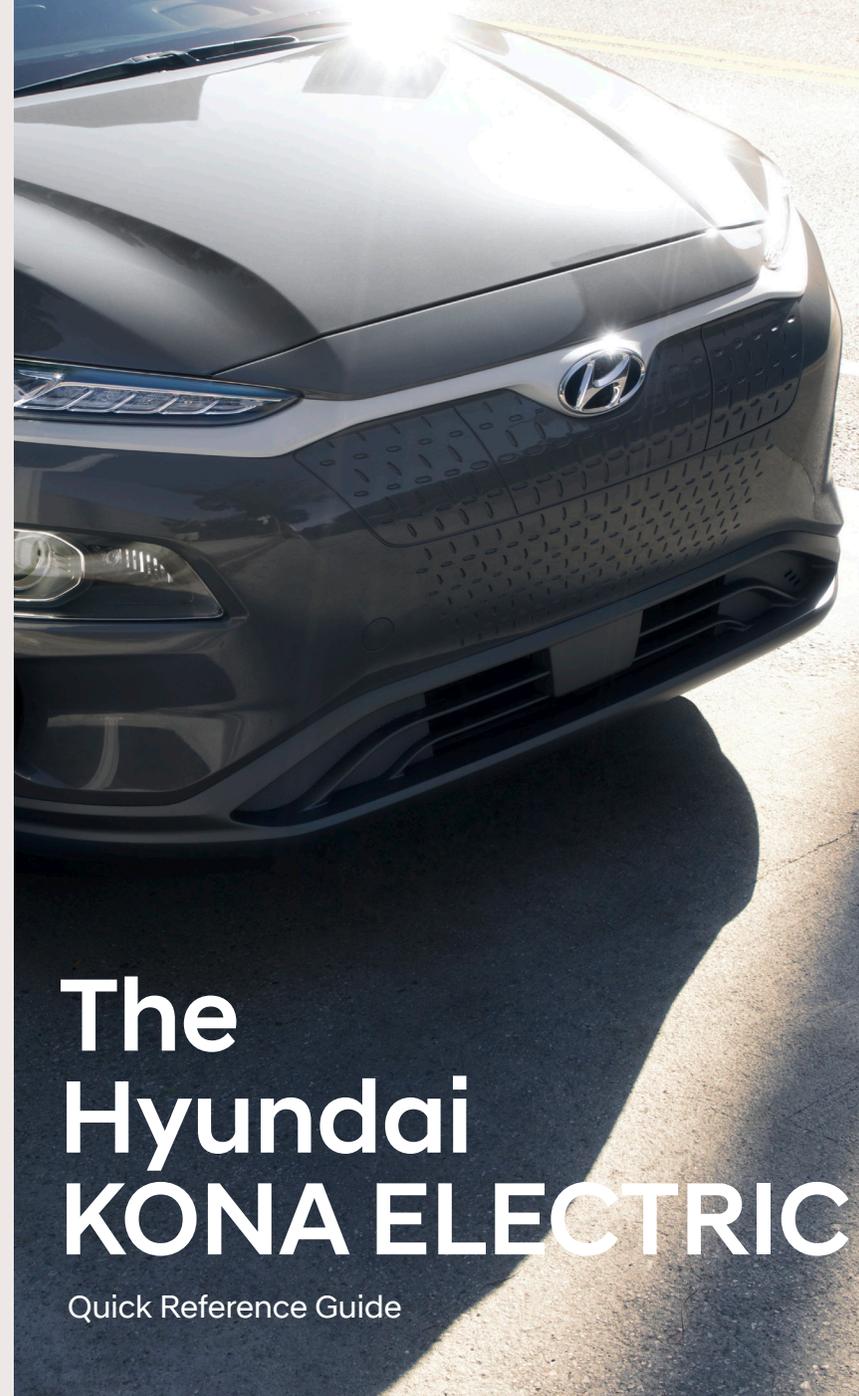

The Hyundai KONA ELECTRIC

Quick Reference Guide

- Roadside Assistance: 1-800-243-7766
- Consumer Affairs: 1-800-633-5151
- Sirius XM® Radio: 1-800-967-2346
- Blue Link: 1-855-2BLUELINK (1-855-225-8354)

NP150-GK019
 (Rev 01/31/19)
 Printing 02/03/19




HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 20850
Fountain Valley, CA 92728-0850
800-633-5151 consumeraffairs@hmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

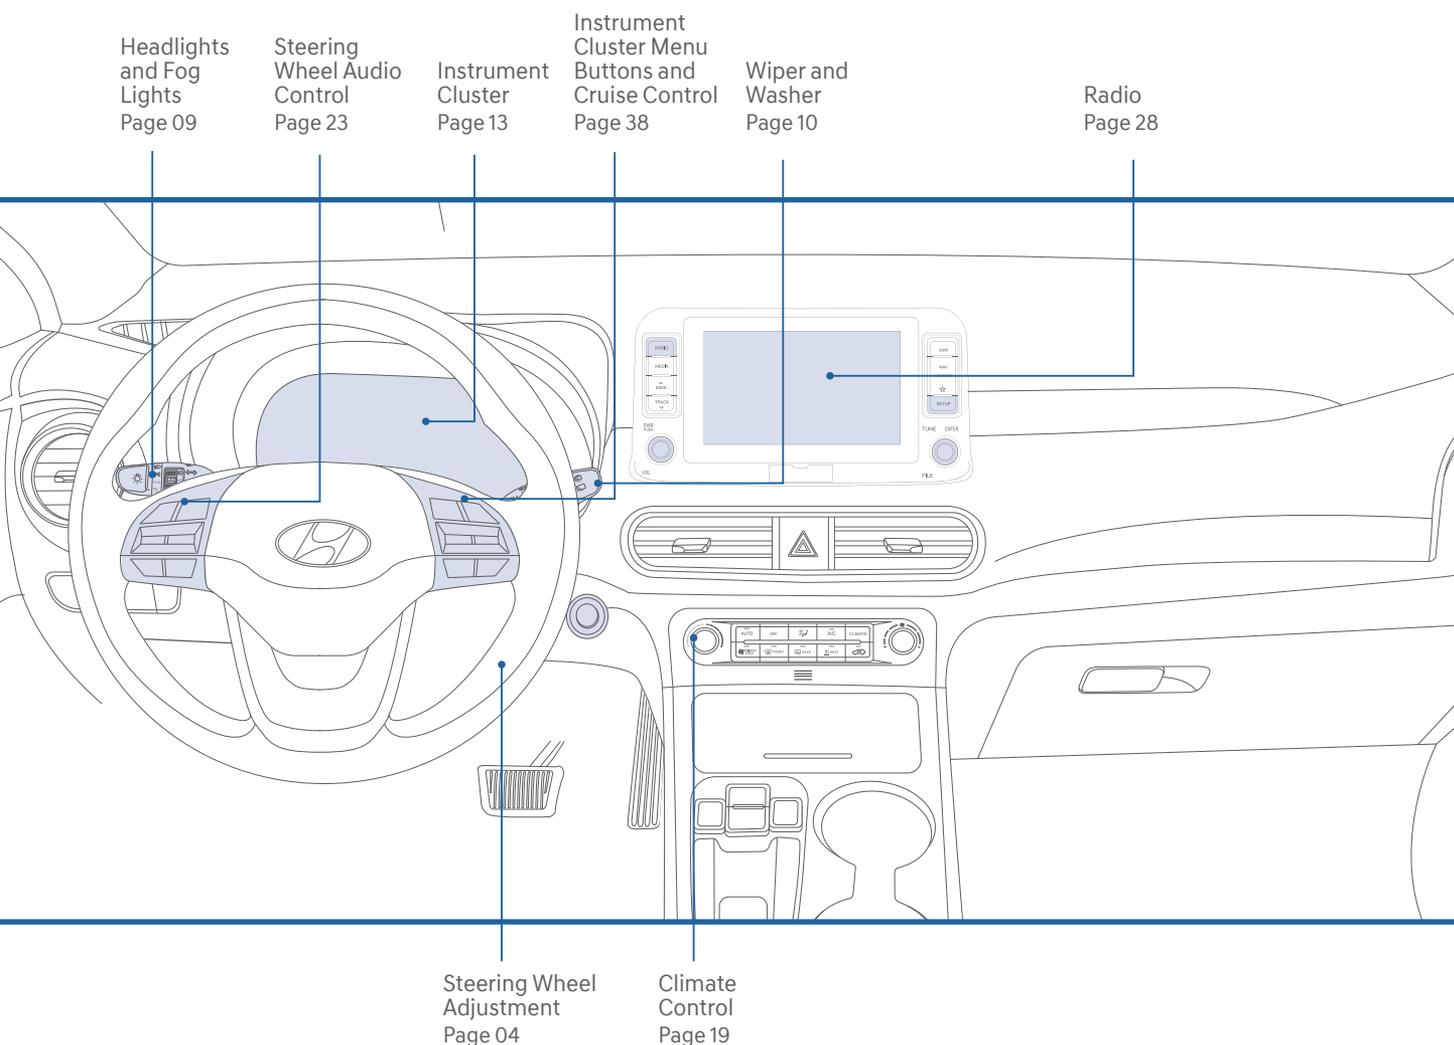

FEATURES AND CONTROLS

Aux. battery saver+	17
Charging door	08
Child-protector rear door lock	05
Climate control	19
Driver's main controls	07
Electric vehicle system modes	18
Headlights	09
Head-up display	11
Homelink wireless control system	12
High voltage battery SOC (state of charge) gauge	15
Instrument cluster	13
Instrument panel illumination	17
Interior lights	05
LCD display control	16
LCD display modes	16
Liftgate opening	07
Seat-Headrest adjustment	03
Seat-Manual driver's seat adjustment	02
Seat-Power driver's seat adjustment	02
Seat-Rear seat folding	03
Seat-Seat belt adjustment	03
Seat-Seat warmer and air ventilation seat	04
Smart key	01
Steering wheel adjustment	01
Sunroof	06
Vehicle power gauge	15
Warnings and indicators	13
Wipers and washer	10

MULTIMEDIA

Android Auto	31
Apple CarPlay™	33
AUX, USB and iPod® port	21
Blue Link connected car system	25
Bluetooth® phone call operational tips	23
Bluetooth® phone pairing	22
Navigation	29
Radio mode	28
Steering wheel audio control	23
Voice recognition tips	24
Wireless cellular phone charging system	21

DRIVING

Automatic with push button drive selector	37
Blind Spot Collision Warning (BCW)	41
Cruise control/smart cruise control	38
Electronic parking brake (EPB)	39
Electronic stability control (ESC)	39
Forward Collision Avoidance Assist(FCA)	40
Lane keeping assist system (LKA)	40
Regenerative braking control paddles	37
Virtual engine sound system (VESS)	41
Tire Pressure Monitoring System (TPMS)	42

WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

* Some vehicles may not be equipped with all the listed features.


SMART KEY



- Lock
- Unlock
- Liftgate Unlock
(Does not open liftgate)
- Panic

NOTE :
For the User Selectable Option, please refer to your Owner's Manual for further information.

Door Handle Button Operation
Smart key must be within 28~40in. from the outside door handle.


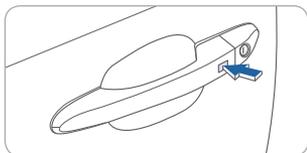


To Lock: Press button on the door handle once (one chime will sound)

To Unlock Driver Door Only: Press button on the driver door handle once (two chimes will sound)


To Unlock All Doors: Press driver side button on the driver door handle twice OR press passenger side button once

STEERING WHEEL ADJUSTMENT

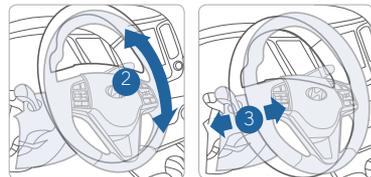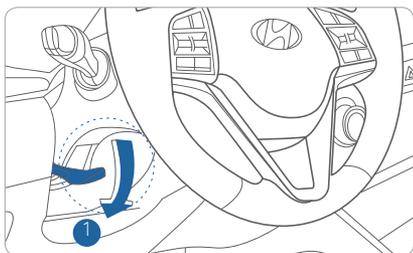

- NOTE :** Do not adjust while driving.
1. Pull the ① lever down.
 2. Set the ② angle and ③ distance.
 3. Pull the ① lever up to lock position.

FRONT SEAT ADJUSTMENT (manual)

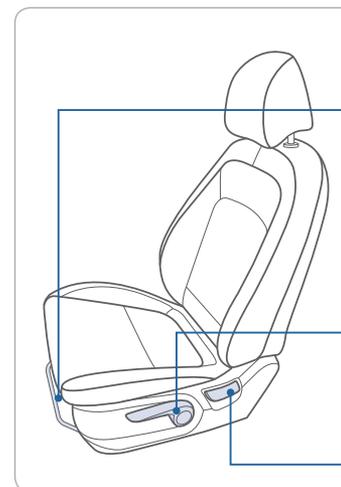


Forward and Backward



Seat Height (for the driver's seat)


Push down several times on the lever to lower.
Pull up several times on the lever to raise.

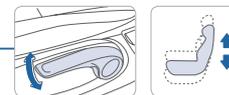


Seatback Angle



FRONT SEAT ADJUSTMENT (power)

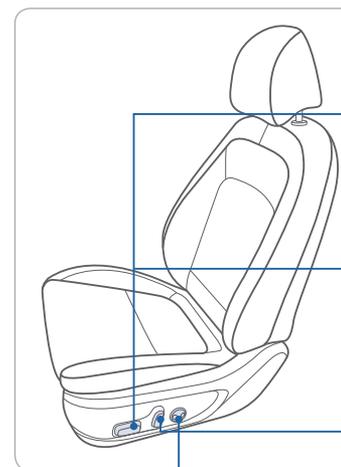

Forward and Backward

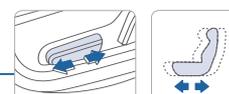

Seat Height




Seatback Angle



Lumbar Support (for the driver's seat)



HEADREST ADJUSTMENT

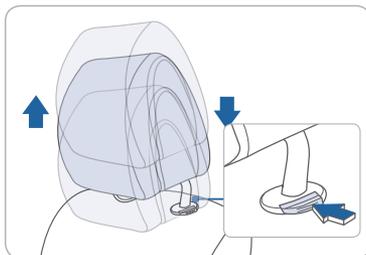

To Raise Headrest:

Pull headrest up.

To Lower Headrest:

Press lock button while pressing down on headrest.



To Adjust Headrest Forward:

Pull forward to 1 of 3 positions

To Adjust Backward:

Press lock button and push headrest backwards.

SEAT BELT ADJUSTMENT (front seat)

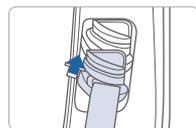
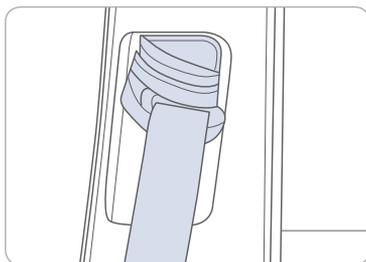


Pull up to raise.



Press the button and push down to lower.


REAR SEAT FOLDING

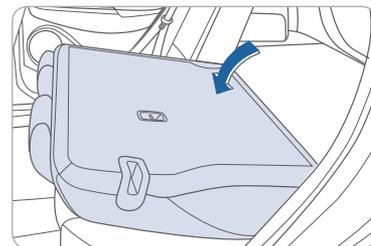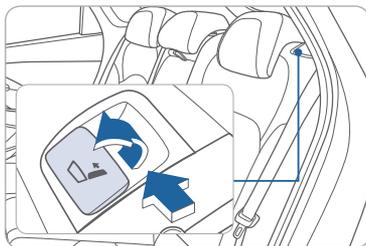

Folding/Unfolding the Rear Seat

1. Lower the rear head restraints to the lowest position.
2. Pull the seat belt to the side before folding down the seatback.
3. Remove the seat belt from the guide, pull the lever and fold the seat toward the front of the vehicle.
4. To unfold the rear seat, pull the seat belt to the side and push the seatback until it is firmly latched into place.

SEAT WARMER (front seats)

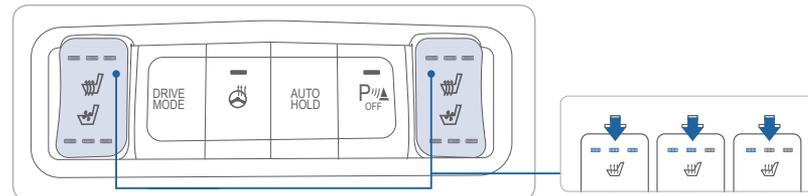


Each time you press the button, the setting is changed as follows:

OFF → **HIGH** → **MEDIUM** → **LOW**



AIR VENTILATION SEATS (front seats)

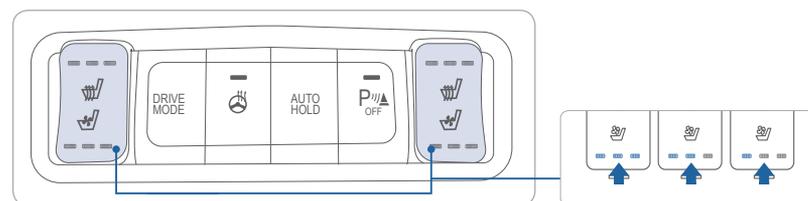



Each time you press the button, the setting is changed as follows:

OFF → **HIGH** → **MEDIUM** → **LOW**




Use with A/C on and Bi-Level mode for effective ventilation.

INTERIOR LIGHTS

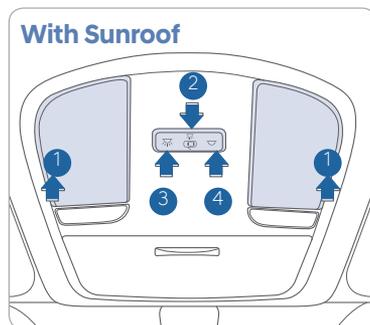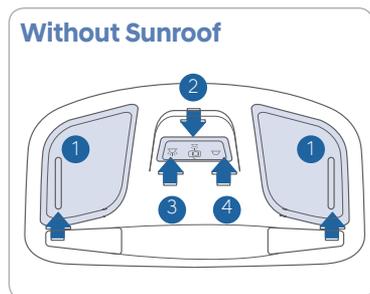

- 1 Map Light**
Press the lens to turn map lights ON or OFF.
- 2 Door position**
Cabin light ON when door(s) and/or tailgate are open.
- 3 Cabin Light ON position**
Press the switch to the left to turn on cabin light.
- 4 Cabin Light OFF position**
Press the switch to the right to leave cabin light off.

CHILD-PROTECTOR REAR DOOR LOCK

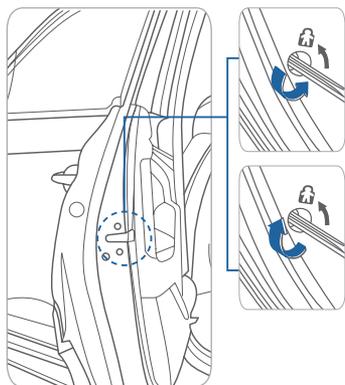


Lock
Insert a key into the hole and turn it to the lock position.

Unlock
Insert a key into the hole and turn clockwise to the unlock position.



SUNROOF

Sunshade

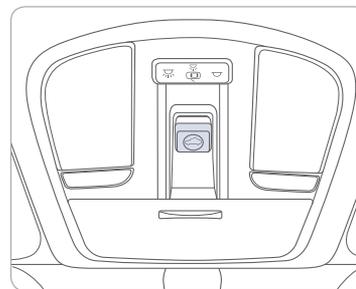


The sunshade will open automatically with the sunroof when the glass panel moves. If you want it closed, move the sunshade manually.

Sliding the Sunroof

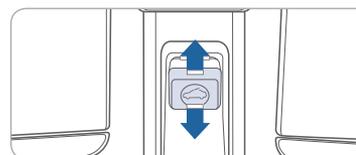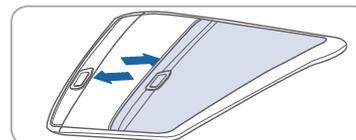


Pressing the sunroof control lever backward or forward momentarily to the second detent position completely opens or closes the sunroof even when the switch is released. To stop the sunroof at the desired position while the sunroof is in operation, press the sunroof control lever backward or forward and release the switch.

Tilting the Sunroof

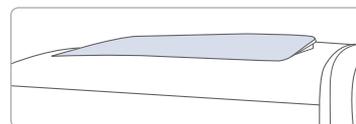


Open
Push the sunroof control switch upward to tilt the sunroof.

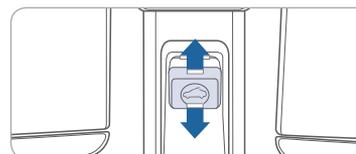


Close
Push and hold the sunroof control switch forward to close the sunroof.


DRIVER'S MAIN CONTROLS

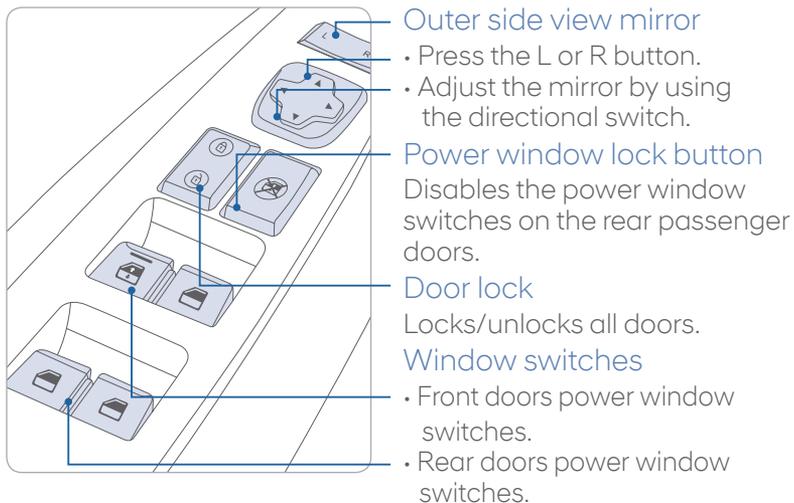

LIFTGATE OPENING

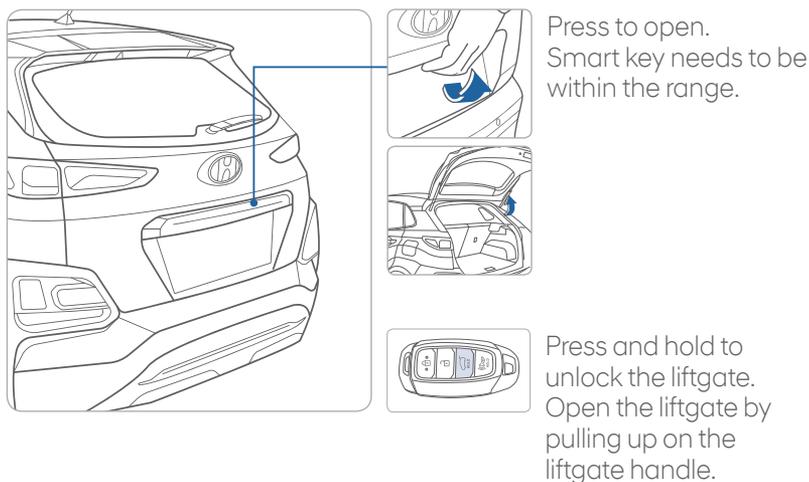

CHARGING DOOR

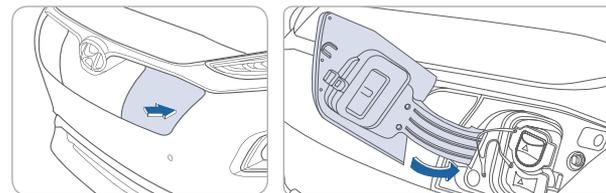


The charging door is located on the front of the vehicle and can be opened when the vehicle doors are unlocked.

Opening the charging door

1. Depress the brake pedal and apply the electronic parking brake.
2. Shift to P (Park) and turn OFF the vehicle.
3. Unlock the vehicle. Push on the charging door area to open the door.

Closing the charging door


1. After recharging, install the charging port cover before closing the charging door.
2. Push the charging door until it is latched securely.

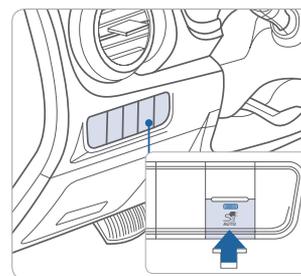

Charging Cable AUTO/LOCK Mode

AUTO Mode (LED ON) - Charging cable is unlocked when charging is complete

LOCK Mode (LED OFF) - Charging cable remains locked even after charging is complete

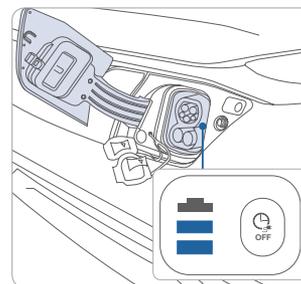

Charge indicator (in charging door)

When Charger is plugged in:

Green Light ON: Charging is progress


Green Light OFF: Charging is complete

Green Light Blinking: Scheduled charge time is programmed, but currently not charging

Red Light Blinking: Charging malfunction.

Disconnect cable and try again or refer to Owner's Manual.

HEADLIGHTS

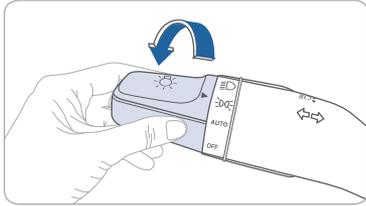


- ▶ Headlights
- ▶ Parking lights
- ▶ **AUTO** Auto headlights
- ▶ **OFF** Headlights Off


Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press the lock button on the smart key twice to turn the headlights off.

Turn signals and lane change signals

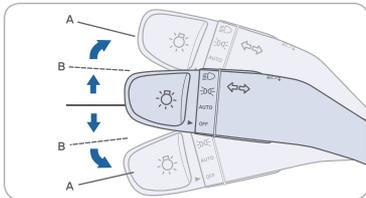

High beam / High Beam Assist

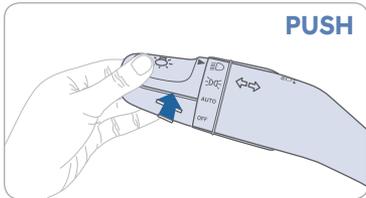


NOTE: To turn off the high beam, pull the lever towards you.


High Beam Assist

1. Select auto position.
2. Push lever forward to engage Auto High Beam.
3. Push lever forward again to disengage.


Flashing the High Beam Headlights

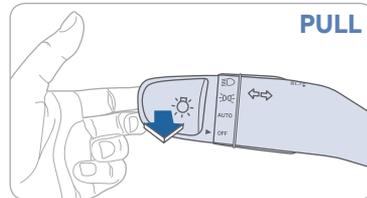

WIPERS AND WASHER

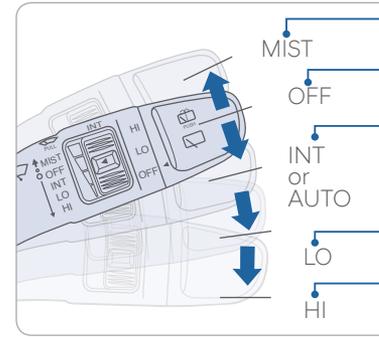


- MIST - Single wipe
- OFF - Off
- INT or AUTO - Intermittent wipe or Auto control wipe
- LO - Low wiper speed
- HI - High wiper speed

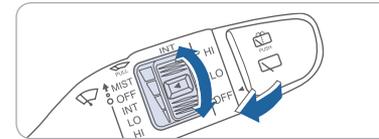


Intermittent Wipe Time Adjustment

More frequent wipes (adjust up)
Less frequent wipes (adjust down)

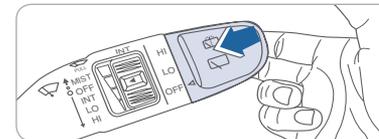

Wash with Brief Wipes


Pull the lever toward you.

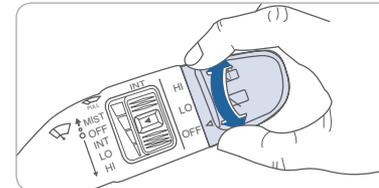


Rear Wiper / Washer Control

- HI - High wiper speed
- LO - Low wiper speed
- OFF - Off
- Push away for rear wash


HEAD-UP DISPLAY

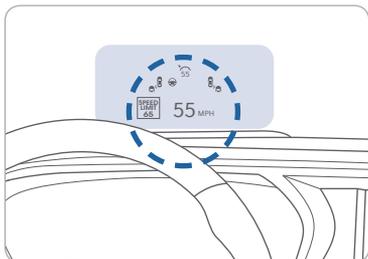

The Heads-Up display is a feature that allows the driver to view information projected onto a transparent screen while still maintaining direct view of the road ahead.

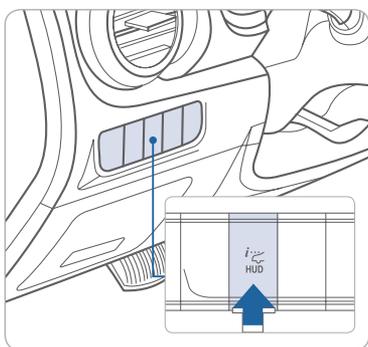

To activate the Heads-Up Display, press the HUD button on the dash panel located on the left-hand side of the driver.

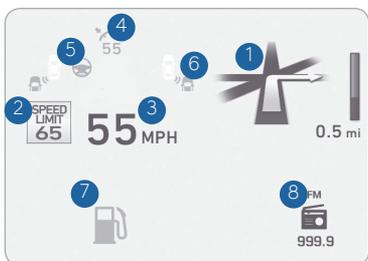


Head-Up Display information

1. Turn-by-turn (TBT) navigation information
2. Road information
3. Driving speed information
4. Cruise control system SET indicator
5. Lane Keeping Assist (LKA) information
6. Blind Spot Collision warning indicators
7. Warning lights
8. Multimedia information

NOTE:

: If you wear polarized sunglasses, it is difficult to read the Head Up Display information.

HOMELINK WIRELESS CONTROL SYSTEM

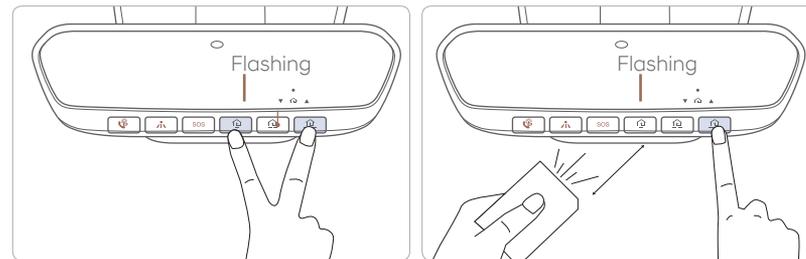

Standard Programming

To train most devices, follow these instructions:

1. For the first-time programming, press and hold the two outside buttons, HomeLink® Channel 1 and Channel 3 buttons, until the indicator light begins to flash (after 10 seconds). Release both buttons. Do not hold the buttons for over 20 seconds.
2. Position the end of your hand-held transmitter 1-3in. (2-8cm) away from the HomeLink® buttons while keeping the indicator light in view.
3. Simultaneously press and hold both the HomeLink® and the hand-held transmitter button. DO NOT release the buttons until step 4 has been completed.
4. While continuing to hold the buttons, the red indicator Status LED will flash slowly and then rapidly after HomeLink® successfully trains to the frequency signal from the hand-held transmitter. Release both buttons.

For more detailed information, please refer to your Owner's Manual, or visit www.homelink.com or call (800) 355-3515.

INSTRUMENT CLUSTER



- 1 Power/Charge gauge
- 2 Speedometer
- 3 Warning and indicator lights
- 4 LCD display (including Trip computer)
- 5 Battery SOC (State of Charge) gauge


WARNINGS AND INDICATORS

Ready indicator	Service warning light	Power down warning light
Charging indicator	High voltage battery low level warning light	Air bag warning light
Seat belt warning light	Parking brake & brake fluid warning light	EPB Electric Parking Brake (EPB) warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake force Distribution (EBD) System warning light	Electric Power Steering (EPS) warning light
Charging system warning light (for 12-volt battery)	TPMS Malfunction / Low tire pressure warning light	AUTO HOLD indicator
Forward Collision Avoidance Assist Warning Light	Lane Keep Assist System (LKAS) indicator	LED headlamp warning light
Master warning light	Electronic Stability Control (ESC) Indicator Light	Electronic Stability Control (ESC) OFF indicator light
Immobilizer indicator	Turn signal indicator light	High beam indicator light
Light ON indicator light	Cruise indicator	Cruise SET indicator
SPORT mode indicator	ECO mode indicator	

Main indicators in cluster for Electric Vehicle

- Ready indicator**
When the vehicle is ready to be driven, this indicator is illuminated.
When the ready indicator goes off or blinks, we recommend the vehicle be checked by an authorized HYUNDAI dealer.
- Service warning light**
If a problem with the electric vehicle control system occurs, the service warning light will illuminate.
We recommend the vehicle be checked by an authorized HYUNDAI dealer.
- Power down warning light**
When the vehicle power should be limited for the safety of the electric vehicle, this warning light illuminates.
Charge the battery immediately when the high voltage battery level is not enough.
- Charging cable indicator**
This indicator shows the charging status of the high voltage battery.
• When a charge cable is connected, the indicator illuminates in red. The approximate charge time will be displayed on the dash after a few minutes.
- High voltage battery low level warning light**
This warning light illuminates when the high voltage battery level is low.
When the warning light turns ON, charge the battery immediately.

VEHICLE POWER GAUGE

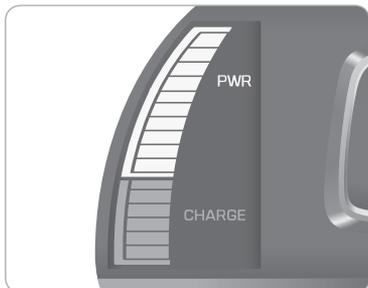

The Power/Charge gauge shows the energy consumption rate of the vehicle and the charge/discharge status of the regenerative brakes.


POWER

This portion of the gauge indicates the amount of electrical power supplied to the EV motor while driving.

CHARGE

This portion of the gauge indicates the amount of charging to the EV battery when regenerative braking is applied.

HIGH VOLTAGE BATTERY SOC (STATE OF CHARGE) GAUGE

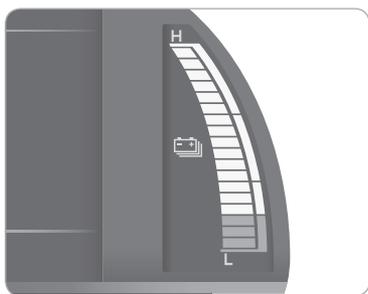


The SOC gauge shows the charge level of the high voltage battery. “L(Low)” position on the indicator indicates that there is not enough energy in the high voltage battery. “H(High)” position indicates that the driving battery is fully charged. When there are only 2 bars remaining on the gauge, the SOC level is low. The warning lamp turns ON, and the vehicle can drive an additional 12 - 18 miles, depending on driving condition, climate control system, ambient conditions, and driving style. Charging is required.

LCD DISPLAY CONTROL




- 1 : MODE button for changing modes
- 2 : MOVE switch for changing items
- 3 : SELECT / RESET button for setting or resetting the selected item

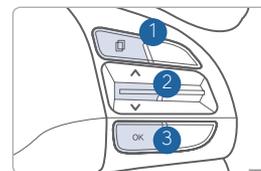

LCD DISPLAY MODES


Modes	Symbol	Explanation
Trip Computer		This mode displays driving information such as the tripmeter, fuel economy, etc.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist		<ul style="list-style-type: none"> • This mode displays the state of the Advanced Smart Cruise Control (ASCC) and Lane Keep Assist System (LKAS). • This mode displays information related to Tire Pressure.
User Settings		In this mode, you can change settings of the doors, lamps, etc.
Warning		This mode displays warning messages related to one or more systems on your vehicle. Service by an authorized Hyundai dealer may be required.

INSTRUMENT PANEL ILLUMINATION

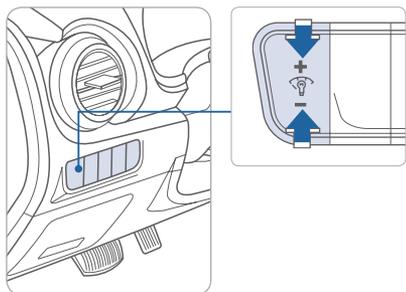

Press the illumination control button to adjust the instrument cluster illumination brightness.

AUX. BATTERY SAVER+

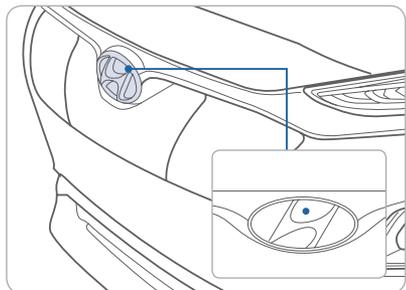

The Aux. Battery Saver+ function monitors the charging status of the 12 V auxiliary battery. If the auxiliary battery level is low, the main high voltage battery charges the auxiliary battery. The default setting for Aux. Battery Saver+ is ON. The driver may cancel the function. Go to 'User Settings → Other Features → Aux. Battery Saver+'.

When the Aux. Battery Saver+ function is operating, the indicator lamp in the H-logo located in the front of the vehicle will be illuminated.

NOTE:

When the function is operating, even though the vehicle is OFF, electrical current will be flowing.

The message is displayed if the Aux. Battery Saver+ function was activated.




ELECTRIC VEHICLE SYSTEM MODES



Press the EV icon on the AVN Home screen to view the EV menu.


- 1 Range: Check the range you can drive with the current amount of battery and search for nearby charging stations.
- 2 Energy information: View information related to energy, such as the drivable distance and battery status.
- 3 Charge management: Schedule battery chargings or customize related options.
- 4 ECO driving: ECO level information and ECO driving history is displayed.
- 5 EV settings: You can change the settings for charging current.

CLIMATE CONTROL

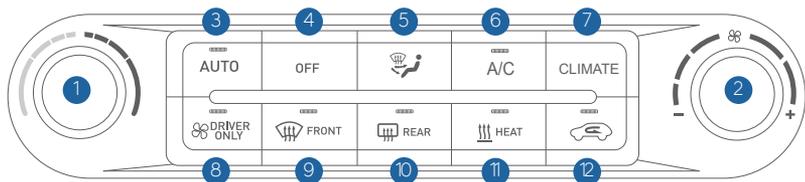

- 1 Temperature control knob
- 2 Fan speed control knob
- 3 AUTO (automatic control) button
- 4 OFF button
- 5 Mode selection button
- 6 Air conditioning button
- 7 Climate control information screen selection button
- 8 Driver only button
- 9 Front windshield defrost button
- 10 Rear window defrost button
- 11 HEAT button
- 12 Air intake control button


DEFOGGING/DEFROSTING

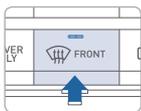

1. Press the front windshield defrost control button.




2. Set the temperature control to the warmest setting.

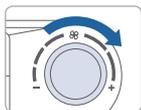

3. Set the fan speed to the highest setting.

NOTE: To reduce the tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

AUTOMATIC HEATING / AIR CONDITIONING

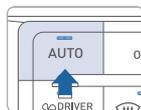


1. Press the AUTO button.



2. Set the temperature control to the desired setting.

Controls the modes, fan speeds, air intake and air-conditioning automatically.


SYSTEM OFF

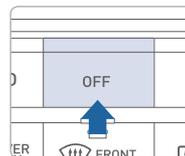

Pressing the OFF button will place the system in the OFF mode.

- Blower will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.


MODE SELECTION

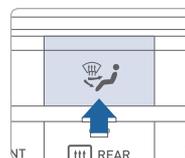


Changes the direction of the air flow as follow.



AIR INTAKE CONTROL

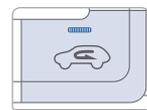


Recirculated air position

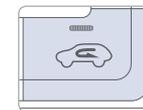


Outside (fresh) air position

HEAT BUTTON

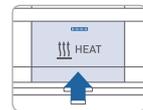


Push the HEAT button to turn the heater on. Push the button again to turn the heater off.

DRIVER ONLY

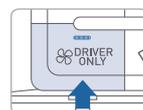


If you press the DRIVER ONLY button, air blows primarily through the two left-most vents (nearest the driver). This helps to reduce energy consumption from the climate control system.

REAR WINDOW DEFROSTER

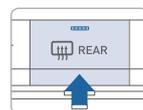

Press to activate/deactivate the rear window defroster.

WIRELESS CELLULAR PHONE CHARGING SYSTEM

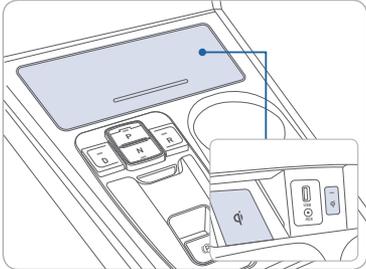


There is a wireless cellular phone charging system in front of the cup holders. The system operates with all doors closed, and the Start/Stop button in the ACC/ON/START position. Wireless charging system can be disabled in the instrument cluster settings menu.

NOTE:

- The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).
- Do not place any metallic items such as coins, keys on the charger. Avoid placing credit cards on the charger as they may be damaged by the magnetic field.
- The charging area may be warm while using wireless charging.


AUX AND USB PORT

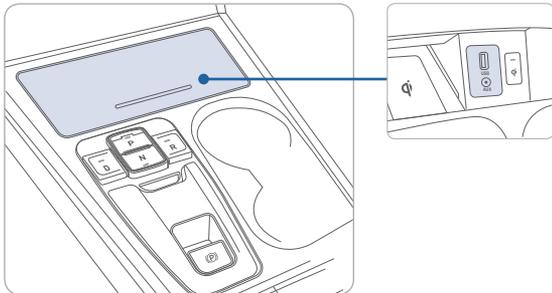

Use the Aux input jack to connect an external audio device.
 Use the media USB port to connect a USB device with music files or to access features on your smartphone using Apple CarPlay or Android Auto phone projection.
 Use the charging USB port to charge an external device such as a cell phone.

BLUETOOTH® PHONE PAIRING

Phone setup (pairing phone)

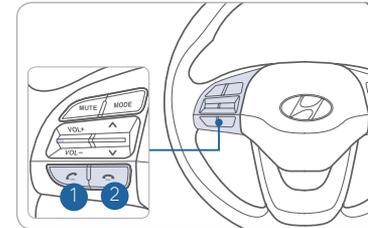

1. Press the SETUP button on the head unit or the CALL button on the steering wheel.



2. Search for the device name as displayed on your mobile phone and pair.




3. Confirm the 6-digit passkey displayed on the audio screen and the Bluetooth device are identical.

4. Press OK in your Bluetooth device.
 5. Pairing is complete.

NOTE: Vehicle must be parked to complete pairing process.

STEERING WHEEL AUDIO CONTROL

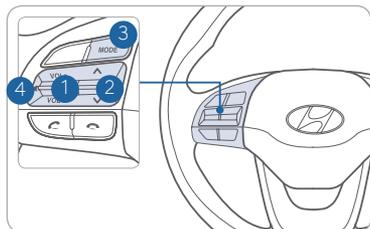


- 1 **VOLUME (VOL + / -)**
Increases or decreases the volume.
- 2 **SEEK (^ / v)**
Changes station.
- 3 **MODE**
Changes the audio source.
- 4 **MUTE (🔇)**
Mute the sound.

Bluetooth® PHONE CALL OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth® control

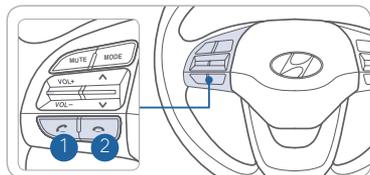

- 1 **CALL**
Places and transfers calls.
- 2 **END**
Ends calls or cancels functions.

To Answer a Call:

- Press the button on the steering wheel.

To Reject a Call:

- Press the button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone

(Private call on handset – do not use while driving):

- Press and hold the button on the steering wheel until the audio system transfers a call to the phone.


To Finish a Call:

- Press the button on the steering wheel.

To Redial Last Dialed Call:

- Press and hold the (insert call icon) button for 2-3 seconds

Making a call using voice recognition:

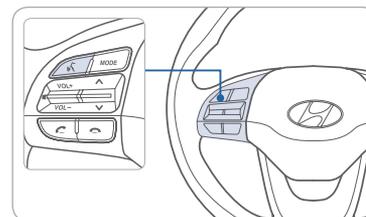

Press button on the steering wheel control to activate voice recognition.

Press and hold button to end voice recognition .

NOTE: HVAC blower speed level is reduced temporarily when the Voice Recognition button is pressed

Calling by Name:

1. Press the button.
2. Say the following command:
 - “Call <John Smith>”: Connects the call to John.
 - “Call <John Smith> <on Mobile / at Work / at Home / on Other>”: Connects the call to John’s Mobile, Work, Home, or Other phone number.

Dialing by Number:

1. Press the button.
2. Say “Dial Number.”
3. Say desired phone number. For complete list of commands, refer to your Owner’s Manual.

NOTE: Android Auto and Apple CarPlay are also available.

VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.


Voice recognition performance may be affected if driving with windows and sun roof open; when the heating-cooling system is on; when passing in a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands

To start voice command, press the key, the following commands are available:

Command	Function
Call	Displays downloaded Contacts.
Call <Name>	Calls <Name> saved in Contacts.
Dial Number	Displays a screen where you can say a phone number to dial.
Dial <Phone #>	You can directly say the number to call. ex) Dial 111 555 1234

BLUE LINK CONNECTED CAR SYSTEM

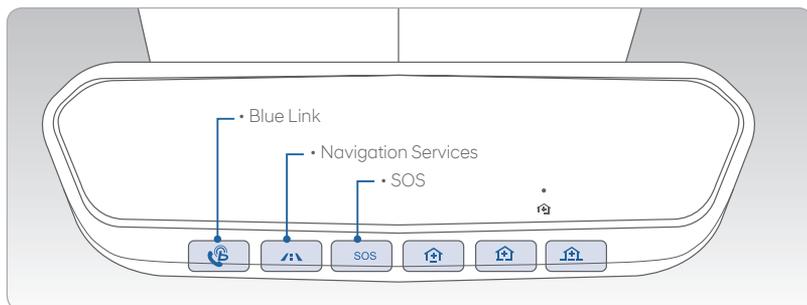

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the  button to access the voice-response menu of services.

- You can say:
 - "Service Link" to schedule a service appointment.
 - "Roadside Assistance" for roadside services.
 - "Blue Link Account Assistance" for help with your Blue Link subscription.

For vehicles equipped with factory-installed navigation, press the  button for : Destination Search by Voice.

- Command: Find <POI Name>.
- Example: "Find Starbucks".

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User's Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

MyHyundai with Blue Link App



You can download the MyHyundai with Blue Link app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android™ — Google Play™

Visit HyundaiBlueLink.com FAQs to see a list of compatible devices.



Scan to see list of compatible devices and to download the app.

Remote Climate Control

Remote Climate Control* enables you to remotely enable climate control and turn on the front window defroster, ensuring a warm or cool car is ready to go when you are.

-  To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log in to www.MyHyundai.com.


Preconditions for Remote Climate Control:

- POWER Button is in OFF position
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Push Button Gear Selector is in P (PARK).
- Brake pedal is not depressed
- Vehicle hood is securely closed
- All the doors are closed and locked
- The liftgate is securely closed
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

Remote Climate Control will terminate:

- After 15 minutes
- Brake is pressed without the proximity key inside the vehicle
- Alarm is triggered without the proximity key inside the vehicle
- Door / trunk is opened from inside the vehicle

RADIO MODE

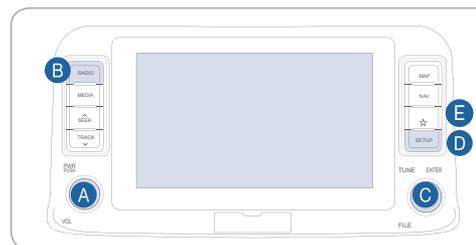

Press POWER button **A** to turn radio on.

- TUNING/LISTENING TO CHANNELS
 1. Press RADIO button **B**.
 2. Rotate TUNE knob **C** to desired channel.

NOTE :

A clear view of the southern sky helps to ensure SiriusXM[®]* radio reception.

- SETTING PRESET BUTTONS (FM/AM/SXM)


Six preset frequencies for each radio modes can be stored manually.

 1. Select the radio mode you want to store a station into.
 2. Select the desired station.
 3. Touch and hold one of the preset buttons until audible beep is heard.



- ADJUSTING THE SOUND CONTROL

1. Press SETUP button **D** and press the sound button on the display.
2. To adjust the Fader/Balance, select the on-screen tab. Touch the on-screen arrows to adjust the desired setting for front, rear, left, or right balance.
3. To adjust the Bass/Midrange/Treble, select the on-screen tab. Touch the on-screen arrows to adjust the tonal sound settings to the desired level.

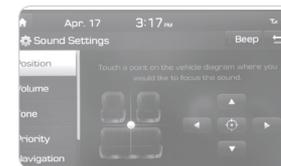

Setting the custom button

You can choose a specific feature to be accessed when the Custom button **E** is pressed.

To set the feature associated with the Custom Button, go to the home screen and touch All Menus > Setup > Advanced and select a feature.

*SiriusXM[®] is only available on Display Audio Light and Navigation

NAVIGATION

Basic features on map screen



Press **[MAP]** button in the navigation head unit.

- 1 Home: Move to the home screen.
- 2 Map: Change how the map is displayed.
- 3 Volume: Adjusts the volume.
- 4 Zoom in: Zoom the map view screen in.
- 5 Map scale display: Set the zoom level automatically according to the guidance.
- 6 Zoom out: Zoom the map view screen out.
- 7 Start Guidance
- 8 Route Options
- 9 Waypoint: Set a waypoint to the current route.
- 10 Save frequently used address to address book.
- 11 POI: Find a POI (Point of Interest) around the current position.
- 12 Quick menu button: Quick and easy selection of a destination and options.
- 13 View the distance to your destination and the estimated arrival time.
- 14 Cancel Route: Stop the navigation guidance.
- 15 Hide or display the split screen.
- 16 Information about this turn point
- 17 Information about the next turn point.

Destination search screen



Press **[NAV]** button in the navigation head unit, and find a destination by using the **[Destination]** menu.

- 1 Address : Set destination by address search.
- 2 Previous destinations : Select from previously inputted addresses and POIs.
- 3 Online Search: Runs online search.
- 4 POI categories : Select the desired item in the sub-categories.
- 5 Gas stations : Select the desired destinations among the searched gas stations.
- 6 Restaurants : Select the desired destination among the searched restaurants.
- 7 Emergency : Select the desired destination among the searched emergency facilities.
- 8 Address Book : Search the destination with the address book.
- 9 Coordinates : You can find a destination by entering the coordinates of latitude and longitude.

ANDROID AUTO™

REQUIREMENTS:

- USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

PHONE SETUP

Turn on Bluetooth settings in your mobile device. Connect the USB cable to USB port in the vehicle, and proceed to connect USB cable to mobile device.

Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

NOTE: Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

CAR SETUP

1. Press the SETUP button on the radio.
2. Touch the “Phone Projection” icon on screen.
3. Check the box for “Enable Android Auto”
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

For more detailed information on how to operate Android Auto, please refer to your navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website
<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

APPLE CARPLAY™

REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

PHONE SETUP


On your phone, go to Settings > General > CarPlay to allow CarPlay access.

On your phone, go to Settings > Siri and ensure Siri is turned ON.

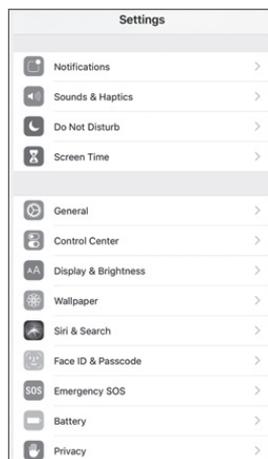

CAR SETUP

1. Press the SETUP button.
2. Touch the “Phone Projection” icon on the screen.
3. Touch “Apple CarPlay” on the Connectivity Settings screen then check box for “Enable Apple CarPlay”.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

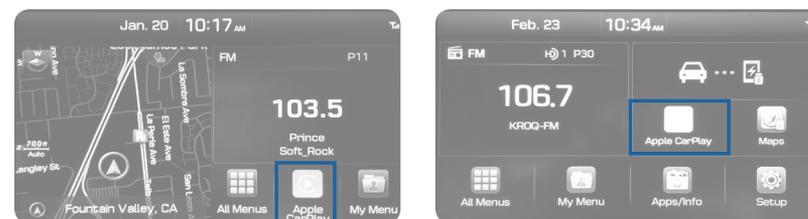

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

CarPlay Home Screen



- | | |
|-------------------------|----------------------------------|
| 1 HOME ICON | 7 APPLE MAPS |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES |
| 3 CELLULAR SIGNAL | 9 3RD PARTY APPS |
| 4 PHONE TIME | 10 SCREEN PAGE INDICATOR |
| 5 PHONE | 11 EXIT TO HYUNDAI |
| 6 APPLE MUSIC™ | 12 CURRENT CARPLAY AUDIO PLAYING |
| | 13 VOICE COMMAND |

SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE COMMAND 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
 - “Text <John Smith> ‘Call you later’” to send a text message.
 - “Read text messages” to read available text message.
 - “Call <John Smith>” to make a phone call.
 - “Find <POI/Destination>” to locate a POI/Destination.

PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically asks “Who do you want to call?” when the PHONE 5 icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically asks “Would you like me to read your message?” when the MESSAGE icon is selected.


3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

AUTOMATIC WITH PUSH BUTTON DRIVE SELECTOR

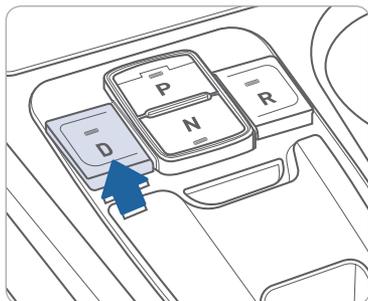


Select gear positions by pressing the shift button. The gear position is displayed in the instrument cluster.

For your safety, always depress the brake pedal while shifting to another gear.




REGENERATIVE BRAKE LEVEL CONTROL PADDLES

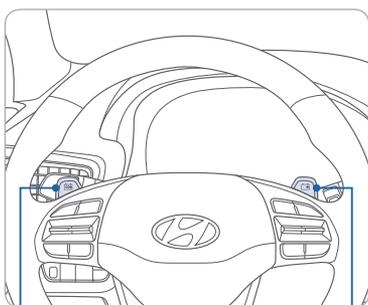

The level of regenerative braking can be selected by using the paddle shifters on the steering wheel. The level (0 to 3) is displayed in the lower portion of the cluster LCD display.


- Left side (⏪): Increases regenerative braking and deceleration.
- Right side (⏩): Decreases regenerative braking and deceleration.

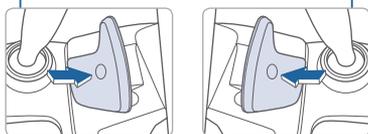

The paddle shifter does not operate when:


- The two paddle shifters are pulled at the same time.
- The Cruise Control system or Smart Cruise Control system is activated.

CRUISE CONTROL / SMART CRUISE CONTROL

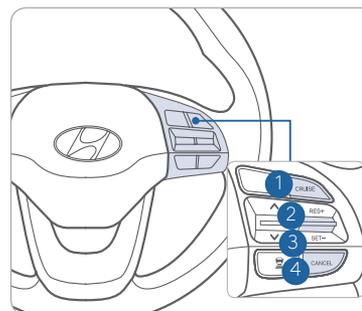

The Cruise Control system allows you to program the vehicle to maintain a constant speed without depressing the accelerator pedal.


- 1 To turn On/Off cruise control.
- 2 Toggle switch UP to Resume or Increase the cruise control speed.
- 3 Toggle switch DOWN to Set or Decrease the cruise control speed.
- 4 To Cancel the Cruise Control.

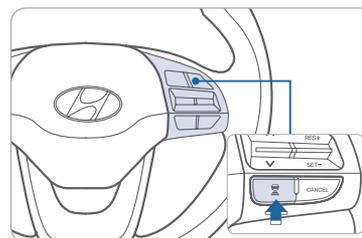

Setting Vehicle Distance (Smart Cruise Control only)

Press the button to set and maintain the vehicle-to-vehicle distance without pressing the accelerator or brake pedal.

The vehicle-to-vehicle distance 1 will automatically activate when you set the cruise speed 2. Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:

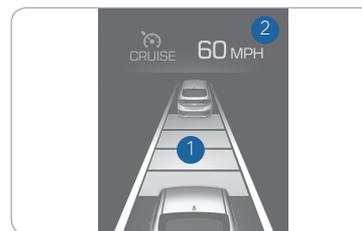

Setting Cruise Control

1. Press the "CRUISE" button 1 to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle "-SET" switch (3) DOWN to set cruising speed.

Adjusting the vehicle speed


1. Toggle "+RES" switch 2 UP to increase cruising speed.
2. Toggle "-SET" switch 3 DOWN to decrease cruising speed.

Note: Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 10 mph.

To Cancel Cruise Control

Press the "CANCEL" button 4 or depress the brake pedal.

ELECTRONIC PARKING BRAKE (EPB)

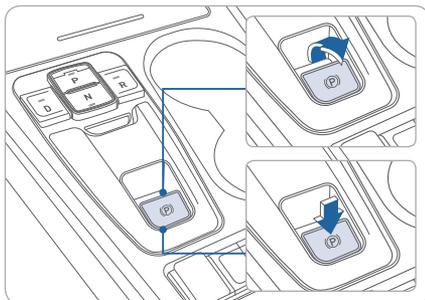


Applying

Stop the vehicle then pull up on the EPB switch

Releasing

Press the EPB switch while depressing the brake pedal.

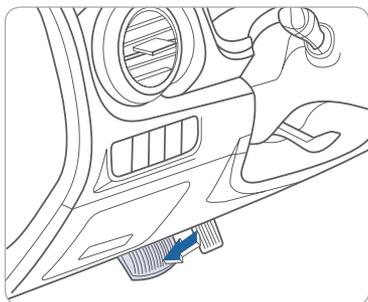


Automatic releasing

- When shifted to P:
Depress the brake pedal and shift out of P to R or D.
- When shifted to N:
Depress the brake pedal and shift out of N to R or D.

NOTE: If necessary, emergency braking is possible by pulling up and holding the EPB switch.

ELECTRONIC STABILITY CONTROL (ESC)

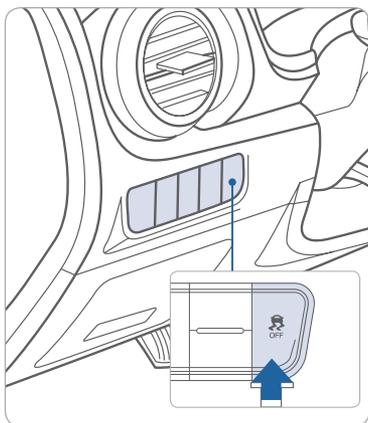


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

The ESC automatically selects the ON position when the vehicle is in READY mode.

- To turn off the Traction Control, press the ESC OFF button shortly.
- To turn off the Traction and the Stability Control, press the ESC OFF button for over 3 seconds.

LANE KEEPING ASSIST SYSTEM (LKA)

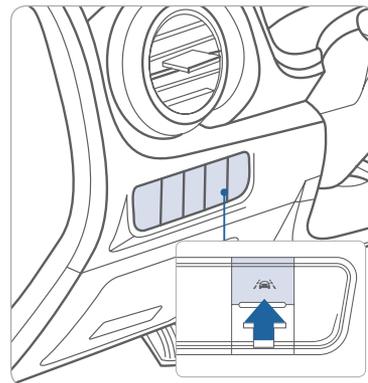


The Lane Keeping Assist System detects lane markers on the road with a camera and assists the driver's steering to help keep the vehicle between lanes. The system operates when the vehicle speed is above 40 mph

- To turn on the LKA, press the LKA switch
- To turn off the LKA, press the switch again.

NOTE: In some circumstances, LKA may not activate as intended due to one or more of the following: blurred lane condition, backlight, heavy fog, reflection of light due to water on the road, sharp bend in the road, etc.

Please refer to the Owner's Manual for more information.

FORWARD COLLISION-AVOIDANCE ASSIST (FCA)

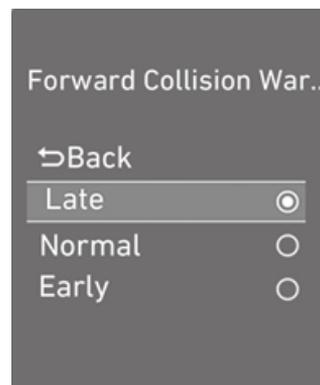

The Forward Collision Avoidance (FCA) system is designed to detect and monitor the vehicle ahead and warn the driver if a collision is imminent. On vehicles equipped with both camera and radar sensor, pedestrian detection is also available.


To enable the system, select the Forward Collision Avoidance Assist (FCA) sub menu in the User Settings section of the LCD cluster display. To adjust the FCA initial warning activation time, go to User Settings → Driver Assistance → Forward Collision Warning and select either, Late, Normal, or Early. Refer to your Owner's Manual for additional detail information.

VIRTUAL ENGINE SOUND SYSTEM (VESS)

The Virtual Engine Sound System (VESS) is a generated sound that indicates to pedestrians the vehicle is approaching.

- The Virtual Engine sound is emitted when the vehicle is moving at low speed
- When the vehicle is shifted into reverse (R), an additional warning sound is emitted

BLIND SPOT COLLISION WARNING (BCW)

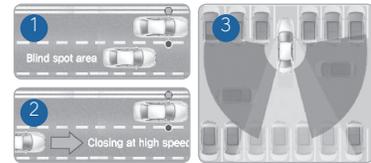

The BCW (Blind-Spot Collision Warning) system uses a radar sensor to alert the driver while driving.

The system monitors the rear area of the vehicle and provides information to the driver. The system incorporates the following functions:

- 1 Blind-Spot Collision Warning (BCW)
- 2 Lane Change Assist (LCA)
- 3 Rear Cross-Traffic Collision Warning (RCCW)- in reverse gear under 6 mph

- To turn on the BCW, press the BCW button (indicator illuminated).

- To turn off the BCW, press the BCW button again.

The BCW and LCA systems will activate once the vehicle speed exceeds 20 mph. The RCCW system activates in reverse gear under 6 mph.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Monitor with Location Indicator (Shown on the LCD display)

LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires are significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized Hyundai dealer as soon as possible.

LOW TIRE PRESSURE LOCATION INDICATOR AND TIRE PRESSURE INDICATOR (LCD DISPLAY)

Tire pressures will be displayed after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator (⚠️) will illuminate and the LCD (📊) display will indicate the tire(s) requiring air.

KONA CUSTOMER DELIVERY CHECKLIST

CUSTOMER NAME	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	

BEFORE DELIVERY

- SET TIRE PRESSURE LF__RF__RR__LR__
- VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ENSURE FLOOR MATS ARE SNAPPED INTO PLACE

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- REVIEW QUICK REFERENCE GUIDE
- PAIR CUSTOMER'S PHONE TO THE BLUETOOTH SYSTEM
- OPERATION OF THE NAVIAGATION SYSTEM
- REVIEW AND TEAR OFF VOICE COMMAND / QUICK TIP CARD
- OPERATION OF THE AUDIO SYSTEM

BLUETOOTH® HANDS-FREE

HYUNDAI

CONNECTING YOUR PHONE

On the radio:

1. Push the **SETUP** button.
2. Select **Bluetooth**.
3. Select **Bluetooth Connection**.
4. Select **Add New**.

In your phone's **Bluetooth** settings:

5. Select the <Vehicle Name> on your phone.
6. Enter the passkey from the radio or accept the authorization pop-up on your phone.

SWITCHING BETWEEN PAIRED PHONES

Using Voice Command: "Change Bluetooth device"

On the radio:

1. Push the **SETUP** button.
2. Select **Bluetooth**.
3. Select **Bluetooth Connection**.
4. Select **Connect** next to the desired phone.

For more information, visit HyundaiBluetooth.com