

VOICE RECOGNITION TIPS (If equipped)

BLUETOOTH®
Command **Example**
 Dial <Phone #> — “Dial 7-1-4-9-6-5-3-0-0-0”

Call <Name> — “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:
 • Use full names instead of short or single-syllable names (“John or Dad”)
 • Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts


NAVIGATION
Command **Example**
 Find Address — “1-2-3-4-5 1st Street, <House #, Street, Fountain Valley”
 City, State
 Find <POI Name> — “Find McDonald’s”

Located on Rearview Mirror
DESTINATION SEARCH BY VOICE
Command **Example**
 Find <POI Name> — “Find Lowe’s® near me”
 <POI Name> — “Starbucks®”

BLUE LINK


- Assist with creating MyHyundai.com account
- Assist with Blue Link enrollment
- Show Blue Link User's Manual
- Encourage customer to download the MyHyundai with Blue Link app

WINDSHIELD WIPER / WASHER - page 08

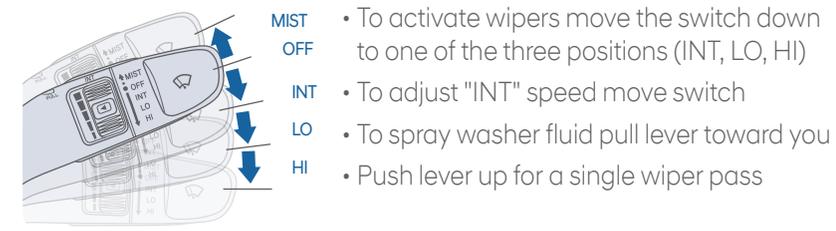

- MIST** • To activate wipers move the switch down to one of the three positions (INT, LO, HI)
- OFF**
- INT** • To adjust "INT" speed move switch
- LO** • To spray washer fluid pull lever toward you
- HI** • Push lever up for a single wiper pass

OPENING THE TRUNK - page 05

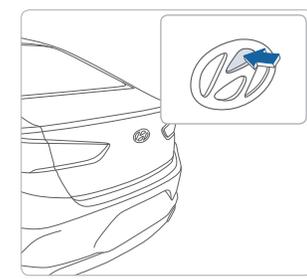

1. Make sure the shift lever is in P (Park).
2. Then do one of the following :
 - Press the button on the trunk emblem after unlocking the door by remote key or smart key.
 - Press the trunk unlock button of remote key or smart key for more than 1 second.
 - Press the button on the trunk itself with the Smart Key in your possession.
 - With vehicle unlocked, press the button.

- INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT
- SET FIRST SERVICE APPOINTMENT
- REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE
- WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

Sales Consultant _____ Date _____ Sales Manager _____ Date _____

Customer _____ Date _____

Email _____

MAINTENANCE			
Scheduled Maintenance (Normal Usage)		2.4 GDI	1.6/2.0 T-GDI
Engine Oil and Filter	Replace	7,500 or 12 mos.	Replace 6,000 or 12 mos.
Fuel Additives	Add	7,500 or 12 mos.	Add 6,000 or 12 mos.
Tire Rotation	Perform	7,500	Perform 6,000
Vacuum Hose	Inspect	7,500 or 12 mos.	Inspect 6,000 or 12 mos.
Air Cleaner Filter	Inspect	7,500 or 12 mos.	Inspect 6,000 or 12 mos.
	Replace	22,500 or 36 mos.	Replace 18,000 or 36 mos.
Climate Control Air Filter (for Evaporator and Blower Unit)	Replace	7,500 or 12 mos.	Replace 6,000 or 12 mos.
Air Conditioning Refrigerant			
Brake Hoses & Lines			
Drive Shafts & Boots			
Front Brake Disc/Pads, Calipers	Inspect	7,500 or 12 mos.	Inspect 6,000 or 12 mos.
Rear Brake Disc/Pads			
Steering Gear Box, Linkage & Boots / Lower Arm Ball Joint, Upper Arm Ball Joint			
Suspension Mounting Bolts			
Exhaust Pipe & Muffler			
Fuel Tank Air Filter			
Vapor Hose & Fuel Filler Cap, Fuel Tank	Inspect	15,000 or 24 mos.	Inspect 12,000 or 24 mos.
Brake Fluid			
Parking Brake			
Fuel Filter			
Fuel Lines, Fuel Hoses and Connections	Inspect	30,000 or 48 mos.	Inspect 24,000 or 48 mos.
Drive Belt	Inspect	First 60,000 or 72 mos.	Inspect First 60,000 or 72 mos.
		Subsequent, every 15,000 or 24 mos.	Subsequent, every 12,000 or 24 mos.
Spark Plugs	Replace	97,500	Replace 42,000
Coolant	Replace	First 120,000 or 120 mos.	Replace First 120,000 or 120 mos.
		Subsequent, every 30,000 or 24 mos.	Subsequent, every 30,000 or 24 mos.
Valve Clearance	Inspect	60,000 or 72 mos.	Inspect 60,000 or 72 mos.
Ecoshift Dual Clutch Transmission Fluid		-	Inspect 24,000 or 48 mos.
Automatic Transmission Fluid	No checks or services required for Normal Usage driving.		
*Check the engine oil regularly between recommended oil change intervals. We recommend Quaker State oil.			
*See Owner's Manual for details regarding Severe Usage maintenance recommendations.			

Looking For more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual. If you require additional information or are unsure of a specific issue, We recommend that you always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer. The information contained in this Quick Reference Guide is correct at the time of printing; however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment.

The Hyundai SONATA

Quick Reference Guide



Roadside Assistance: 1-800-243-7766
 Consumer Affairs: 1-800-633-5151
 Sirius XM® Radio: 1-800-967-2346
 Blue Link: 1-855-2BLUELINK (1-855-225-8354)




HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America
Hyundai Customer Connect Center
P.O. Box 20850
Fountain Valley, CA 92728-0850
800-633-5151 consumeraffairs@hmmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

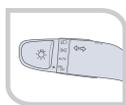

Head lights
Page 07




Instrument
cluster
Page 09



Cruise control/
smart cruise
control
Page 36




Navigation
Page 20

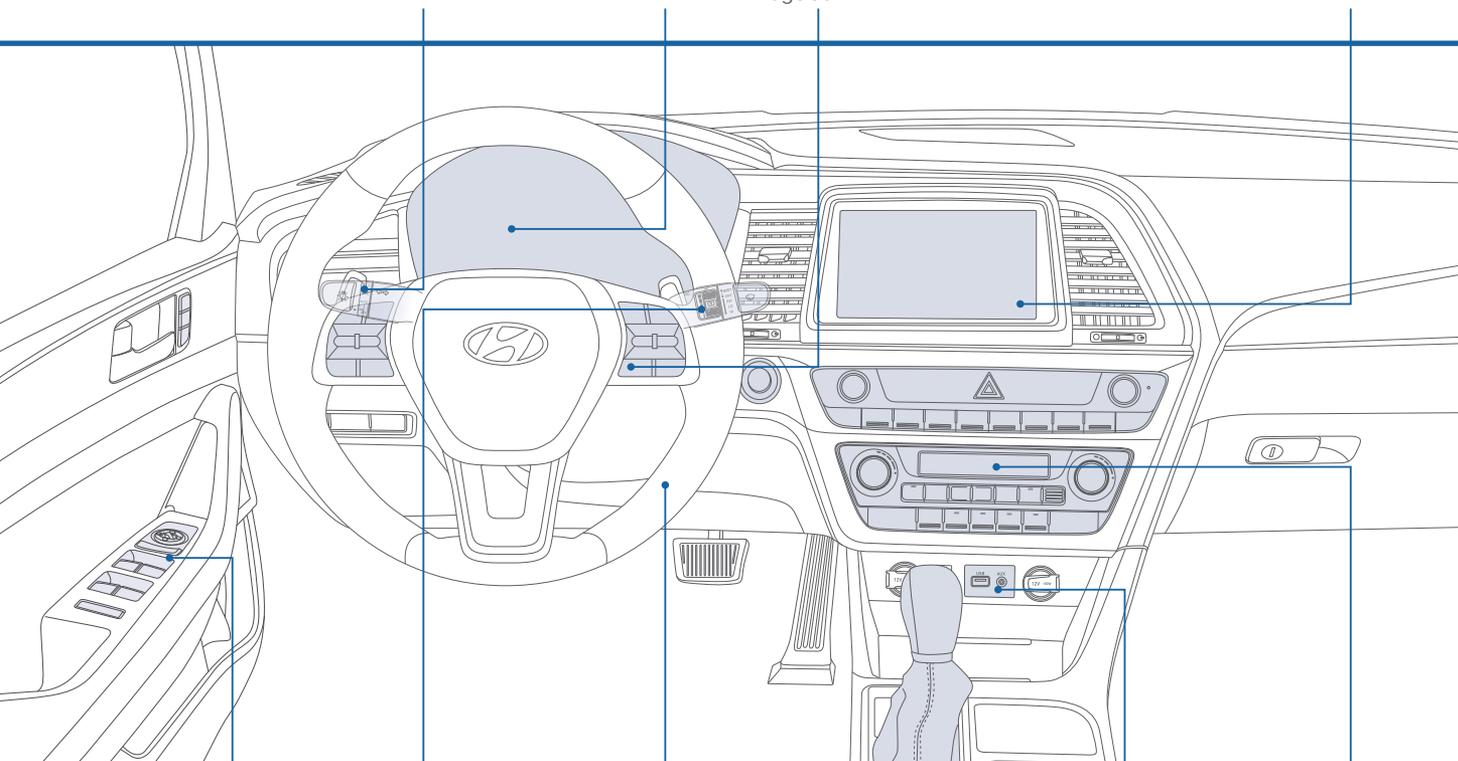

Driver's main
controls
Page 02



Wiper and
washer
Page 08

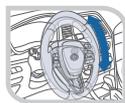

Steering wheel
adjustment
Page 02



AUX,USB and
iPod port
Page 24



Climate
control
Page 13

FEATURES AND CONTROLS

Climate control	13
Driver's main controls	02
Headlights	07
Instrument cluster	09
Instrument panel illumination	12
Interior lights	06
LCD display control	11
LCD display modes	11
Seat-Front seat adjustment	03
Seat-Headrest adjustment	04
Seat-Seat belt adjustment	04
Seat-Seat warmer & ventilated seat	04
Smart key	01
Steering wheel adjustment	02
Sunroof	06
Trunk-Smart trunk	05
Trunk-Trunk opening	05
Warnings and indicators	12
Wipers and washer	08

MULTIMEDIA

Android Auto™	25
Apple CarPlay™	27
Audio mode	19
AUX, USB and iPod port	24
Blue link telematic system	21
Bluetooth operational tips	18
Bluetooth phone operation	17
Bluetooth phone pairing	17
Clock Adjustment	24
Navigation	20
Steering wheel audio control	19

DRIVING

Auto Hold	31
Automatic emergency braking (AEB)	35
Blind Spot collision warning (BCW)	34
Cruise control / Smart cruise control	36
Electric Parking Brake (EPB)	31
Electronic Stability Control (ESC)	33
Lane Keeping Assist (LKA)	33
Rear parking assist system	34
Tire mobility kit	37
Tire Pressure Monitoring System (TPMS)	32

WARNING!

To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.


Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

* Some vehicles may not be equipped with all the listed features.

SMART KEY



- Lock
- Unlock
- Trunk open
- Panic

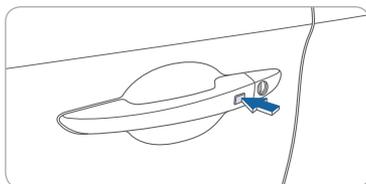


Driver's door Lock / Unlock
Smart key must be within 28~40 in. from the outside door handle.

Press: One time – Unlock driver door
Two times – Unlock all doors
Three times – Lock all doors

NOTE:




To unlock/lock all doors, the button must be pressed two times or three times within 4 seconds.

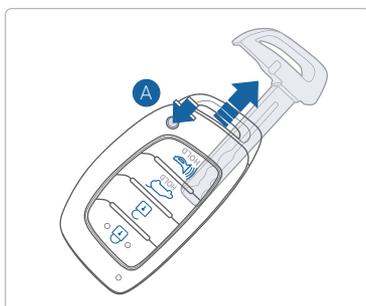

Remove mechanical key.

Press and hold the release button **A** to remove the mechanical key.


STEERING WHEEL ADJUSTMENTS

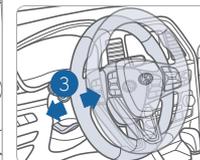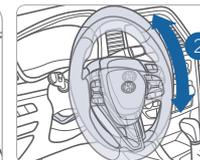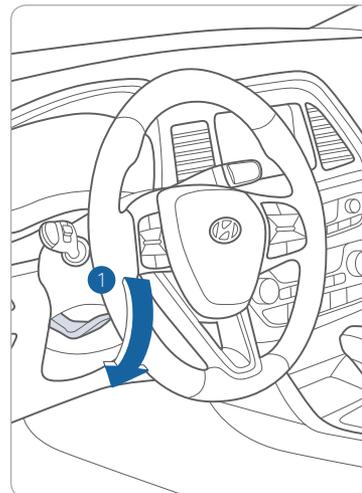

NOTE: Do not adjust while driving.

1. Pull the lever **1** down.
2. Set the angle **2** and distance **3**.
3. Pull the lever **1** up to lock position.

DRIVER'S MAIN CONTROLS

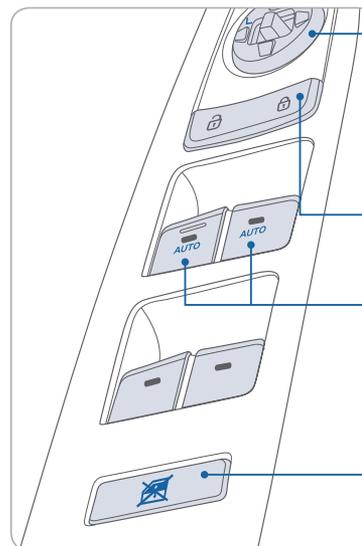

Outside Rearview Mirror
Move the lever towards L (left) or R (right) on the switch. Then adjust the mirror by using the mirror adjustment control switch.

Door Lock
Locks/unlocks all doors.

Window Auto down/up (if equipped)
Press past detent to fully open/close window.

Power window lock button
Disables the power window switches on the rear passenger doors.


FRONT SEAT ADJUSTMENT (Manual)



Forward and backward ①




Seat cushion height ②

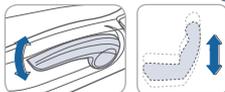


Seatback angle ③




FRONT SEAT ADJUSTMENT (POWER)

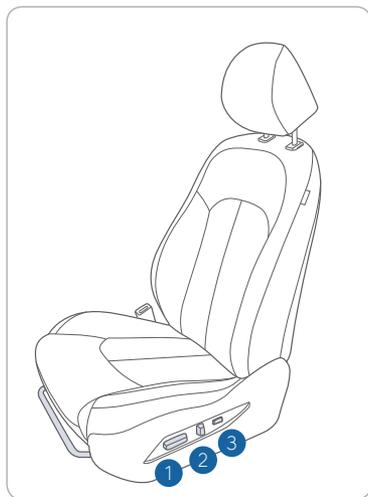


Forward and backward ①

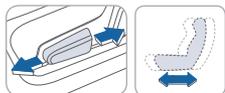


Seat cushion height

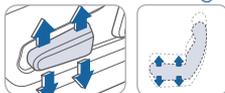


Seatback angle ②

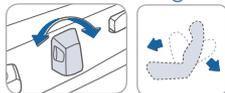

Lumbar support (for driver's seat) ③

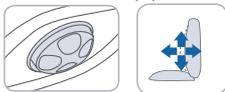


HEADREST ADJUSTMENT

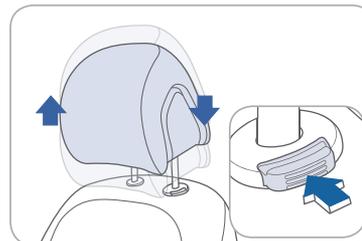



To Raise Headrest:
Pull headrest up.

To Lower Headrest:
Press lock button while pressing down on headrest.

SEAT BELT ADJUSTMENT (Front seat)

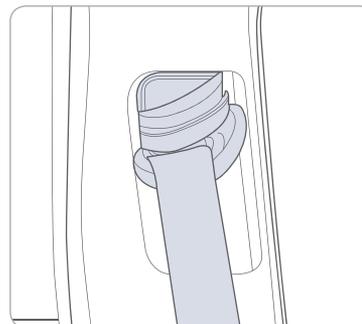

Pull up to raise.

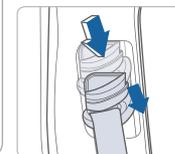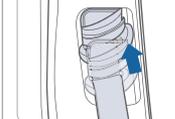

Press button and push down to lower.

SEAT WARMER AND VENTILATED SEAT

Seat Warmer



Push the button to select desired level.

HIGH (☰) → MIDDLE (☱) → LOW (☲)
↑ OFF ↓


Seat Warmer and Ventilation



Push the right portion of the switch to warm or the left portion to cool.

HIGH (☰) → MIDDLE (☱) → LOW (☲)
↑ OFF ↓

TRUNK OPENING

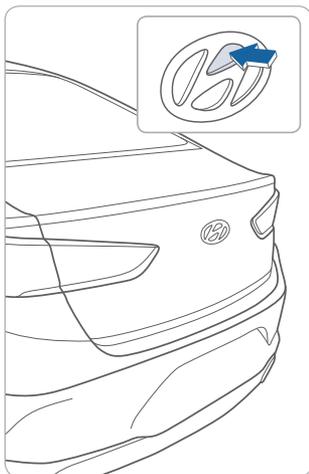

Opening the trunk

1. Make sure the shift lever is in P (Park).
2. Then do one of the following :
 - Press the button on the trunk emblem after unlocking the door by remote key or smart key.
 - Press the button on the trunk itself with the Smart Key in your possession.



NOTE:

If vehicle is unlocked, the trunk can be opened without the smart key.




Press and hold.

- Press the trunk unlock button of remote key or smart key for more than 1 second.

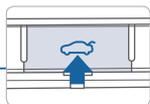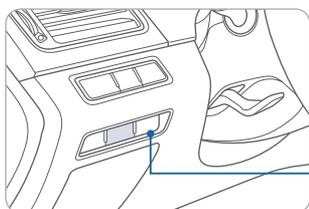

Press the release button in the vehicle.

SMART TRUNK

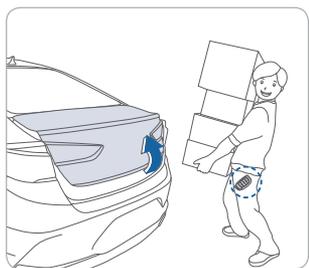

Smart Trunk

Trunk will slightly open automatically when detecting smart key within range near the trunk for more than 3 seconds.

To enable Smart Trunk function:


Vehicle must be in P (Park) to adjust settings in the User Setting mode.

1. Select "Door/Trunk" in the User Settings in the instrument cluster.
2. Check "Smart Trunk".

NOTE:

Function is active after 15 seconds when all doors are closed and locked and key is not detected. The vehicle will also provide an audible and visual alarm while activating. For more details, refer to Owner's Manual.

SUNROOF

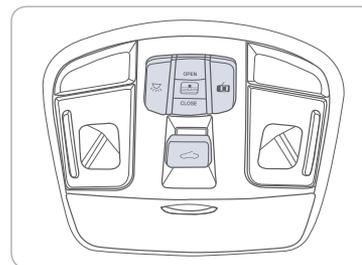


Sunshade




Press Rear Button to open Sunshade. Press Forward Button to close Sunshade (This operation will also close Sunroof if open or vented position.)

Sliding the sunroof

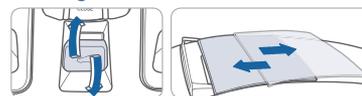


Slide the Sunroof Button rearward to open sunroof. (This operation will also open the Sunshade, if it is not in the open position.) Slide the Sunroof Button forward to close the Sunroof.

Tilting the sunroof

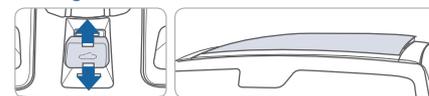

Press the Sunroof Button to tilt the Sunroof to the vented position. (This operation will also open the Sunshade, if it is not in the open position.) Pull the Sunroof Button downward to close the Sunroof.

INTERIOR LIGHTS

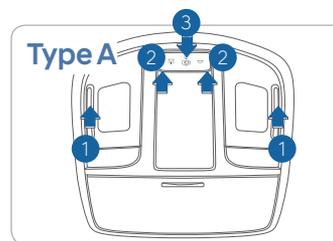


Front Map Lamp ①

Push the switch to turn the map lamp on or off.

Front Room Lamp (Type A) ②

Push the switch to turn the room lamp (overhead lamp) on or off.

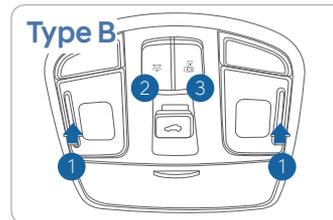


Front Room Lamp (Type B) ②

Push the switch to turn the room lamp (overhead lamp) on or off.

Front Door Lamp ③

Lights will turn on when any door is open.

HEADLIGHTS

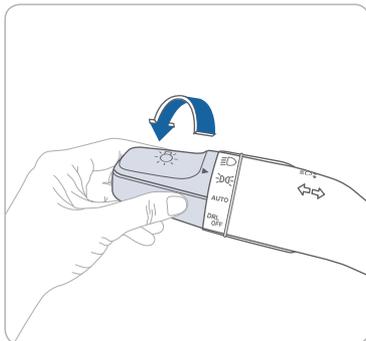


- ▶ | Headlight
- ▶ | Parking light
- ▶ | **AUTO** Auto light
- ▶ | **DRL OFF** Daytime Running Light OFF


Headlight Delay

Headlights may stay on for 15 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlights off.


Turn signals and lane change signals

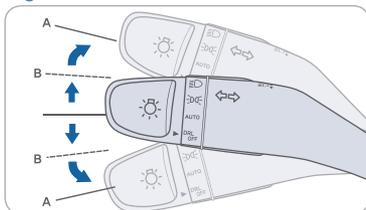


Flashing headlights

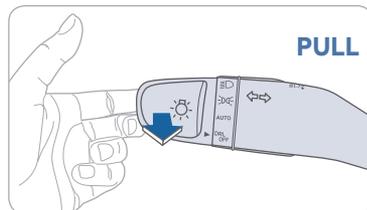

High beam

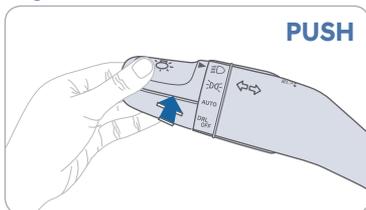

Smart high beam

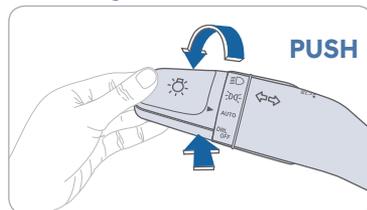


NOTE:

To turn off high beam, pull the lever towards you.


Smart High Beam Function

1. Select auto position on lever.
2. Push lever forward to engage Auto High beam.
3. Push lever forward again to disengage.

WIPERS AND WASHER

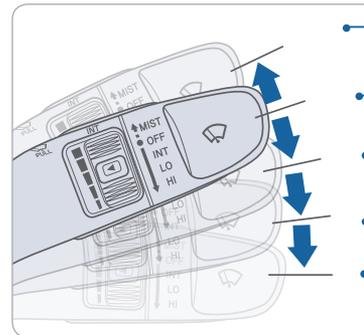


- **MIST** - Single wipe
- **OFF**
- **INT** - Intermittent wipe
- **LO** - Low wiper speed
- **HI** - High wiper speed

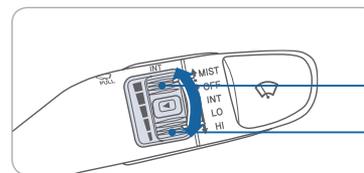

Intermittent Wipe Time Adjustment
Move the control switch.

- Fastest wiper speed
- Slowest wiper speed

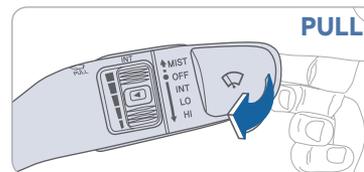

Windshield Washer

Pull the lever gently toward you to spray washer fluid on the windshield and to run the wipers 1-3 cycles.

INSTRUMENT CLUSTER

Type A



Type C (colored display)



Type B (colored display)



- 1 Tachometer
- 2 Speedometer
- 3 Engine coolant temperature gauge
- 4 Fuel gauge
- 5 Warning and indicator lights
- 6 LCD display (including Trip computer)

LCD DISPLAY MODES


Modes	Symbol	Explanation
Trip Computer		This mode displays driving information like the tripmeter, fuel economy, and so on.
Turn By Turn (TBT) (if equipped)		This mode displays the state of the navigation.
Assist (if equipped)		This mode displays the state of the Smart Cruise Control (SCC) and Lane Keeping Assist System (LKAS).
User Settings		Displays service interval and warning messages. Changes settings.
Warning		Displays service interval and warning messages.

LCD DISPLAY CONTROL




- : MODE button for changing modes
- : MOVE switch for changing items
- : SELECT/RESET button for setting or resetting the selected item

Type A

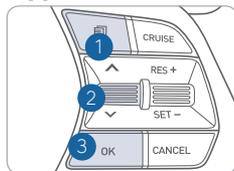


Type B

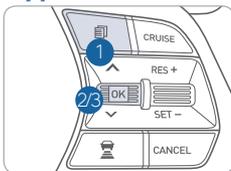


WARNINGS AND INDICATORS

Air bag warning light	Seat belt warning light	Parking brake & Brake fluid warning light
Anti-lock Brake System (ABS) warning light	Electronic Brake Force Distribution (EBD) system warning light	
Electric Power Steering (EPS) warning light	Malfunction Indicator Lamp (MIL)	Charging system warning light
Engine coolant temperature warning light	Engine oil pressure warning light	Low fuel level warning light
Low tire pressure warning indicator/TPMS malfunction lamp	Electric Parking Brake (EPB) warning light	Master warning light
Electronic Stability Control (ESC) indicator	Electronic Stability Control (ESC) OFF indicator	Immobilizer indicator
Turn signal indicator	Low beam indicator	High beam indicator
Light ON indicator	Smart high beam indicator	CRUISE Cruise indicator
Cruise SET indicator	AUTO HOLD indicator	SPORT SPORT mode indicator
ECO mode indicator	Lane Keeping Assist System (LKAS) indicator	
Automatic Emergency Braking (AEB)	Icy Road Warning Light	


INSTRUMENT PANEL ILLUMINATION

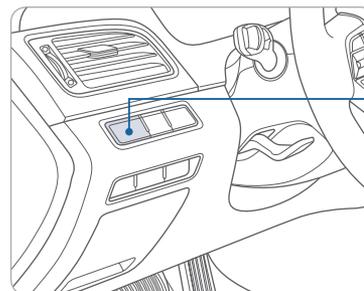

Press - or + to adjust instrument cluster illumination brightness.

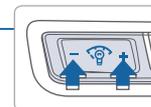

MANUAL CLIMATE CONTROL

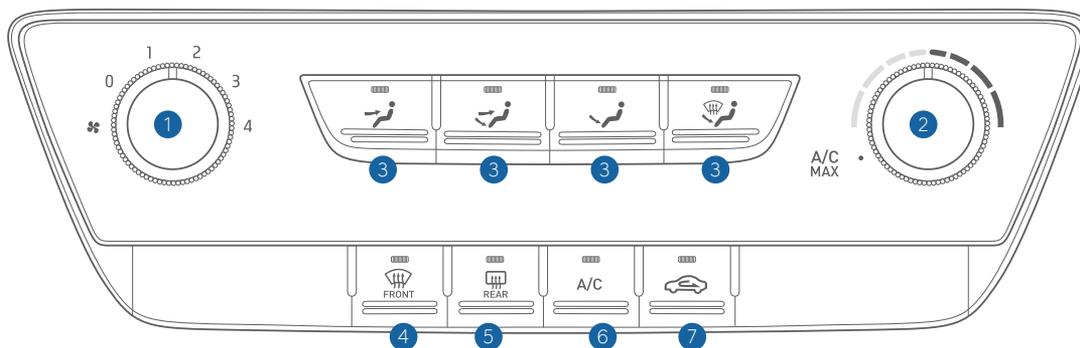

- 1 Fan speed control knob
- 2 Temperature control knob
- 3 Mode selection buttons
- 4 Front windshield defroster button

- 5 Rear window defroster button
- 6 A/C (Air Conditioning) button
- 7 Air intake control button

Defogging / Defrosting

1. Press the defrost button. 
2. Select warmest temperature. 
3. Set the fan speed to the highest speed. 

Air intake control


-  Recirculated air position (LED ON)
-  Outside (fresh) air position (LED OFF)

Mode selection

Changing the direction of the air flow as follow.

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor & Defrost-Level
-  Defrost-Level

Rear Window Defroster

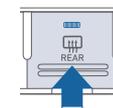

Press to activate/deactivate the rear defroster.

A/C MAX mode


A/C MAX Mode automatically engages Recirculated air position and air conditioning. Return to normal A/C mode after the vehicle interior has cooled sufficiently.

NOTE:

To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

AUTOMATIC CLIMATE CONTROL

Type A

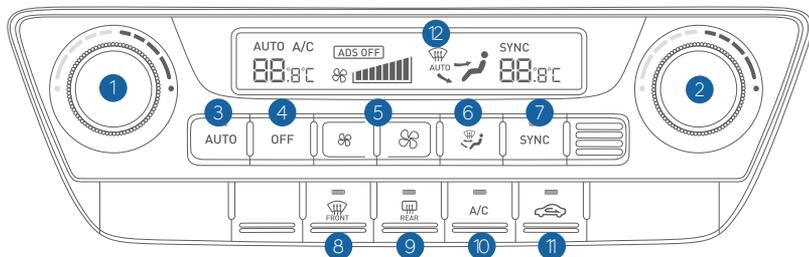

- 1 Driver's temperature control knob
- 2 Passenger's temperature control knob
- 3 AUTO (automatic control) button
- 4 OFF button
- 5 Fan speed control button
- 6 Mode selection button

Defogging / Defrosting



1. Press the defrost button.



2. Select warmest temperature.



3. Set the fan speed to the highest speed.

NOTE:


To reduce tendency of the glass fogging and also to improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

System off

Pressing the OFF button will place the system in the OFF mode.

- Climate control fan will turn off.
- Outside (fresh) air position will be selected.
- Vented air will be at last set temperature.

Type B

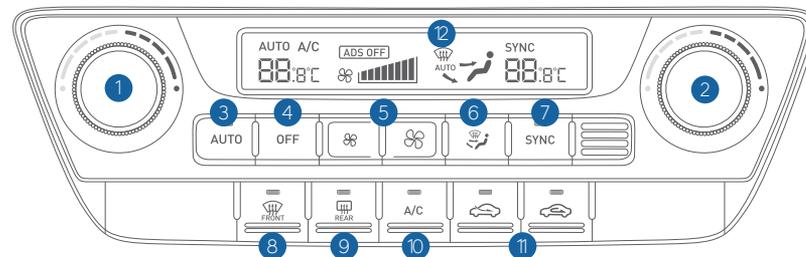

- 7 SYNC button
- 8 Front windshield defroster button
- 9 Rear window defroster button
- 10 Air conditioning button
- 11 Air intake control button
- 12 Climate control information screen

Air intake control



Recirculated air position (LED ON)



Outside (fresh) air position (Type A) (LED ON)



Outside (fresh) air position (Type B) (LED OFF)

Automatic heating / Air conditioning



The modes, fan speeds, air intake and air conditioning will be controlled automatically by the temperature setting you select.

Mode selection



Changing the direction of the air flow as follow.



BLUETOOTH PHONE PAIRING


Pairing tutorials, phone compatibility and operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



BLUETOOTH PHONE OPERATION

Phone setup (pairing phone)

1. Turn Bluetooth® on from your mobile phone. : Press the SETUP button on the head unit and touch the "Bluetooth" icon or button on the steering wheel remote control.

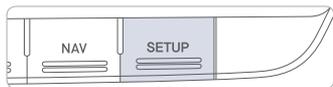

2. Press "Add New" on the radio screen.



3. Select the car name shown on your mobile phone to pair.
4. Enter the passkey or accept the authorization popup on your phone. (The default passkey is 0000.)



5. Bluetooth is connected.


NOTE: Vehicle must be parked to complete pairing process.

BLUETOOTH® OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. Keep the Bluetooth® volume to a low level. High level volume may result in distortion and echo.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

Steering wheel bluetooth® control

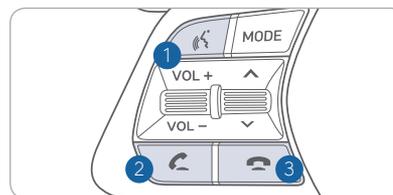

- 1 **TALK**
Activates voice recognition.
- 2 **CALL**
Places and transfers calls.
- 3 **END**
Ends calls or cancels functions.

To Answer a Call:

- Press button on the steering wheel.

To Reject a Call:

- Press button on the steering wheel.

To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

To Transfer a Call to the Phone (Private call on handset – do not use while driving):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

To Finish a Call:

- Press button on the steering wheel.

Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

Calling by Name:

1. Press button.
2. Say the following command:
 - "Call <John Smith>": Connects the call to John.
 - "Call <John Smith> on <on Mobile/at Work/at Home>": Connects the call to John's Mobile, Home, or Work phone number.

Dialing by Number:

1. Press button.
2. Say "Dial Number".
3. Say desired phone number.

For complete list of commands, refer to your Owner's Manual.

AUDIO MODE



Press **POWER** button **A** to turn radio on.

• **TUNING/LISTENING TO CHANNELS**

1. Press **RADIO** button **B**.
2. Rotate **TUNE** knob **C** to desired channel.

NOTE:

A clear view of the southern sky is recommended to ensure XM® radio reception.

• **SETTING PRESET MEMORY BUTTONS (FM/AM/SXM®)**


Press and hold any preset button **D** until an audible beep is heard to store current channel.

• **ADJUSTING THE SOUND CONTROL**

1. Press **SETUP** button **E**.
2. Select **Sound** button on screen.
3. Touch on-screen arrows to adjust desired setting.



STEERING WHEEL AUDIO CONTROL

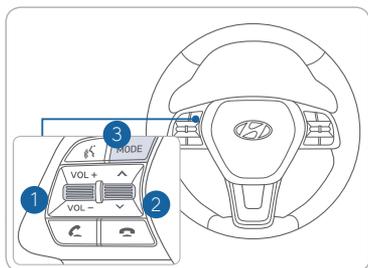

- 1 **VOLUME**
Raises or lowers speaker volume.
- 2 **SEEK/PRESET**
Change station.
- 3 **MODE**
Change the audio source.


NAVIGATION

Basic features on the map screen



- 1 Move to the Home Screen
- 2 Change the map view mode
- 3 Voice Guidance On/Off
- 4 Zoom in the map
- 5 Set the zoom level automatically according to the guidance
- 6 Zoom out the map
- 7 Quick and easy selection of a destination and options
- 8 Touch to scroll the map
- 9 Start Guidance
- 10 Route Options
- 11 Save frequently used address to address book
- 12 Find a POI (Point of Interest) around the current position
- 13 View the vehicle's current position on the map screen


Destination search screen

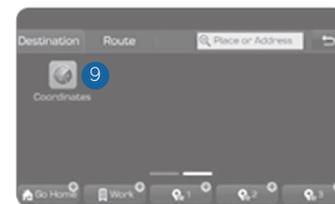

Press **[NAV]** button in the navigation head unit, and finds a destination by using the **[Destination]** menu.

- 1 **Address** : Set destination by address search.
- 2 **Previous destinations** : Select from previously inputted addresses and POIs.
- 3 **Online Search** : Runs online search.
- 4 **POI categories** : Select the desired item in the sub-categories.
- 5 **Gas stations** : Select the desired destinations among the searched gas stations.
- 6 **Restaurants** : Select the desired destination among the searched restaurants.
- 7 **Emergency** : Select the desired destination among the searched emergency facilities.
- 8 **Address Book** : Search the destination with the address book.
- 9 **Coordinates** : You can find a destination by entering the coordinates of latitude and longitude.

BLUE LINK TELEMATICS SYSTEM

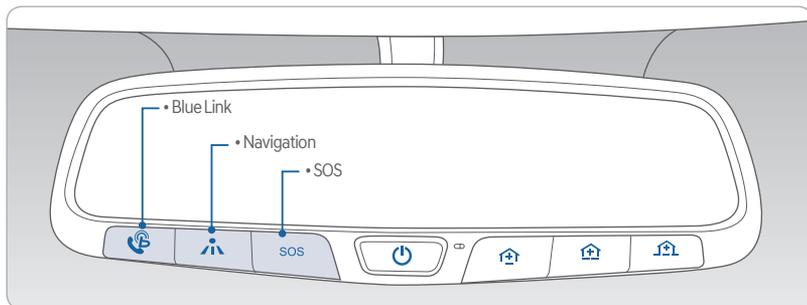

Press the  button for access to the voice-response menu of services.

You can say:

- "Service Link" to schedule a service appointment.
- "Roadside Assistance" for roadside services.
- "Blue Link Account Services" for help with your Blue Link subscription.
- Press the  button for Destination Search.
 - Command: Find <POI Name>.
 - Example: "Find Starbucks".
- Press the **SOS** button for SOS Emergency Assistance.
- Refer to your Blue Link User's Manual for detailed information on system operation.
- For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Remote Start



You can download the Blue Link mobile app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android® — Google Play

Remote Start enables you to remotely start your vehicle from virtually anywhere. For navigation vehicles, you can also enable climate control remotely and turn on the rear-window defroster, ensuring a warm or cool car is ready to go when you are.

-  To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to www.MyHyundai.com.

Remember:

- Remote Start with Climate Control will automatically shut off after 10 minutes or after selected engine timer runs out in navigation vehicles.
- While this feature is active, the parking lights will blink until vehicle is turned off or when vehicle is in operation.
- To continue operation of the vehicle, the proximity key must be inside the vehicle with the driver prior to pressing the brake and being able to move the gearshift from the P (Park) position.

Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security/panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

Remote Start will terminate:

- After 10 minutes or after selected engine timer runs out in navigation vehicles
- Brake is pressed without proximity key inside vehicle
- Alarm is triggered without proximity key inside vehicle
- Door/trunk is opened from inside the vehicle

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.


⚠ WARNING!

Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

⚠ CAUTION!


If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

AUX, USB AND iPod PORT

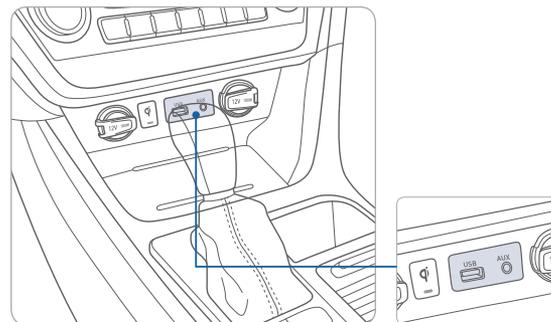

Use the Aux input jack to connect an external audio device. Use the media USB port to connect a USB device with music files or to access features on your smartphone using Apple CarPlay or Android Auto phone projection. Use the charging USB port to charge an external device such as a cell phone

CLOCK ADJUSTMENT

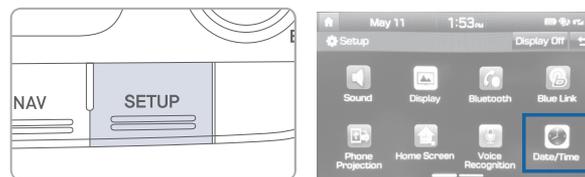

1. Press the SETUP button on the audio head unit.
2. Select Date/Time.

Date/Time

Set the date, time displayed on the audio screen.

Time Format

Choose between 12-hour and 24-hour time formats.

ANDROID AUTO™

REQUIREMENTS:

- Micro USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
- Using the micro USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

PHONE SETUP

Turn on Bluetooth® on your phone and connect the micro USB cable to your phone and the USB port on the vehicle.


Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

NOTE: Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

CAR SETUP

1. Press the SETUP button.
2. Touch the “Phone Projection” icon on screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

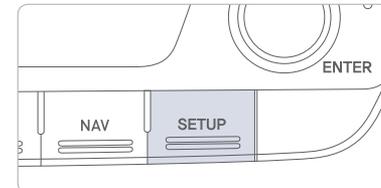

For more detailed information on how to operate Android Auto, please refer to your navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website
<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

APPLE CARPLAY™

REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
 - Close all apps and then restart them or
 - Disconnect and then reconnect your phone
 - Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

PHONE SETUP


On your phone, go to Settings > General > Restrictions > CarPlay to allow CarPlay access.

On your phone, go to Settings > General > Siri and ensure Siri is turned ON.

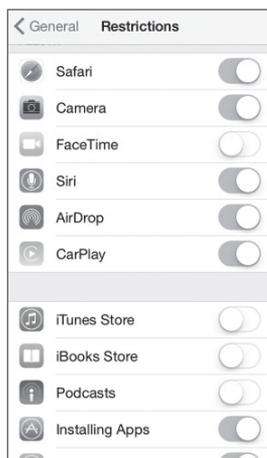

CAR SETUP

1. Press the SETUP button.
2. Touch the "Phone Projection" icon on the screen.
3. Touch "Apple CarPlay" on the Connectivity Settings screen. Then touch "On" to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch 'OK' when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

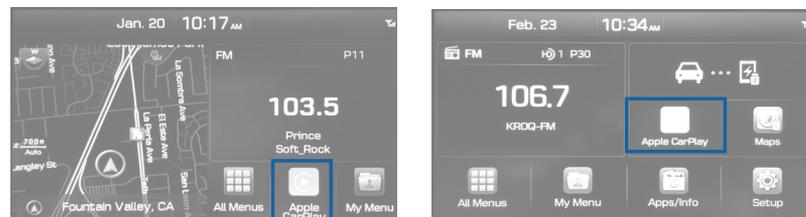

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

CarPlay Home Screen



- | | |
|-------------------------|----------------------------------|
| 1 HOME ICON | 7 APPLE MAPS |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES |
| 3 CELLULAR SIGNAL | 9 3RD PARTY APPS |
| 4 PHONE TIME | 10 SCREEN PAGE INDICATOR |
| 5 PHONE | 11 EXIT TO HYUNDAI |
| 6 APPLE MUSIC™ | 12 CURRENT CARPLAY AUDIO PLAYING |

SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
 - “Text <John Smith> ‘Call you later’” to send a text message.
 - “Read text messages” to read available text message.
 - “Call <John Smith>” to make a phone call.
 - “Find <POI/Destination>” to locate a POI/Destination.

PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically asks ‘Who you would like to call’ when the PHONE 5 icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically asks ‘To hear unread messages or create a new one’ when the MESSAGE icon is selected.


3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

ELECTRIC PARKING BRAKE (EPB)

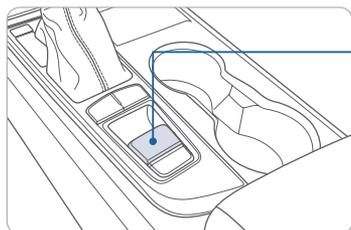

Applying



Stop the vehicle, then pull upwards on the EPB switch.

Releasing

Move shift lever from P to R or D while depressing the brake pedal.

or




Press the EPB switch while depressing the brake pedal.

NOTE:

If necessary, emergency braking is possible by pulling and holding the EPB switch.

AUTO HOLD

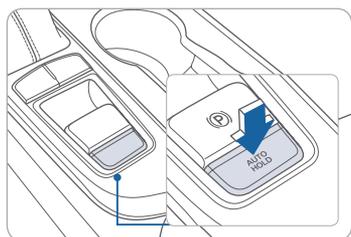

The Auto Hold function keeps the brakes applied after the vehicle has to come to a stop. This prevents the vehicle from moving forward without the need for the driver to apply brake pedal pressure. The brakes are released automatically when the accelerator pedal is pressed.

WHITE
AUTO
HOLD

1. Press the AUTO HOLD switch.

GREEN
AUTO
HOLD


2. Stop the vehicle by pressing the brake pedal. The brakes will remain engaged even if the brake pedal is released.

WHITE
AUTO
HOLD

3. The brakes will release when the accelerator pedal is pressed with transmission in D, R or manual mode.

To cancel the AUTO HOLD operation, press the AUTO HOLD switch again.

TIRE PRESSURE MONITORING SYSTEM (TPMS)

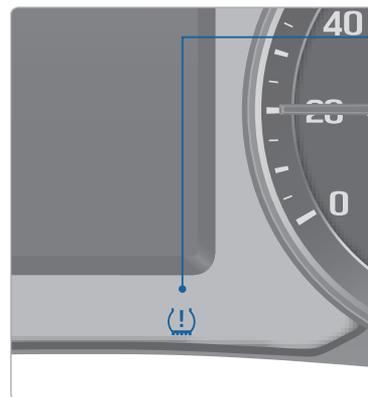

Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Position Indicator and Tire Pressure Indicator (Shown on the LCD display)


LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tires is significantly under-inflated.

TPMS MALFUNCTION INDICATOR

Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized Hyundai dealer as soon as possible.


LOW TIRE PRESSURE POSITION INDICATOR AND TIRE PRESSURE INDICATOR (LCD DISPLAY)

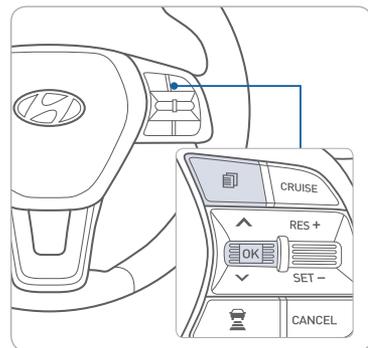

Select the Assist mode  by pressing the mode button on the steering wheel to display tire pressure.

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator  will illuminate and the LCD  display will indicate tire(s) requiring air.

ELECTRONIC STABILITY CONTROL (ESC)

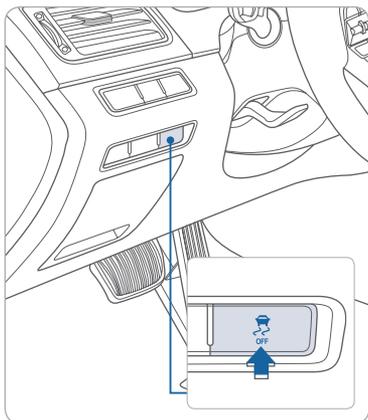


The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

ESC automatically selects the ON position when the engine is started.

To turn off Traction Control
Press the ESC OFF button.

To turn off Traction and Stability Control
Press and hold the ESC OFF button for more than 3 seconds.

LANE KEEPING ASSIST (LKA)

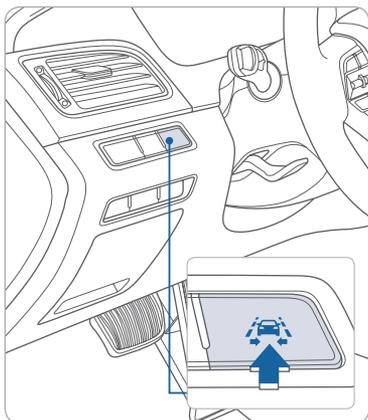


The Lane Keeping Assist (LKA) uses the front camera to monitor the lines on the road. In case of an unintended lane departure, it will warn the driver and can apply counter steering torque to guide the car back to the center of the lane.

- To turn on the LKA, press the LKA button.
- To turn off the LKA, press the LKA button again.

To adjust the settings of LKA, select the LKA sub menu in the LCD cluster display under User Settings.

BLIND SPOT COLLISION WARNING (BCW)

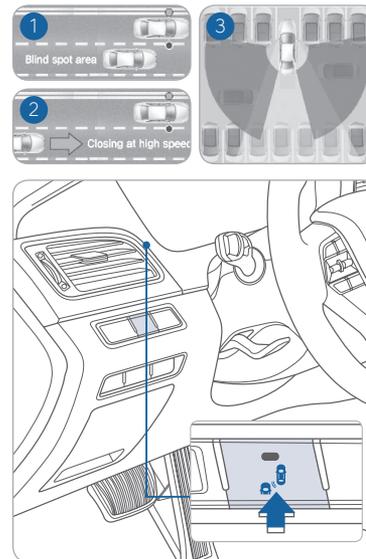

The BCW (Blind-Spot Collision Warning) system uses a radar sensor to alert the driver while driving.


The system monitors the rear area of the vehicle and provides information to the driver. The system incorporates the following functions:

- 1 Blind-Spot Collision Warning (BCW)
- 2 Lane Change Assist (LCA)
- 3 Rear Cross-Traffic Collision Warning (RCCW)– in reverse gear under 6 mph

- To turn on the BCW, press the BCW button (indicator illuminated).
- To turn off the BCW, press the BCW button again.

The BCW and LCA systems will activate once the vehicle speed exceeds 20 mph. The RCCW system activates in reverse gear under 6 mph.

REAR PARKING ASSIST SYSTEM

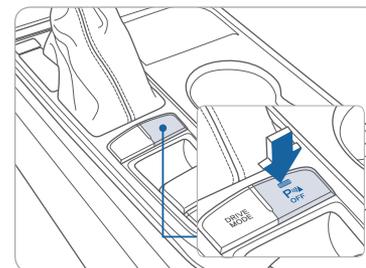

The rear parking assist system assists the driver during reverse movement of the vehicle by chiming if any object is sensed within the distance of 47 inch behind the vehicle.

Push the button to turn off the rear parking assist system. The indicator light on the button will turn on.


AUTOMATIC EMERGENCY BRAKING (AEB)

The Automatic Emergency Braking (AEB) system is designed to help detect and monitor the vehicle ahead or detect a pedestrian in the roadway through radar signals and camera recognition to warn the driver that a collision is imminent, and if necessary, apply emergency braking.

To activate or deactivate the AEB system, select or deselect: "User Settings → Driving Assist → Automatic Emergency Braking" The AEB deactivates when system setting is deselected. A warning light  will illuminate on the LCD display when the AEB system is deactivated. Please refer to the Owner's Manual for more information.

Caution: Do not try to test the AEB system.


CRUISE CONTROL/SMART CRUISE CONTROL

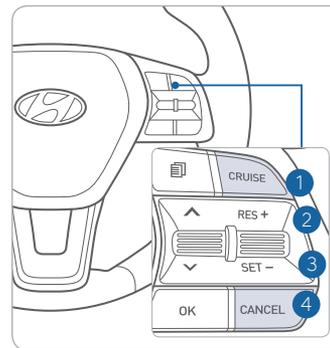

The Cruise Control system allows you to program the vehicle to maintain a constant speed without holding the accelerator pedal.

- 1 Turn On/Off the Cruise Control.
- 2 Resume or Increase the Cruise Control speed.
- 3 Set or Decrease the Cruise Control speed.
- 4 Cancel the Cruise Control.

Cruise Control can be cancelled when the brake pedal is pressed.


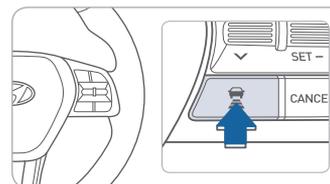


Setting Vehicle Distance (Smart Cruise Control only)

This system assist you in setting the distance from the vehicle ahead and will maintain the selected distance without you depressing the accelerator or the brake pedal.

The vehicle to vehicle distance 1 will automatically activate when you set the cruise speed 2.


Each time the vehicle distance set button is pressed, the vehicle to vehicle distance changes as follows:

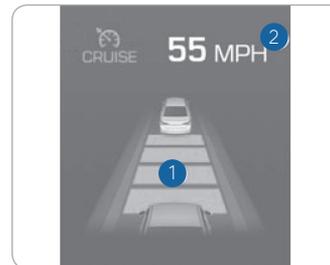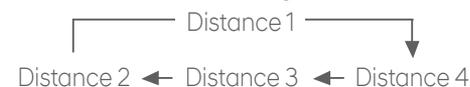

If your vehicle is equipped with Advanced Smart Cruise Control and you wish to eliminate the vehicle distance function, you can change cruise control setting to a standard setting.



Press the Cruise Control button on the steering wheel to turn on Cruise Control. Then press and hold the vehicle distance button for more than 2 seconds to toggle between Smart Cruise Control (SCC) and Cruise Control (CC) mode.

TIRE MOBILITY KIT

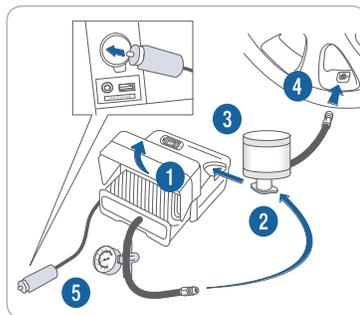


Setup

1. Remove the speed restriction label from the sealant bottle and place it on the center of the steering wheel.
2. Ensure that the compressor is switched to OFF.
3. Lift the cable cover **1** and screw the compressor hose **2** on to the connector of the sealant bottle.
4. Insert the sealant bottle into the housing slot **3** of the compressor.
5. Screw the filling hose **4** of the sealant bottle onto the tire's valve stem.
6. Insert the compressor power plug **5** into the vehicle's power outlet.
7. Turn the ignition switch to the ON position or press the Engine Start/ Stop button twice.

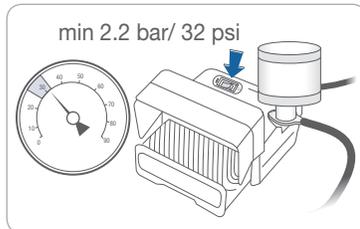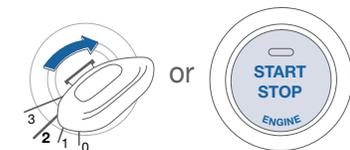

Inflate Tire

1. Switch ON the compressor and let it run for approximately 5 minutes.
2. Switch OFF the compressor and check to ensure that inflation pressure is over 32 psi. If not, the puncture is too large to repair. Contact Hyundai Roadside Assistance.
3. Remove the filling hose **4**, compressor hose **2**, and compressor power plug **5**.

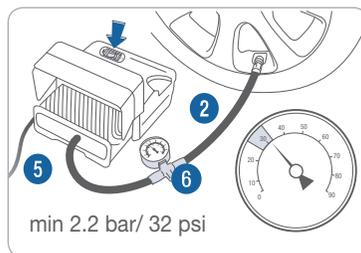

Recheck Tire Pressure

1. Screw the compressor hose **2** directly to the tire valve.
2. Insert the compressor power plug **5** into the vehicle's power outlet.
3. Adjust to the recommended tire pressure located on the driver side door jam placard.

To increase the tire pressure:

1. Switch ON the compressor.
2. To check the current tire pressure, briefly switch OFF the compressor.

To reduce the tire pressure:

1. Loosen the knob **6** on the gauge. Tighten the knob **6** to set tire pressure.



SONATA CUSTOMER DELIVERY CHECK LIST

HYUNDAI OWNER	DEALERSHIP NAME
SALES CONSULTANT	DATE
VIN	PREVIOUS VEHICLE

BEFORE DELIVERY

- SET TIRE PRESURE LF__ RF__ RR__ LR__
- VERIFY VEHICLE IS CLEAN, IN GOOD CONDITION, FREE OF CHIPS AND SCRATCHES · CLEAN WINDSHIELD AND BACK WINDOW
- ENSURE FLOORMATS ARE SNAPPED INTO PLACE

WALK THE CUSTOMER THROUGH EACH OF THE FOLLOWING KEY DELIVERY FEATURES

- REVIEW QUICK REFERENCE GUIDE
- PAIR CUSTOMER'S PHONE TO THE BLUETOOTH SYSTEM (if equipped) - page 17
- OPERATION OF THE NAVIAGATION SYSTEM (if equipped) - page 20
- REVIEW AND TEAR OFF VOICE COMMAND / QUICK TIP CARD
- OPERATION OF THE AUDIO SYSTEM
- HOW TO DEFROST - page 13
 - 1** Press the front defrost button.
 - 2** Set to warmest temperature setting.
 - 3** Set to highest fan speed.
- TIRE PRESSURE MONITORING SYSTEM (TPMS) - page 32



LOW TIRE PRESSURE INDICATOR / TPMS MALFUNCTION INDICATOR

NOTE: Tire pressure may vary in colder temperatures causing the low tire pressure indicator  to illuminate. Inflate tires according to the Tire Pressure Label located on the driver's side door pillar.

BLUETOOTH® HANDS-FREE HYUNDAI

CONNECTING YOUR PHONE

On the radio:

1. Push the **SETUP** button.
2. Select **Bluetooth**.
3. Select **Bluetooth Connection**.
4. Select **Add New**.

In your phone's Bluetooth settings:

5. Select the <Vehicle Name> on your phone.
6. Enter the passkey from the radio or accept the authorization pop-up on your phone.

SWITCHING BETWEEN PAIRED PHONES

Using Voice Command: "Change Bluetooth device"

On the radio:

1. Push the **SETUP** button.
2. Select **Bluetooth**.
3. Select **Bluetooth Connection**.
4. Select **Connect** next to the desired phone.

For more information, visit HyundaiBluetooth.com