

**VOICE RECOGNITION TIPS** (If equipped)

**BLUETOOTH®**  
**Command** **Example**  
 Dial <Phone #> — “Dial 7-1-4-9-6-5-3-0-0-0”  
 Call <Name> — “Call John Smith”

Improving how you store your contacts can optimize your Bluetooth® Voice Recognition performance:  
 • Use full names instead of short or single-syllable names (“John or Dad”)  
 • Avoid using special characters/emojis or abbreviations (“Dr.”) when saving contacts

**NAVIGATION**  
**Command** **Example**  
 Find Address — “1-2-3-4-5 1st Street, <House #, Street, City, State>  
 Find <POI Name> — “Find McDonald’s”

Located on Rearview Mirror  
**LOCAL SEARCH**  
**Command** **Example**  
 Find <POI Name> — “Find Lowe’s® near me”  
 <POI Name> — “Starbucks®”

- BLUE LINK – pages 26
  - Assist with creating MyHyundai.com account
  - Assist with Blue Link enrollment
  - Show Blue Link Users Manual
  - Encourage customer to download the MyHyundai by Blue Link app

- Date/Time – pages 36
  - Demonstrate how to set Date/Time (including daylight savings setting for Navigation equipped vehicles)

- DUAL CLUTCH TRANSMISSION – pages 38
  - Explain DCT characteristics

- NAVIGATION (if applicable) – page 29
  - Demonstrate navigation system POI, enter dealer address

- TIRE PRESSURE MONITORING SYSTEM (TPMS) – page 44
  - Explain TPMS function of customer
  - When illuminated, one or more tires are under-inflated
  - Blinks for approximately one minute then remains illuminated when there is a malfunction with the TPMS



- VEHICLE SETTINGS – pages 12 and 31
  - Demonstrate vehicle settings in instrument cluster
  - Demonstrate navigation use, enter dealer address
  - Show radio presets

- INTRODUCTION AND LOCATION OF THE SERVICE DEPARTMENT
- SET FIRST SERVICE APPOINTMENT
- REVIEW FACTORY RECOMMENDED MAINTENANCE SCHEDULE
- WAS THE CONDITION OF YOUR VEHICLE (AT DELIVERY) TO YOUR SATISFACTION?

Sales Consultant	Date	Sales Manager	Date
Customer		@	Date
Email			

**MAINTENANCE**

Unit: mile


Scheduled Maintenance (Normal Usage)		2.0 MPI		1.6 Turbo-GDI
Engine Oil & Filter	Replace	7,500 or 12 mos	Replace	6,000 or 12 mos.
Fuel Additives	Add	7,500 or 12 mos	Add	6,000 or 12 mos.
Battery Condition				
Brake Lines, Hoses & Connections				
Front Brake Disc/Pads, Calipers				
Rear Brake Disc/Pads				
Steering Gear Box, Linkage & Boots, Lower Arm Ball Joint, Upper Arm Ball Joint	Inspect	7,500 or 12 mos	Inspect	6,000 or 12 mos
Drive Shafts & Boots				
Suspension Mounting Bolts				
Air Conditioning Refrigerant				
Air Conditioning Compressor				
Propeller Shaft (AWD)				
Exhaust Pipe & Muffler				
Air Cleaner Filter	Inspect	7,500 or 12 mos	Inspect	6,000 or 12 mos
	Replace	30,000 or 48 mos.	Replace	24,000 or 48 mos.
Vacuum Hose	Inspect	7,500 or 12 mos	Inspect	6,000 or 12 mos.
Climate Control Air Filter (For Evaporator and Blower Unit)	Replace	15,000 or 12 mos	Replace	12,000 or 12 mos.
Tire Rotation	Perform	7,500	Perform	6,000
Vapor Hose, Fuel Tank Cap, Fuel Tank				
Fuel Tank Air Filter	Inspect	15,000 or 24 mos.	Inspect	12,000 or 24 mos.
Fuel Filter				
Parking Brake				
Brake Fluid	Inspect	15,000 or 24 mos.	Inspect	12,000 or 24 mos.
Fuel Lines, Fuel Hoses & Connections	Inspect	30,000 or 48 mos.	Inspect	24,000 or 48 mos.
Rear Axle Oil (AWD)	Inspect	30,000 or 48 mos.	Inspect	24,000 or 48 mos.
Transfer Case Oil (AWD)				
Drive Belts	Inspect	First 60,000 or 72 mos. Subsequent, every 15,000 or 24 mos.	Inspect	First 60,000 or 72 mos. Subsequent, every 12,000 or 24 mos.
Spark Plugs	Replace	97,500	Inspect	42,000
Engine Coolant	Replace	First 120,000 or 120 mos. Subsequent, every 30,000 or 24 mos.	Replace	First 120,000 or 120 mos. Subsequent, every 30,000 or 24 mos.
Valve Clearance (Only 1.6 T-GDI)	Inspect	-	Inspect	75,000
Intercooler, in/out hose, air intake hose (Only 1.6 T-GDI)	Inspect	-	Inspect	6,000 or 12 mos.
EcoShift Dual Clutch Transmission Fluid (Only 1.6 T-GDI)		-	Inspect	6,000 or 12 mos.
Automatic Transmission Fluid (Only 2.0)		No check or services required for Normal Usage driving.		-

\*See Owner's Manual for details.

Looking for more detailed information? This Quick Reference Guide does not replace your vehicle's Owner's Manual, If you require additional information or are unsure of a specific issue, you should always refer to the vehicle's Owner's Manual or contact your authorized Hyundai dealer.

The information contained in this Quick Reference Guide was correct at the time of printing, however, specifications and equipment can change without notice. No warranty or guarantee is being extended in this Quick Reference Guide, and Hyundai reserves the right to change product specifications and equipment at any time without incurring obligations. Some vehicles are shown with optional equipment. Specifications apply to U.S. vehicles only. Please contact your Hyundai dealer for current vehicle specifications.

NP150-V2019  
 (Rev 04/25/18)  
 Printing 04/28/18

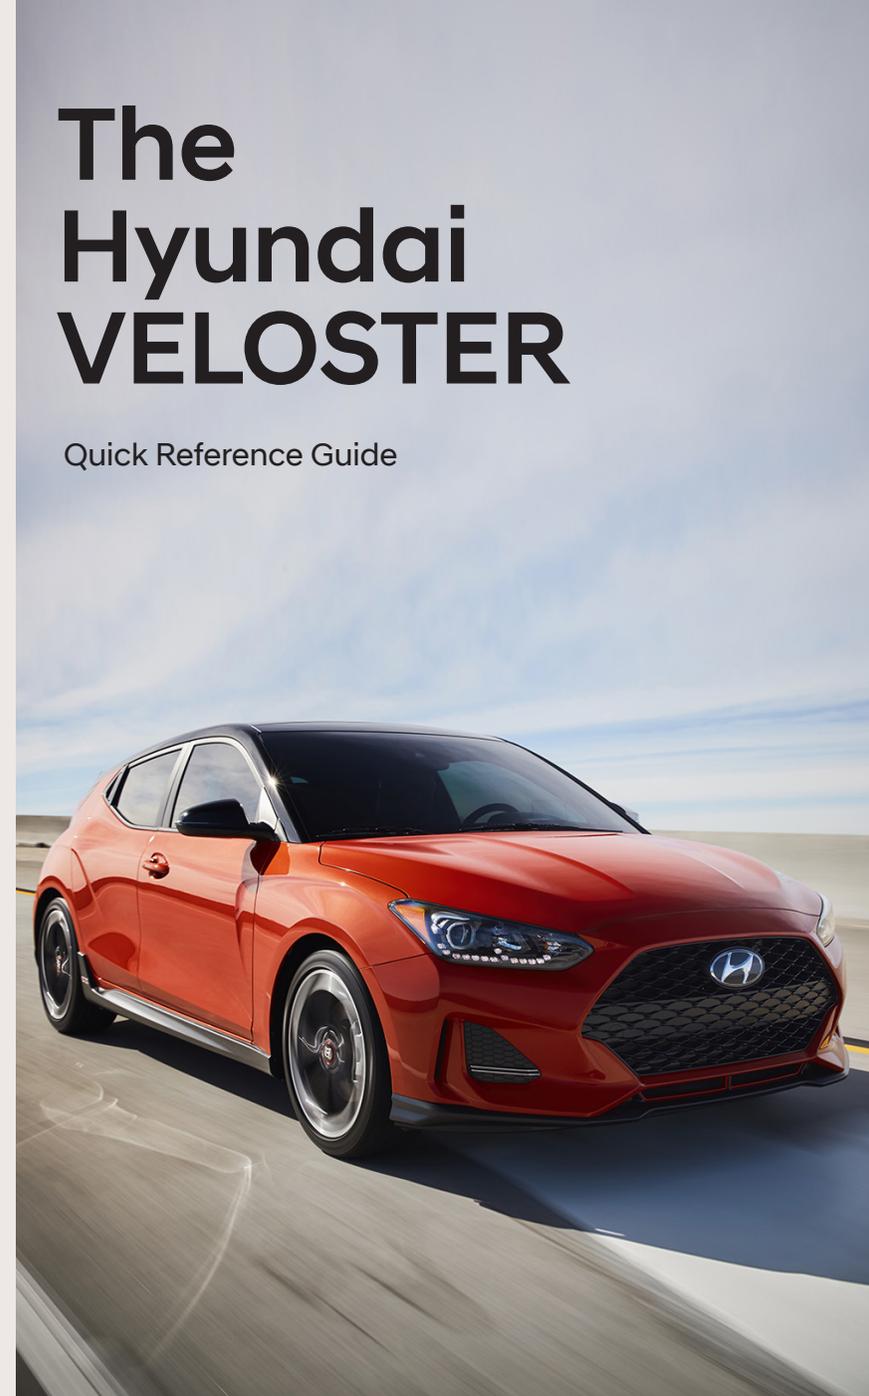

# The Hyundai VELOSTER

Quick Reference Guide

Roadside Assistance: 1-800-243-7766  
 Consumer Affairs: 1-800-633-5151  
 Sirius XM® Radio: 1-800-967-2346  
 Blue Link: 1-855-2BLUELINK (1-855-225-8354)



## HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect, use, and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at <https://www.hyundaiusa.com/owner-privacy-policy.aspx>. If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Motor America  
Hyundai Customer Connect Center  
P.O. Box 20850  
Fountain Valley, CA 92728-0850  
800-633-5151 [consumeraffairs@hmasusa.com](mailto:consumeraffairs@hmasusa.com)

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.



### WARNING!


To reduce the risk of serious injury to yourself and others, read and understand the important SAFETY INFORMATION in your Owner's Manual.

Steering wheel adjustments  
Page 06

Instrument cluster  
Pages 12

Wiper and washer  
Page 09

Audio mode/  
Navigation  
Pages 28

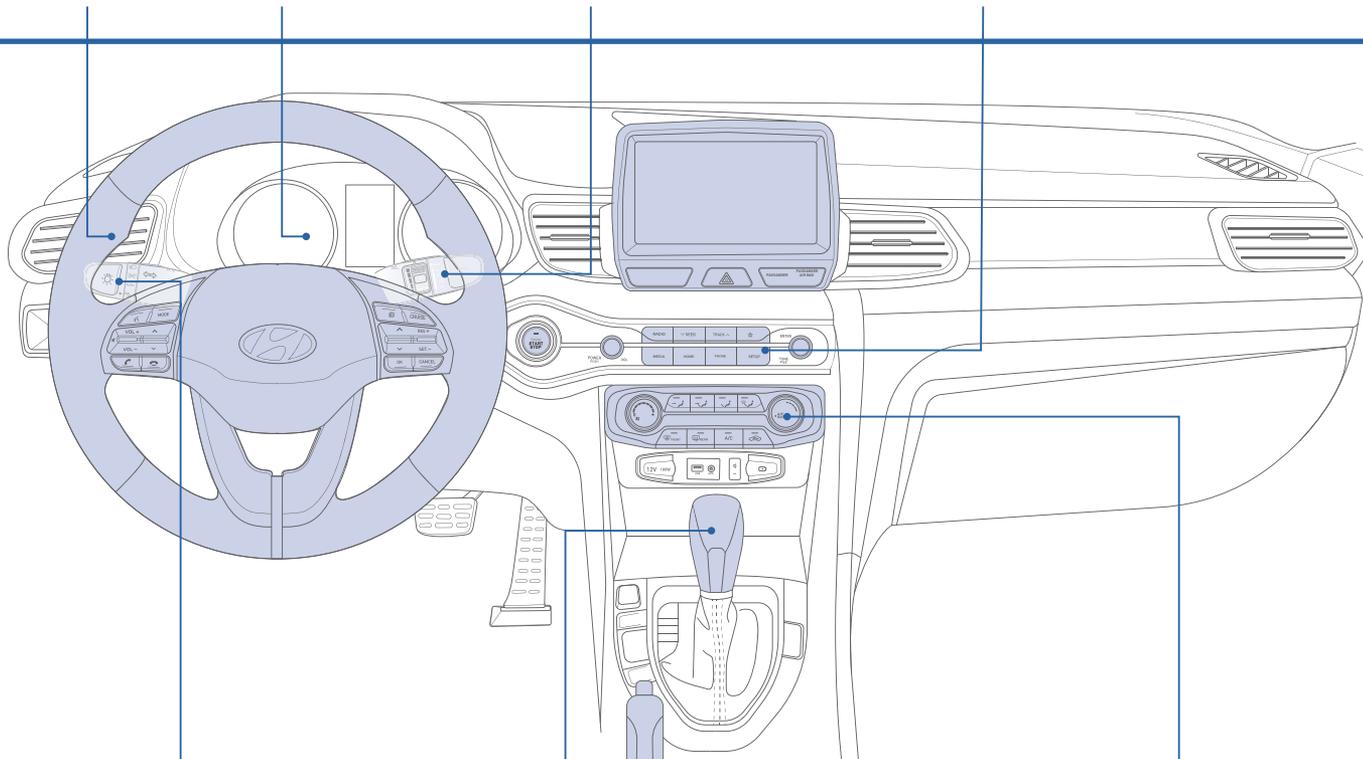

Headlights and fog lights  
Page 08

Transmission  
Pages 38

Climate control  
Pages 18

## FEATURES AND CONTROLS

Engine Start/Stop button	03
Central door lock switch	07
Child-protector rear door lock	11
Climate control	18
Driver's main controls	07
Fuel door	06
Headlights and fog lights	08
Head-up display	14
Instrument cluster	12
Instrument panel illumination	16
Interior lights	11
Liftgate operation	05
Remote keyless entry	02
Seat-Front seat adjustment	04
Seat-Headrest adjustment	04
Seat-Seat belt adjustment	05
Steering wheel adjustments	06
Sunroof	10
Trip computer	16
Warnings and indicators	17
Wiper and washer	09

## MULTIMEDIA

Android Auto	30
Apple CarPlay™	32
Audio mode	28
AUX, USB and iPod® Port	36
Blue Link® Telematics system	25
Bluetooth operational tips	22
Bluetooth phone pairing	24
Date/time adjustment	36
Navigation	29
Steering wheel audio control	22
Voice recognition tips	23
Wireless cellular phone charging system	37



## DRIVING

Cruise control/Smart cruise control	42
Electronic Stability Control (ESC)	45
Rearview camera	43
Transmissions	38
Tire Pressure Monitoring System (TPMS)	44


\*Some vehicles may not be equipped with all the listed features.

Use this Quick Reference Guide to learn about the features that will enhance your enjoyment of your Hyundai. More detailed information about these features are available in your Owner's Manual.

## REMOTE KEYLESS ENTRY

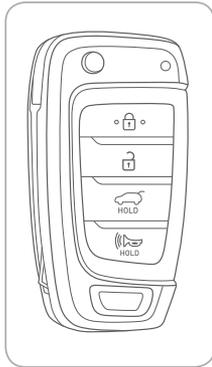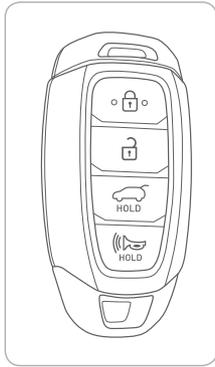


-  Lock
-  Unlock
-  Tailgate unlock (press and hold)
-  Panic

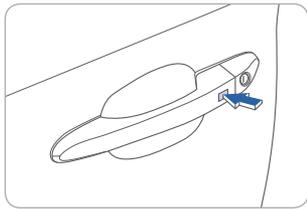

**Driver's door Lock/Unlock**  
Smart key must be within range.


- Press:**
- Once – Unlock driver door
  - Twice – Unlock all doors
  - Third – Lock all doors

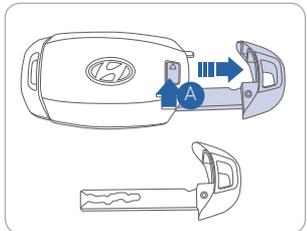

**Remove mechanical key**  
Press and hold the release **A** button and remove the key.

**Reinstall mechanical key**  
Put the key into the key slot and push it until a click sound is heard.

## ENGINE START / STOP BUTTON

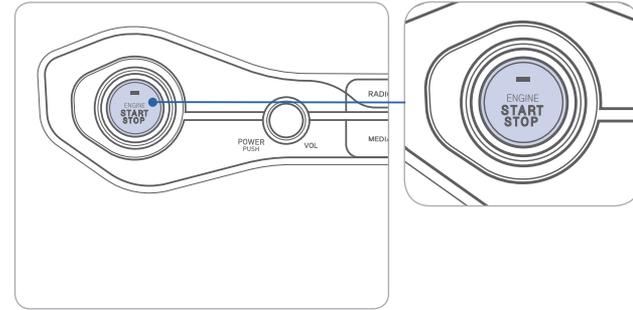

With the ignition OFF, press the engine start/stop button:

- Once for ACC (Accessory) mode.
- Twice for ON mode.
- Three times for OFF.

To start the engine, press the start/stop button while:

- EcoShift Dual Clutch Transmission: depressing the brake pedal.
- Manual Transmission: depressing the clutch and brake pedal.


To shut engine OFF, shift to:

- EcoShift Dual Clutch Transmission: P (Park) and press the start/stop button.
- Manual Transmission: Select Neutral, apply the hand brake, and press the start/stop button.

### Emergency situations

- **Shut off engine while driving:**  
Press engine start/stop button for more than 2 seconds or press it 3 times consecutively within 3 seconds.
- **Restart engine while driving:**  
Press engine start/stop button with shift lever in N (Neutral).


## FRONT SEAT ADJUSTMENT

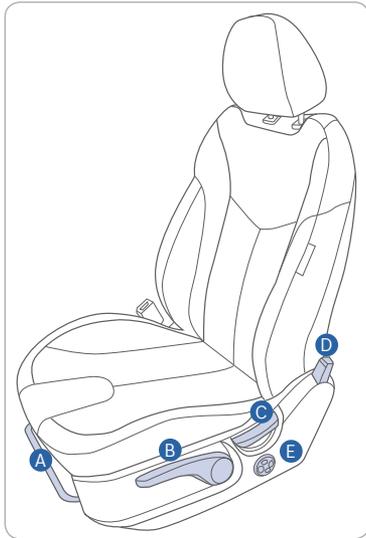

**A** Forward / backward



**B** Seat height (driver's seat only)

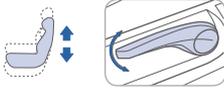


**C** Seatback angle




**D** Folding Lever (driver's seat only)



**E** Lumbar support (driver's seat only)

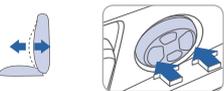


## HEADREST ADJUSTMENT

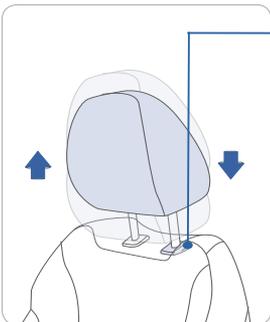

**To Raise Headrest:**  
Pull headrest up.

**To Lower Headrest:**  
Press lock knob while pressing down on headrest.



## SEAT BELT ADJUSTMENT (Driver's Front seat)

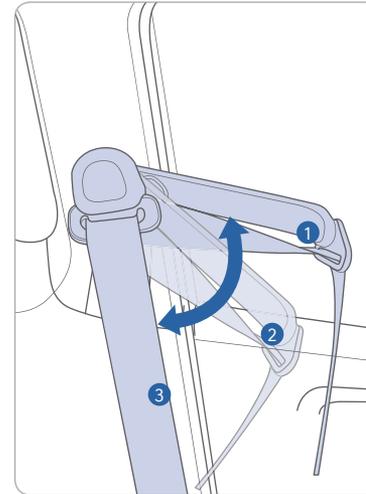

Set the belt extension guide to one of the 3 positions when using the seat belt.

See Owner's Manual for additional seat belt information.



## LIFTGATE OPERATION

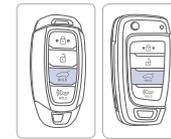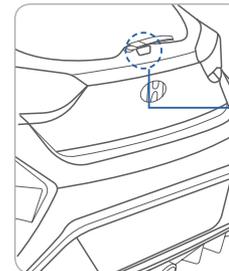


Press to open. Smart key must be within the range.

Press and hold to open.

## STEERING WHEEL ADJUSTMENTS

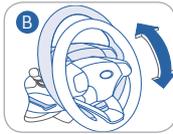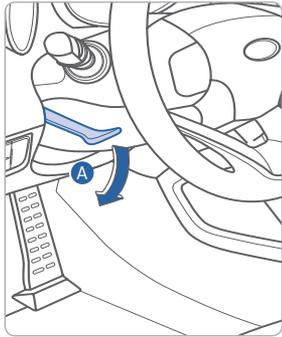

Tilt



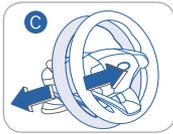


Telescopic

**NOTE:** Do not adjust while driving.

1. Pull the lever **A** down to release.
2. Set the angle **B** and distance **C**.
3. Pull the lever **A** up to lock.

## FUEL DOOR

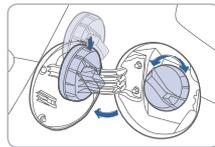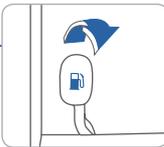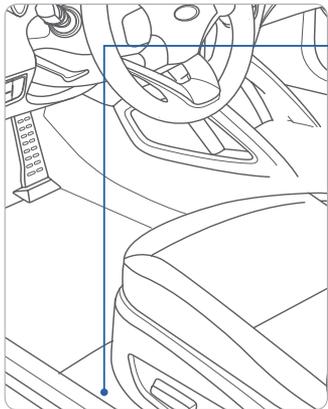


1. To open fuel door, pull lever upward
2. Rotate the fuel cap counter clockwise to open.

### NOTE

After adding fuel, always reinstall the fuel cap onto the filler neck by rotating it clockwise until it clicks once.

Failure to do this may result in the Check Engine Light (🚗) illuminating.

## DRIVER'S MAIN CONTROLS

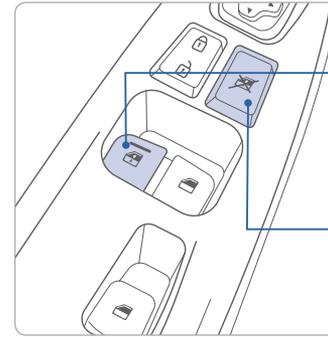


### Window Auto down/up (driver's side only)

Press to fully open/close window.

### Power Window Lock Switch

Disables the power window switches on the passenger doors.

Push down to disable passenger power window controls.

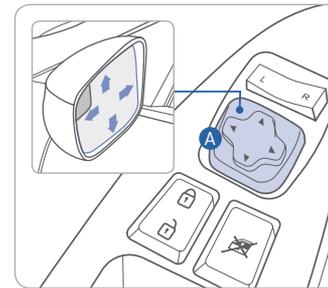

### Outside Rearview Mirrors


Move the switch **A** to the right or left to adjust the outside rearview mirrors.

Depress the appropriate direction (↔) on the switch.

### Middle position

Push the switch left or right to select mirror to adjust. To lock adjustment controls, position the switch to the middle position.


## CENTRAL DOOR LOCK SWITCH

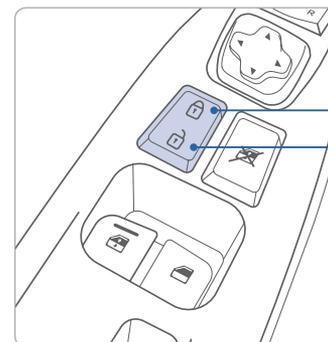

All doors will lock.

All doors will unlock.

## HEADLIGHTS AND FOG LIGHTS

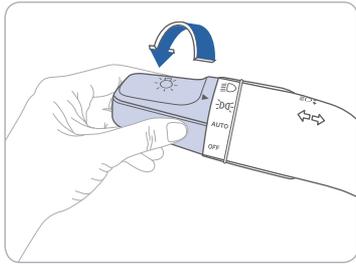


- ▶ | **AUTO** | Headlights will illuminate automatically as needed
- ▶ | | Turns headlights on
- ▶ | | Turns parking lights on
- ▶ | **OFF** | All lights off

### Escort Function


Headlights will stay on for approximately 30 seconds after exiting and locking vehicle. Press remote lock button twice to turn headlight off.

See Owner's Manual for more details.


Turn signals **A** and lane change signals **B**

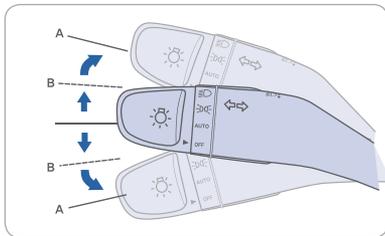


Flashing headlights

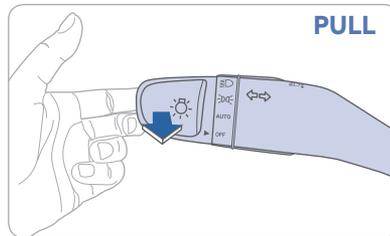

High beam

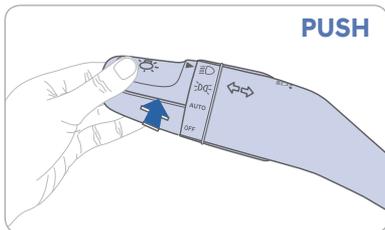

Fog light

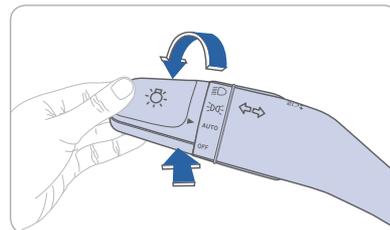


### Smart High Beam Function

1. Select auto position on stalk.
2. Push lever forward to engage Auto High beam.
3. Push lever forward again to disengage.

See Owner's Manual for more details.


## WIPER AND WASHER

### Front Wiper and Washer

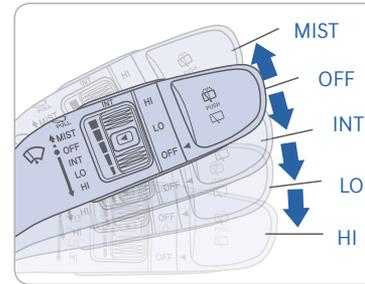


- MIST** - Single wipe
- OFF** - Off
- INT** - Intermittent wipe or **AUTO** - Auto control wipe
- LO** - Low wiper speed
- HI** - High wiper speed

### Front intermittent wiper time adjustment

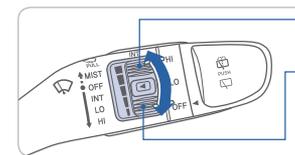

- More frequent wipes
- Less frequent wipes
- Wash with Brief Wipes
- Pull the lever toward you.


### Rear Wiper and Washer

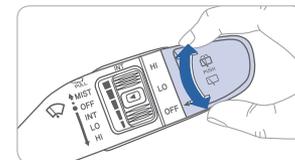

- HI** - High wiper operation
- LO** - Low wiper operation
- OFF** - Wiper off
- Push away for rear wash

## SUNROOF

### Sliding the sunroof

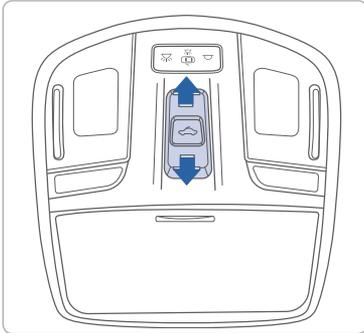


#### To Open


Press the sunroof control lever backward momentarily until desired position is reached. Press the sunroof control lever backward past the second detent and release lever to open completely.

#### To Close

Press the control lever forward and hold until sunroof is closed.

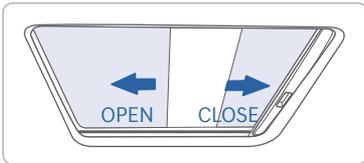


### Tilting the sunroof

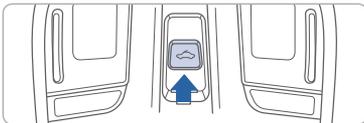

#### To Tilt


##### Open

Push the sunroof control switch upward to tilt the sunroof.

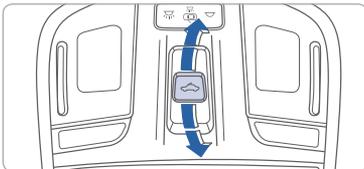


##### Close

Press the sunroof control switch forward and hold until sunroof is closed.

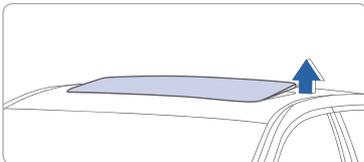

## INTERIOR LIGHTS

### Map lamp

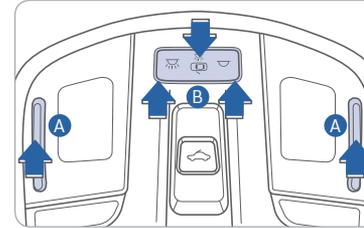

#### 1. Map light

Press the lens **A** to turn map lights ON or OFF.

#### 2. Door position

Map light and cabin light will turn on when any door is open except tailgate.


#### 3. Cabin Light ON position

Press the switch **B** to the left to turn on cabin light.

#### 4. Cabin light OFF position


Press the switch **B** to the right to leave cabin light off.

### Cabin lamp

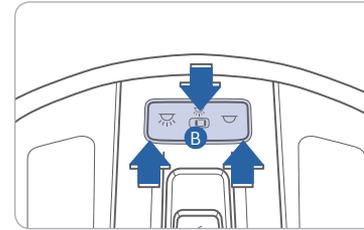

## CHILD-PROTECTOR REAR DOOR LOCK

Allows or prevents opening the rear door from inside of the vehicle.

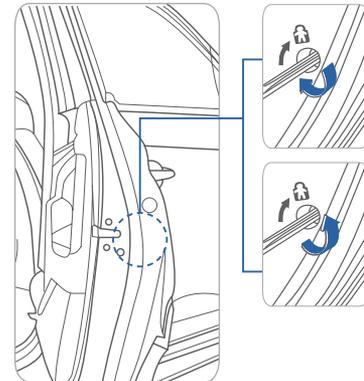

#### Lock (🔒)

Insert a key into the hole and turn it to the lock (🔒) position.

#### Unlock

Insert a key into the hole and turn it clockwise to the unlock position.

## INSTRUMENT CLUSTER

Type A



Type C




Type B




- ① Tachometer
- ② Engine Coolant Temperature Gauge
- ③ Turn signal indicators
- ④ Odometer/Trip computer
- ⑤ Warning and indicator lights
- ⑥ Fuel Gauge
- ⑦ Speedometer


## HEAD-UP DISPLAY

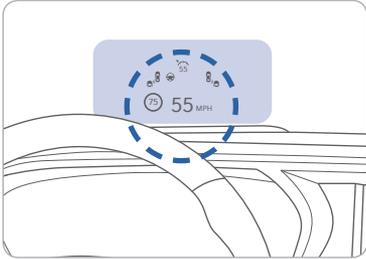

The Heads-Up display is a feature that allows the driver to view information projected onto a transparent screen while still maintaining direct view of the road ahead.

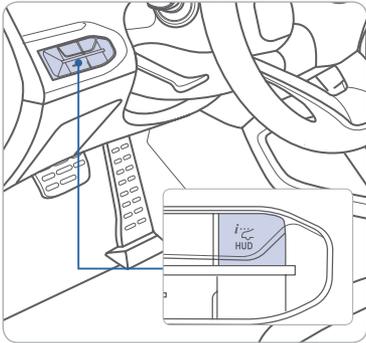


To activate the Heads-Up Display, press the HUD button on the dash panel located on the left-hand side of the driver.

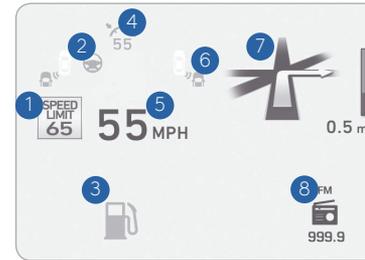

Head-Up Display information


1. Road information
2. Lane Keeping Assist (LKA) information
3. Warning lights
4. Cruise control system SET indicator
5. Driving speed information
6. Blind Spot Collision warning indicators
7. Turn-by-turn (TBT) navigation information
8. Multimedia information

## Sport Mode

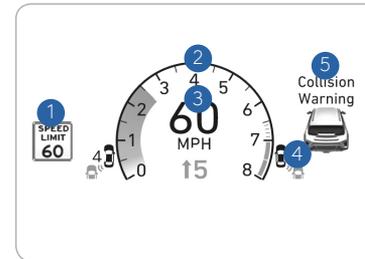


1. Road signs
2. Revolutions per minute (rpm)
3. Speedometer
4. Blind-spot Collision Warning (BCW) system information(if equipped)
5. Warning lights and Audio/Video information.


## INSTRUMENT PANEL ILLUMINATION

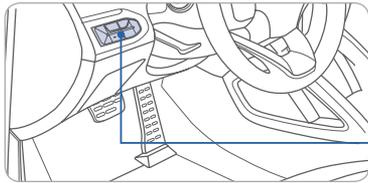


Push +/- on the control switch to adjust the brightness.

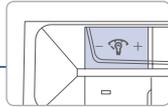

## TRIP COMPUTER

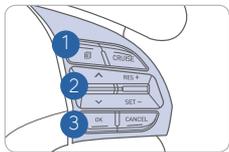

- 1 : MODE button for changing modes
- 2 : MOVE switch for changing items
- 3 : SELECT / RESET button for setting or resetting the selected item

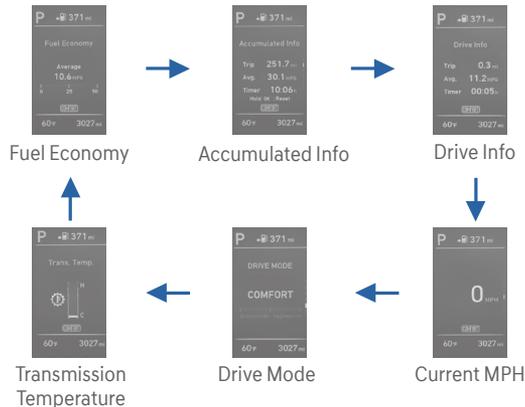


## WARNINGS AND INDICATORS

Air bag warning light	Parking brake & Brake fluid warning light	ABS warning light
Seat belt warning light	Low Tire Pressure Indicator / TPMS (Tire Pressure Monitoring System) malfunction indicator	
High beam indicator	Engine oil pressure warning light	Charging system warning light
Electric Power Steering system warning light	Door open warning light	Turn signal indicator
Immobilizer indicator	EcoShift Dual clutch transmission indicator	Manual transmission shift indicator
Tailgate open warning light	Low fuel level warning light	ESC (Electronic Stability Control) indicator
ESC (Electronic Stability Control) OFF indicator	Cruise indicator	Cruise SET indicator
Malfunction indicator light	Front fog light indicator	Active ECO indicator
Light on indicator	Engine coolant temperature warning light	KEY OUT indicator
Low beam indicator		

## CLIMATE CONTROL

### Manual

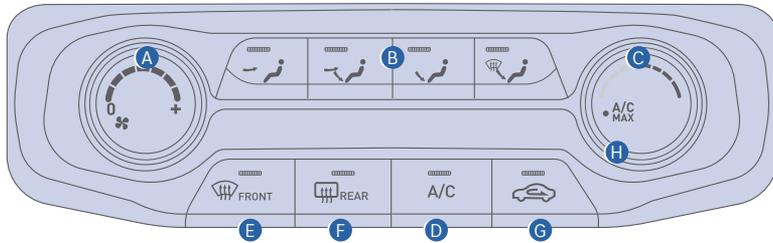


- A** Fan speed control knob
- B** Mode selection buttons
- C** Temperature control knob
- D** Air Conditioning button
- E** Front windshield defroster button
- F** Rear window defroster button
- G** Air intake control button
- H** MAX Air Conditioning button

### MODE SELECTION


- Face Level
- Face & Floor Level
- Floor Level
- Floor Defrost Level

### AIR INTAKE CONTROL

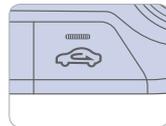


- Outside (fresh) air position
- Recirculated air position

### DEFROSTING / DEFOGGING

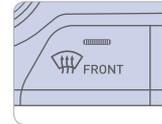

1. Press the front windshield defroster control.

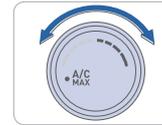

2. Set the temperature control to the warmest setting.



3. Set the fan speed to the medium setting.

### NOTE


To reduce the tendency of the glass fogging and improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

### REAR WINDOW DEFROSTER




Press to activate / deactivate the rear window defroster.

## Automatic

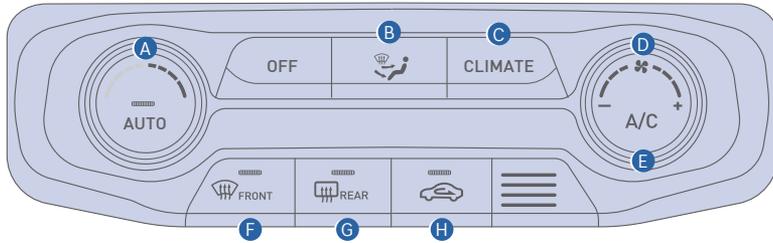


- A** Temperature control knob
- B** Mode selection button
- C** Climate display button
- D** Fan speed control buttons
- E** Air Conditioning button
- F** Front windshield defroster button
- G** Rear window defroster button
- H** Air intake control button

## AIR INTAKE CONTROL

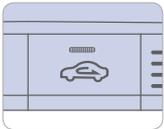

-  Outside (fresh) air position
-  Recirculated air position


## DEFROSTING / DEFOGGING

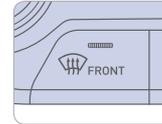

1. Press the front windshield defroster control.



2. Set the temperature control to the warmest setting.

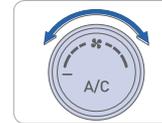


3. Set the fan speed to the medium setting.

### NOTE


To reduce the tendency of the glass fogging and improve visibility, keep the interior surface of the windshield clean by wiping it with a clean cloth and glass cleaner. In addition, select air intake control to the outside (fresh) air position whenever possible while operating the vehicle.

## REAR WINDOW DEFROSTER

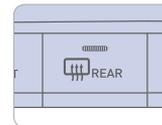

Press to activate / deactivate the rear window defroster.

## STEERING WHEEL AUDIO CONTROL

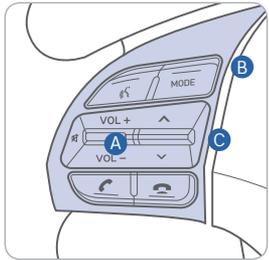


- A VOLUME**  
Push up (+) or down (-) to raise or lower the speaker volume, respectively.
- B MODE**  
Push down and hold button to turn audio power ON/OFF.
- C SEEK/PRESET**  
To select as preset, select the station and press down until you hear a beep.

## BLUETOOTH OPERATIONAL TIPS

In the following situations you or the other party may have difficulty hearing each other:

1. When the Bluetooth volume is at a high level. To reduce echo and distortion, try lowering the volume.
2. When driving on a rough road, high speeds and/or with the window open.
3. When the air conditioning vents are facing the microphone and/or when the air conditioning fan is at the max speed.

### Bluetooth control

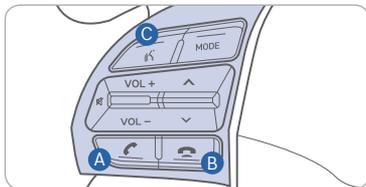

- A CALL**  
Place and transfer call.
- B END**  
End call or cancel function.
- C TALK**  
Activate voice recognition.

#### To Answer a Call:

- Press button on the steering wheel.

#### To Reject a Call:

- Press button on the steering wheel.

#### To Adjust Ring Volume:

- Use the VOLUME buttons on the steering wheel.

#### To Transfer a Call to the Phone (Private Mode):

- Press and hold button on the steering wheel until the audio system transfers a call to the phone.

#### To Finish a Call:

- Press button on the steering wheel.

#### Making a call using voice recognition:

The menu tree identifies available voice recognition Bluetooth® functions.

#### Calling by Name:

1. Press button.
2. Say the following command:
  - “Call <John Smith>”: Connects the call to John.
  - “Call <John Smith> on <Mobile/Home/Office>”: Connects the call to John’s Mobile, Home, or Office phone number.

#### Dialing by Number:

1. Press button.
2. Say “Dial Number”.
3. Say desired phone numbers.
4. Say “Dial” to complete the call.

For complete list of commands, refer to your Owner’s Manual.

## VOICE RECOGNITION TIPS

Your vehicle is equipped with Voice Recognition technology which allows drivers to operate their phones without having to take their eyes off the road to minimize distractions.

Voice recognition performance may be affected if driving with windows and sunroof open; when the heating-cooling system is on; when passing through a tunnel or when driving on rugged and uneven roads.

Quick reference on using voice commands

To start voice command. Press the key, the following commands are available:

Command	Function
Help	Provides guidance on commands that can be used within the current mode.
Calls <Name>	Calls <Name> saved in Contacts. Ex) Call “John”
Dial <Number>	Call can be made by dialing the spoken numbers. Ex) Call “123”
Phone	Provides guidance on Phone related commands. After saying this command, say “Call History”, “Contacts” to execute corresponding functions.
Call History	Displays the Call History screen.
Contacts (Call by Name)	Displays the Contacts screen. After saying this command, say the name of a contact saved in the Contacts to automatically connect the cell.
Dial Number	Display the Dial number screen. After saying this command, you can say the number what you want to call.

## BLUETOOTH PHONE PAIRING

Pairing tutorials, phone compatibility and Operational tips can be found through the Smart QR code using the QR reader application on your Smartphone.



### Phone setup (pairing phone)


**NOTE** Vehicle must be in park to complete pairing process.



1. Press PHONE button on the radio or  on the steering wheel.
2. Press the "Bluetooth" button on the screen.
3. Press "Add New" button on the screen.
4. Search for the device name as displayed on your mobile phone and connect.
5. If necessary, input the passkey displayed on the Audio screen.
6. Pairing is complete.

Please visit [www.hyundaiusa.com/Bluetooth](http://www.hyundaiusa.com/Bluetooth) for a list of compatible phones tested to work with Hyundai's Bluetooth® system.

## BLUE LINK TELEMATICS SYSTEM

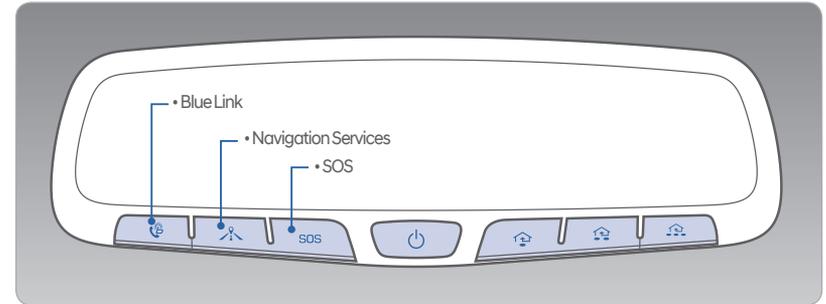

Blue Link subscription is required. To enroll, please visit your dealership or MyHyundai.com.

Press the  button for access to the voice-response menu of services.

- You can say:
  - Service Link
  - Roadside Assistance
  - Blue Link Account Services
  - Help
  - Cancel

Press the  button for Destination search by Voice.

- For vehicle equipped with factory-installed navigation systems.
- For non-navigation, this button functions with Android Auto or Apple CarPlay.

Press the **SOS** button for SOS Emergency Assistance.

Visit HyundaiBlueLink.com for more information or refer to your Blue Link User's Manual for detailed information on system operation.

For immediate assistance with subscription services, please call 1-855-2BLUELINK (1-855-225-8354).

Google™ is a registered trademark of Google, Inc.

## The MyHyundai with Blue Link App



You can download the MyHyundai with Blue Link app to your compatible smart phone from the following sites:

- iPhone® — Apple® App Store
- Android™ — Google Play™

Visit [HyundaiBlueLink.com](http://HyundaiBlueLink.com) FAQs to see a list of compatible devices.

### Remote Start

Remote Start enables you to remotely start your vehicle from virtually anywhere. For vehicles equipped with full-automatic temperature control, you can also enable climate control remotely and turn on the front window defroster, ensuring a warm or cool car is ready to go when you are.

**NOTE:** Temperature will be set to temperature set at last use.

- To use this feature, you must have a Blue Link Personal Identification Number (PIN). To create or change your PIN, log on to [www.MyHyundai.com](http://www.MyHyundai.com) or open the MyHyundai app.

### Remember:

- Remote Start will automatically shut off after 10 minutes or after selected engine timer runs out.
- While this feature is active, the parking lights will blink until vehicle is turned off or when vehicle is in operation.
- To continue operation of the vehicle, the proximity key must be inside the vehicle with the driver prior to pressing the brake and being able to move the gearshift from the P (Park) position.

**NOTE:** Remote Start is not available on all models. Remote Start is only available for Push Start equipped vehicle with an Automatic Transmission or Dual Clutch Transmission (DCT). Remote Start with Climate Control additionally requires Fully Automatic Temperature Control.

### Preconditions:

- Ignition is OFF
- Alarm is armed (i.e., vehicle locked by key fob Remote Door Lock)
- Gearshift level is in the P (Park) position
- Brake pedal is not depressed
- Engine hood is securely closed
- All the doors are closed and locked
- The tailgate or trunk lid is closed
- The security/panic system is not activated
- The proximity key is not inside the vehicle
- The battery power is not low
- Vehicle is located in an open area
- It has been less than 4 days since last vehicle ignition off
- Vehicle located in area with good cell reception

### Remote Start will terminate:

- After 10 minutes or after selected engine timer runs out
- Brake is pressed without proximity key inside vehicle
- Alarm is triggered without proximity key inside vehicle
- Door/trunk is opened from inside the vehicle

Notice: Laws in some communities may restrict the use of the features that remotely start the engine. For example, some laws may require a person using the remote start feature to have the vehicle in view when doing so or limit the length of time a vehicle engine may idle. Please check local and state regulations for any requirements and restrictions on remote starting of vehicles and engine idling time.


#### **WARNING!**

Do not remote start vehicle in an enclosed environment (i.e., closed garage). Prolonged operation of a motor vehicle in an enclosed environment can cause a harmful build-up of carbon monoxide. Carbon monoxide is harmful to your health. Exposure to high levels of carbon monoxide can cause headaches, dizziness or in extreme cases unconsciousness and/or death. Do not leave children or animals unattended in a vehicle while using the remote start function.

#### **CAUTION!**

If the vehicle's windshield wipers are left on when the vehicle was last driven, then the wipers will turn on if the remote start function is activated. To avoid damage to the wiper blades (i.e., due to heavy ice or snow accumulated on the windshield), please always turn the vehicle's windshield wipers off when parking the vehicle.

## AUDIO MODE

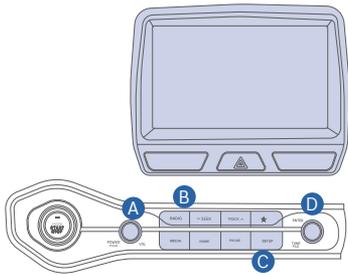

Press POWER button **A** to turn radio on.

### • TUNING/LISTENING TO CHANNELS

1. Press RADIO button **B**.
2. Rotate TUNE knob **D** to desired channel.

### NOTE

A clear view of the southern sky is recommended to ensure SXM® radio reception.

#### • SETTING PRESET BUTTONS (FM/AM/SXM)™

Six preset frequencies for each radio modes can be stored manually.

1. Select the radio mode you want to store a station into.
2. Select the desired station.
3. Touch and hold one of the preset buttons until audible beep is heard.




#### • ADJUSTING THE SOUND

1. Press SETUP button **C**.
2. Touch "Sound" on screen.
- Touch the arrows on screen to adjust desired sound setting.



\*SiriusXM® is only available on Display Audio Light and Navigation

## Playing Pandora

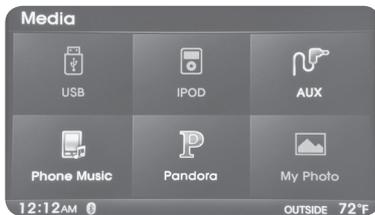

1. Ensure you have Pandora app on your smart phone.
2. Pair your smart phone to the Bluetooth system.
3. Select "Media" on Audio screen.
4. Select "Pandora".
5. Initiate Pandora app on your smartphone.


**NOTE** Not all smart phones are compatible

## NAVIGATION

### Basic features on the map screen



- 1 Move to the Home Screen
- 2 Change the map view mode
- 3 Voice Guidance On/Off
- 4 Zoom in the map
- 5 Set the zoom level automatically according to the guidance
- 6 Zoom out the map
- 7 Quick and easy selection of a destination and options
- 8 Touch to scroll the map
- 9 Quick and easy selection of a destination from the map screen
- 10 Set a waypoint to the current route
- 11 Save frequently used address to address book
- 12 Find a POI (Point Of Interest) around the current position
- 13 View the vehicle's current position on the map screen

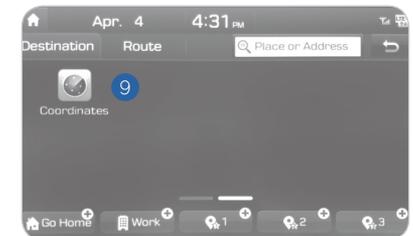

- 1 Set destination by address search.
- 2 Select from previously inputted addresses and POI's.
- 3 Online search.
- 4 Select the desired item in the sub-categories.
- 5 Search and select the desired destination among the search items.
- 6 Search and select the desired destination among the search items.
- 7 Search and select the desired destination among the search items.
- 8 Search the destination with the address book.
- 9 Type coordinates to search.

## ANDROID AUTO™

### REQUIREMENTS:

- Micro USB cable
- OS Android™ 5.0 or higher
- Compatible Android Phone
- Data and wireless plan for applicable features

### BEFORE YOU BEGIN:

- Android Auto features may operate differently than on your phone.
- Message and data charges may apply when using Android Auto.
- Android Auto relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them or
  - Disconnect and then reconnect your phone
- Using the micro USB cable that was provided with your phone is recommended.
- When Android Auto is active, your in-vehicle voice recognition system is disabled and you will be using talk to Google™ to make your requests.

### ANDROID AUTO SUPPORT



<https://support.google.com/androidauto/>

### PHONE SETUP

Turn on Bluetooth® on your phone and connect the micro USB cable to your phone and the USB port on the vehicle.


Phone will prompt you to download the Android Auto app and update other needed apps (i.e. Google Maps™, Google Play Music™, Google Now™).

**NOTE:** Vehicle must be parked.

- Location mode setting should be set to High accuracy.
- Car and phone setup should be completed in one sitting. If phone setup needs to be resumed, recommend to Force Stop the Android Auto app on the Phone then reopen the app and accept the Disclaimer notifications.

### CAR SETUP

1. Press the SETUP button.
2. Touch the “Connectivity” icon on screen.
3. Select “On” for Android Auto.
4. Connect your Android phone to the vehicle USB port. Agree to the notification and disclaimers on your phone then the “Android Auto” icon will appear confirming the setup.

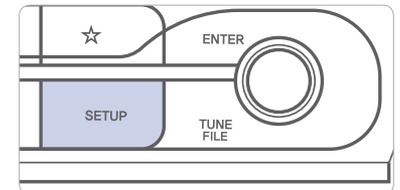

For more detailed information on how to operate Android Auto, please refer to your navigation manual.

For additional Android Auto support, please refer to the Android Auto Support Website

<https://support.google.com/androidauto/>

Android Auto, Google Play, Android, and other marks are trademarks of Google Inc.

## APPLE CARPLAY™

### REQUIREMENTS

- Apple Lightning® cable
- Latest iOS
- iPhone® 5 or above
- Data and wireless plan for applicable features


### BEFORE YOU BEGIN

- Apple® CarPlay features may operate differently than on your phone.
- Message and data charges may apply when using Apple CarPlay.
- Apple CarPlay relies on the performance of your phone. If you experience performance issues:
  - Close all apps and then restart them or
  - Disconnect and then reconnect your phone
- Using the Apple Lightning cable that was provided with your phone is recommended.
- When Apple CarPlay is active, your voice recognition system is disabled and you will be using Siri® to make your requests.

### PHONE SETUP



On your phone, go to Settings > General > Restrictions > CarPlay to allow CarPlay access.

On your phone, go to Settings > General > Siri and ensure Siri is turned ON.

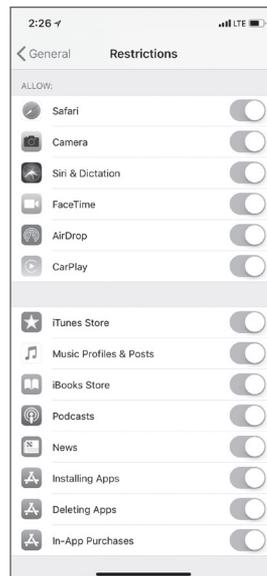

### CAR SETUP

1. Press the SETUP button.
2. Touch the “Connectivity” icon on the screen.
3. Touch “iOS” on the Connectivity Settings screen then touch “On” to enable Apple CarPlay.
4. Connect your Apple iPhone to the vehicle USB port then touch ‘OK’ when the pop-up message appears. The Apple CarPlay icon will now appear on the vehicle Home screen confirming the setup.

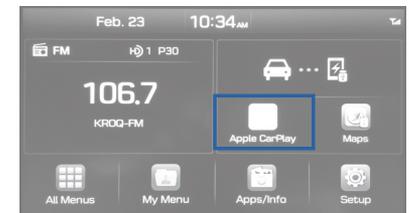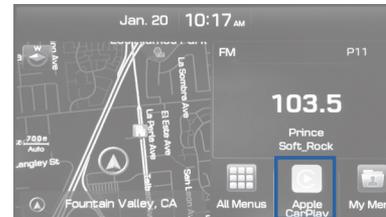

Apple CarPlay, Apple, and other marks are trademarks of Apple Inc.

## CarPlay Home Screen



- |                         |                                  |
|-------------------------|----------------------------------|
| 1 HOME ICON             | 7 APPLE MAPS                     |
| 2 WIRELESS CONNECTIVITY | 8 MESSAGES                       |
| 3 CELLULAR SIGNAL       | 9 3RD PARTY APPS                 |
| 4 PHONE TIME            | 10 SCREEN PAGE INDICATOR         |
| 5 PHONE                 | 11 EXIT TO HYUNDAI               |
| 6 APPLE MUSIC™          | 12 CURRENT CARPLAY AUDIO PLAYING |

## SIRI

Apple CarPlay uses Siri to perform many actions like sending messages, placing calls, and looking up/setting POI/Destinations. A Siri session can be initiated on any screen by:

1. Touch and holding the HOME icon 1 on the CarPlay screen or
2. Press the steering wheel VOICE RECOGNITION 13 button.

Note: Ensure Siri feature is set to ON in your phone (Go to Settings > General > Siri).

3. Say any of the following commands;
  - “Text <John Smith> ‘Call you later’” to send a text message.
  - “Read text messages” to read available text message.
  - “Call <John Smith>” to make a phone call.
  - “Find <POI/Destination>” to locate a POI/Destination.

## PHONE

Touch the PHONE 5 icon to access the Phone screen. Siri will automatically asks ‘Who you would like to call’ when the PHONE 5 icon is selected.

NOTE: Phone call sound quality is dependent on the wired connection. Using the Lightning cable that came with the phone is recommended.

## APPLE MUSIC

Touch the APPLE MUSIC 6 icon to access the Apple Music screen.

## APPLE MAPS

Touch the APPLE MAPS 7 icon to access the Apple Map screen.

## MESSAGES

Touch the MESSAGES 8 icon to access the Message screen. Siri will automatically asks ‘To hear unread messages or create a new one’ when the MESSAGE icon is selected.


## 3rd PARTY APPS

Supported CarPlay apps that are downloaded on your phone will appear on the CarPlay screen. Touch the apps icons to access those supported apps.

NOTE: A list of the supported CarPlay supported apps can be found at <http://www.apple.com/ios/carplay/>

Ensure phone has latest version of the 3rd Party Apps.

## AUX, USB AND iPod® PORT

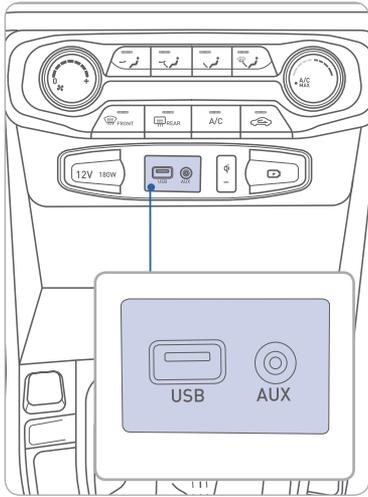

iPod® is a trademark of Apple Inc.


Use these jacks to connect an external USB, audio or video device.

To view compatible video, connect the device to the supplied Hyundai RCA adapter video cable. Then connect the RCA adapter cable to the AUX jack.


### NOTE

To operate your iPod® through the vehicle's audio system, connect your Apple supplied USB cable to the USB port.


## DATE/TIME ADJUSTMENT

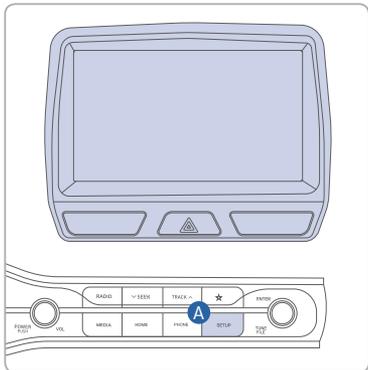

1. Press the setup button **A**.
2. Swipe right to the second page and press the Date/Time icon.
3. Set time and date.
4. Press the back button to save setting.

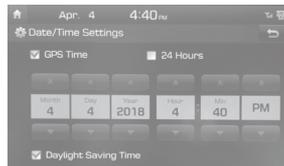

## WIRELESS CELLULAR PHONE CHARGING SYSTEM

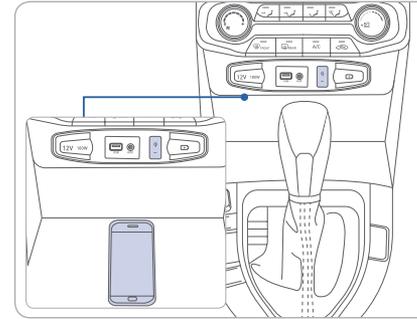

There is a wireless cellular phone charging system inside the front console. The system operates with all doors closed, and the ignition switch is in the ACC/ON position.



### NOTE

The wireless cellular phone charging system supports only the Qi-enabled cellular phones (Qi).

### NOTE


Do not place any metallic items such as coins, keys on the charger. Avoid putting credit cards, etc. on the charger as they might get damaged by the magnetic field.

## TRANSMISSIONS

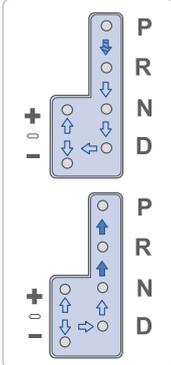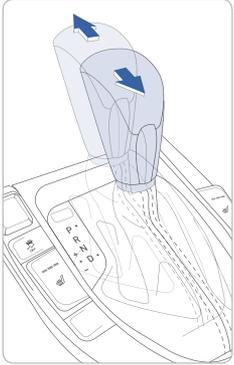

- (➡) : Depress the brake pedal when shifting.
- (⇐) : The shift lever can be shifted freely.
- P** : Park
- R** : Reverse
- N** : Neutral
- D** : Drive
- DS** : Sport Mode
- [+]** : Sport Mode Upshift
- [-]** : Sport Mode Downshift

### Sport Mode

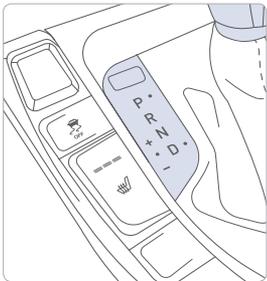


Move the shift lever from D to DS to activate Sport Mode.

Sport mode is a recalibrated automatic mode that will hold gears longer and downshift at higher RPM for a more dynamic driving style.

If you use the paddle shifters (or [+] or [-]) to enter the Sport Mode, you will stay in Sport Mode until the shift lever is returned to Drive, giving you full manual control.

### Paddle shifters

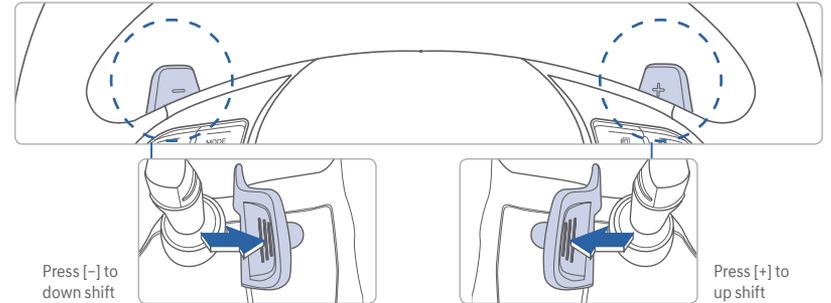

The paddle shifters operate when the shift lever is in the D position or the Sport Mode.

- When you pull the [+] or [-] paddle shifter once, the system changes from automatic mode to Sport Mode.
- When paddle shifters are no longer used the system changes back to automatic mode.

#### NOTE

If you pull the [+] and [-] paddle shifters at the same time, the transmission will not change gears.

### Dual Clutch Transmission

The purpose for the dual clutch transmission in your vehicle is to allow for better acceleration performance and increased fuel efficiency. This type of transmission can be thought of as an automatically-shifting manual transmission. It differs from a conventional automatic in how the engine is connected to the transmission. There's no torque converter. This creates more of a direct-drive feel, with the transition from one gear to the next managed by clutch slip, especially at lower speeds. As a result, shifts are sometimes more noticeable, and a light vibration can be felt as the transmission speed is matched with the engine speed. This is a normal condition of the dual clutch transmission.

## DCT – Helpful Tips While Driving

Follow the helpful guidelines below to enhance your driving experience with your vehicle.


- When holding your vehicle on a hill or driving slowly up a hill, apply the brakes rather than trying to hold the vehicle by keeping your foot on the accelerator pedal.
- Try to avoid spending too much time inching or creeping forward, especially when moving slowly up an incline. This generates heat in the transmission quickly.
- When traffic is slowly creeping forward, let a gap form in front of you, then start to move forward. This will allow the clutch to engage and minimize the amount of slip.

### ANTICIPATING HOW YOUR VEHICLE RESPONDS

The dual clutch transmission is designed to anticipate and select the next available gear when accelerating or decelerating. In most instances, this allows for quicker shifts and improved fuel economy because energy loss is minimized between the engine and the transmission. If, however, you attempt to accelerate rapidly when your vehicle is slowing down, (for example, when approaching a red light and then the light turns green), you may experience a delay because it takes longer for the transmission to re-select and shift into the proper gear.

### What is the Transmission High Temperature Warning Message?

- Under certain driving conditions such as stop-and-go driving or driving slowly up a hill, the clutches tend to have more slip. This condition tends to heat the transmission.
- If the transmission temperature gets too high, a chime will sound and a warning message will appear in the instrument cluster LCD display.

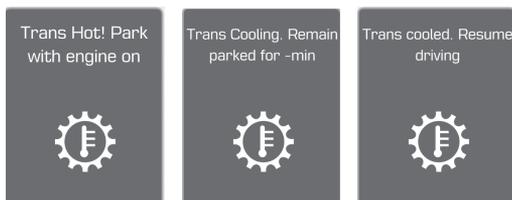


- If this occurs, stop the vehicle as soon as safely possible and allow the transmission to cool with the engine running. After the transmission cools, the vehicle may be driven normally.

### What if I'm Driving in Stop-and-Go Traffic?

- Whenever possible, come to a complete stop with your vehicle and allow a gap to form in front of you. Then accelerate and move forward.

Refer to your Owner's Manual for additional info on the DCT.


### Manual Transmission

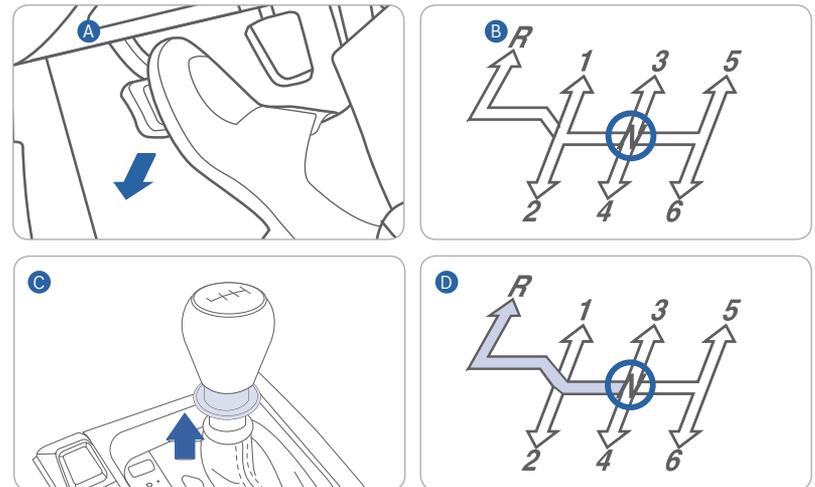

### Shifting into Reverse

1. Fully depress the clutch **A**
2. Shift into Neutral **B**
3. Pull the Shift Lever Knob **C**
4. Shift into Reverse **D**

## CRUISE CONTROL/SMART CRUISE CONTROL

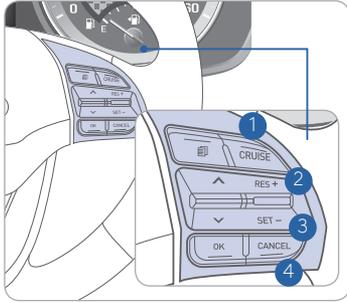

The Cruise Control system allows you to program the vehicle to maintain a constant speed without pressing the accelerator pedal.

- 1 Push CRUISE button to turn cruise control ON/OFF.
- 2 Push the toggle switch UP to resume or increase cruise control speed.
- 3 Push the toggle switch DOWN to set or decrease the cruise control speed.
- 4 Push CANCEL to cancel cruise control.

### Setting Vehicle Distance (Smart Cruise Control only)



The system assists you in setting the distance from the vehicle ahead and will maintain the selected distance without having to press on the accelerator or the brake pedal.

The vehicle-to-vehicle distance (1) will automatically activate when you set the cruise speed (2). Each time the button is pressed, the vehicle-to-vehicle distance changes as follows:



### Setting Cruise Control

1. Press the “CRUISE” button (1) to turn on Cruise Control. The icon will illuminate in the instrument cluster.
2. Toggle “-SET” switch (3) DOWN to set cruising speed.

### Adjusting the vehicle speed


1. Toggle “+RES” switch (2) UP to increase cruising speed.
2. Toggle “-SET” switch (3) DOWN to decrease cruising speed.

**Note** Quick toggle up/down will change speed by 1 mph. Holding switch up/down will change speed by 10 mph.


### To Cancel Cruise Control

Press the “CANCEL” button (4) or depress the brake pedal.

## REARVIEW CAMERA

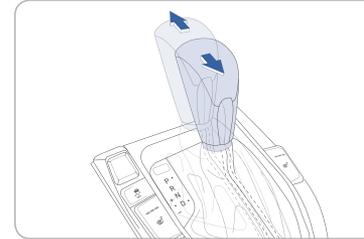

The rearview camera will activate when the ignition switch is ON and the shift lever is in the R (Reverse) position.

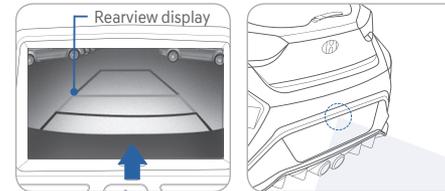

When the gear shift lever is shifted into reverse (R), the rearview camera displays the area behind the vehicle.

### NOTE

The image displayed on the screen may become difficult to see under the following conditions:

- In the dark or at night.
  - When it is raining, or when water droplets are on the camera.
  - When the sun or the beam of headlights are shining into the camera lens.
- Use care to keep the camera lens clean and avoid applying any type of solvents, car wax, or window cleaners to the camera lens. If the lens becomes dirty, wipe the lens with a clean, soft cloth.

## TIRE PRESSURE MONITORING SYSTEM (TPMS)



Low Tire Pressure Indicator / TPMS Malfunction Indicator



Low Tire Pressure Position Indicator and Tire Pressure Indicator (Shown on the LCD display)

### LOW TIRE PRESSURE INDICATOR

Illuminates if one or more of your tire is significantly under-inflated.

### TPMS MALFUNCTION INDICATOR


Blinks for approximately one minute, then remains illuminated when there is a malfunction with the TPMS. Inspect all tires and adjust the tire pressure to specification. If the lamp remains illuminated, have the system checked by an authorized Hyundai dealer as soon as possible.

### LOW TIRE PRESSURE POSITION INDICATOR AND TIRE PRESSURE INDICATOR (LCD DISPLAY)

Tire pressures will display after driving a short distance. If a tire pressure drops lower than predetermined specification, the Low Tire Pressure Indicator (🚫) will illuminate and the LCD 📺 display will indicate tire(s) requiring air.

The Tire Specification and Pressure Label located on the driver's side center pillar gives the tire pressures recommended for your car.

## ELECTRONIC STABILITY CONTROL (ESC)

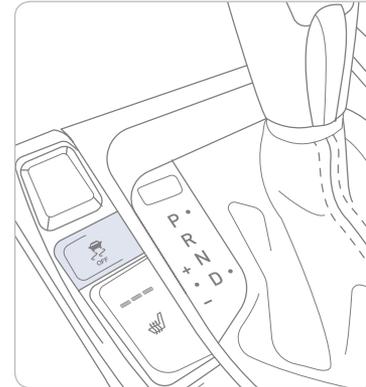

The ESC system is an electronic system designed to help the driver maintain vehicle control under adverse conditions.

Press  to turn ESC on or off.

### Key Websites

Hyundai website - [www.hyundai.com](http://www.hyundai.com)

Hyundai owner website - [www.myhyundai.com](http://www.myhyundai.com)

Bluetooth phone compatibility - [www.hyundaiusa.com/bluetooth](http://www.hyundaiusa.com/bluetooth)

Blue Link - [www.hyundaiusa.com/technology/bluelink](http://www.hyundaiusa.com/technology/bluelink)

