



OPTIMA

FEATURES & FUNCTIONS GUIDE

www.kia.com

Consumer - Roadside Assistance
1-800-333-4KIA (4542)

See Back Cover for Vehicle Maintenance Schedule

Always check the Owner's Manual for complete operating information and safety warnings.

GETTING TO KNOW YOUR **OPTIMA**

Congratulations on Your New Kia Purchase!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable, safe and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

Using This Guide

The information contained in this guide is a brief overview which will help you become familiar with the operation and features of your new Kia vehicle. The flipbook format facilitates information access, while the detailed illustrations ensure the instructions are easy to follow.

This **Features & Functions Guide** and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of your family, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read your Owner's Manual in order to fully familiarize yourself with the important information it contains.

While the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance or after the fact, and assumes no liability in connection with such changes.

ESSENTIAL FEATURES

Air Conditioning / Climate Control	26
Active ECO System*	07
Audio System – Standard*	21
Audio System – UVO System*	24
Audio System – Navigation System*.	23
Aux/USB/iPod** Port* & Power Outlets*	25
Bluetooth * Wireless Technology*	18
Cruise Control*	20
Digital Clock	25
PASSENGER AIR BAG OFF Indicator	39
Tire Mobility Kit	38
Tire Pressure Monitoring System (TPMS)	05
Windshield Wipers & Washers	15

Driving while drowsy or distracted is dangerous and should be avoided. Drivers should remain attentive to driving and exercise caution when using vehicle systems while driving.



VIDEOS & QR CODES	02
--	----

INSTRUMENT CLUSTER

Instrument Cluster Overview	03
Indicators & Warning Lights.	04
Tire Pressure Monitoring System (TPMS)	05
Trip Computer / Tripmeter*	06
Instant Fuel Consumption Mode*.	06
Fuel Efficiency.	06
Drive Mode Integrated Control System*	07
Active ECO System*	07
Service Mode.	08
User Settings.	08

DRIVER'S PANEL

Blind Spot Detection System*	09
Electric Parking Brake (EPB)*	10
AUTO HOLD*	11
Instrument Panel Dimmer*	11
Electronic Stability Control (ESC)*	11
Hill-Start Assist Control (HAC)	11
Hood Release Lever and Latch	12
Fuel Door and Trunk Release.	12
Engine Start/Stop Button*	12
Power Windows, Window Lock & Central Door Lock*	13
Automatic Door Lock/Unlock.	13
Power/Heated Outside Mirrors*.	13
Power Folding Mirrors*	13

STEERING WHEEL CONTROLS

Headlights & High Beams	14
Turn Signals & Fog Lights*	14
Windshield Wipers & Washers	15
LCD Display Control and Modes*	16
Heated Steering Wheel Button*	17
Tilt/Telescopic Steering Wheel*	17
Bluetooth * Wireless Technology*	18
Audio Controls*	20
Cruise Control*	20

AUDIO SYSTEM

Standard Audio System* Overview.	21
Standard Audio System* Operation	22
Navigation System*	23

UVO System*	24
-----------------------	----

CENTER PANEL

Aux/USB/iPod* Port*	25
Power Outlets*	25
Digital Clock	25
Automatic Climate Control*	26
Manual Climate Control*	27
Automatic Gear Shift with Sportmatic Shifting**	28
Paddle Shifters*	28

SEATING

Driver Position Memory System*	29
Power Adjustable Driver's Seat*	29
Seat Warmers/Ventilated Seats*	30
6-Way Manual Adjustable Driver's Seat.	30
Front Seat Headrest Adjustment	31

OTHER KEY FEATURES

Smart Key*	32
Remote Keyless Entry / Folding Key*.	33
Double-Turn Lock/Unlock All*	33
Fuel Cap / Malfunction Indicator (Check Engine Light)	33
HomeLink* with Auto-Dimming Rearview Mirror*	34
Map/Room Lamps.	35
Sunvisor.	35
Panoramic Sunroof Operation*.	36
Rear-Camera Display*	36
Back-Up Warning System (Rear Parking Assist System)*.	37
Trunk Release Button.	37
Tire Mobility Kit*	38

SAFETY

Occupant Detection System (ODS) / PASSENGER AIR BAG OFF Indicator.	39
Child Safety Locks.	39
Safety Belts	40
Safety Belt Retractor Inertial Locks	40

LEGAL DISCLAIMERS (See Back Inside Cover Page)

MAINTENANCE (See Back Cover)

*IF EQUIPPED

Kia provides a number of video resources at your disposal to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR codes with your smart phone/tablet (mobile devices) or by visiting the following website: www.KuTechVideos.com/qf13/2014. Continue reading for a more in-depth look at QR codes and for instructions on how to use them.

What are QR Codes?

A QR Code is a square, 2-dimensional Bar Code that can be read by mobile devices loaded with an appropriate Bar Code or QR Code Reader App. The App reads the Bar Code image and then launches/uploads the specific information the code contains, such as URLs, text, photos, videos, and so much more.

How to Use QR Codes

If you have a mobile device with a QR Code Reader App, you can snap the code with your phone and you'll be provided a video with additional information pertaining to the topic. For example, in the Kia One Click Fuel Cap section, if you would like additional information, just snap the code with your mobile device to view the selected Kia Features & Functions Video.

© QUICK TIPS

1. If you're having trouble scanning codes, check the following:
 - The code should be centered and focused in your mobile device's camera screen
 - Consider moving your device closer to or farther away from the code
 - The code should be well lit, without significant shadow
 - Avoid scanning from a significant angle
 - Confirm that the device's app supports 2D QR Code Scanning.
Try another QR Code App; not all apps are created equal
2. After scanning, a "connecting" message appears and then nothing happens or there's a "connection error" message. These messages typically indicate that your device is having trouble connecting to the Internet

REMINDER: When accessing videos on your mobile device, standard cellular data rates may apply.

QR CODE

Kia One Click Fuel Cap Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.




www.KuTechVideos.com/qf13/2014

How to snap a QR code

1. With your mobile device, download a QR Code Reader App. With many devices, you can do this through an App Store or Marketplace
2. Open the QR Code Reader App on your mobile device
3. The App will utilize your device's camera. Center the code in the camera viewing area:
 - With some Apps, as soon as the App recognizes the code, it will launch the corresponding video
 - With other Apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video
 - For operation specifics, refer to the instructions that come with the QR Code Reader App

Instrument Cluster Overview

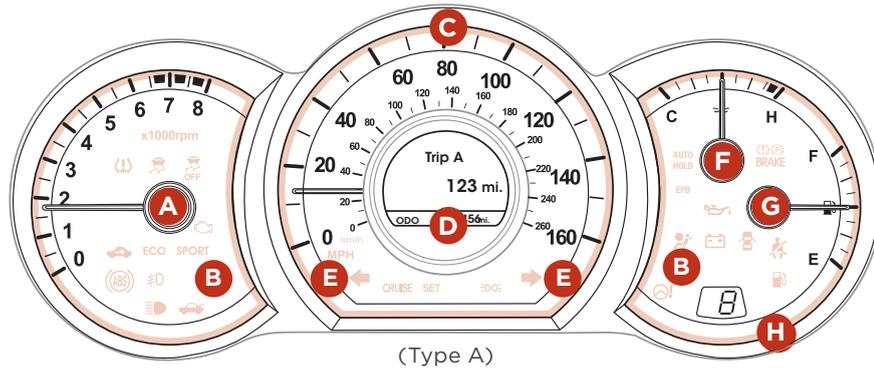

- A** Tachometer
- B** Indicator & Warning Lights
- C** Speedometer
- D** LCD Display
- E** Turn Signal Indicators
- F** Engine Temperature Gauge*
- G** Fuel Gauge
- H** Gear Shift Position Indicator*

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

🕒 QUICK TIPS

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

📱 QR CODE

Optima Analog Cluster Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.




www.KuTechVideos.com/qf13/2014

Indicators & Warning Lights

REMINDER: Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations. See your Owner's Manual for more details.

QUICK TIPS

For more information on the function of all indicator and warning lights, please refer to the Owner's Manual.

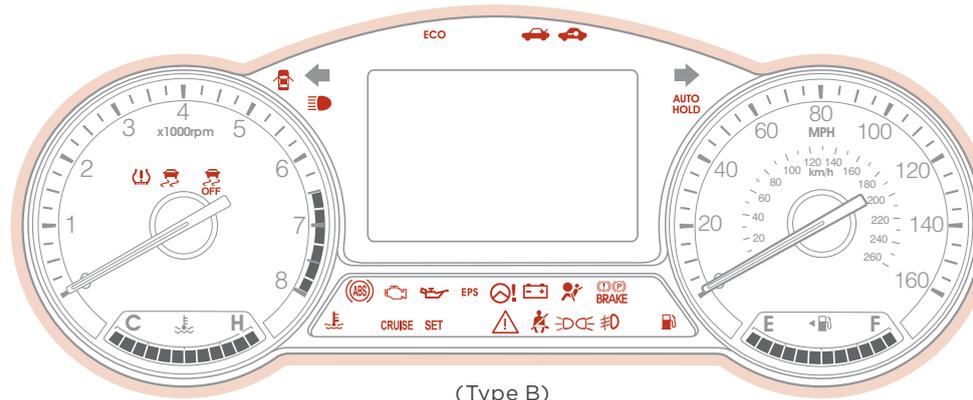

QR CODE

Optima Supervision Cluster Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

- | | | | | | |
|--|---|--|--|--|---|
| | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator* | | AUTO HOLD Indicator* | | Master Warning Light |
| | Electronic Stability Control (ESC) Indicator* | | Engine Coolant Temperature Warning Light | | Charging System Warning Light |
| | Electronic Stability Control (ESC) OFF Indicator* | | Anti-lock Braking System (ABS) Warning Light | | Seatbelt Warning Light |
| | Door Ajar Warning Light | | Cruise ON/OFF Indicator | | Air Bag Warning Light |
| | High Beam Indicator | | Cruise SET Indicator | | Tail Light Indicator |
| | Active ECO System Indicator* | | Malfunction Indicator | | Front Fog Light Indicator |
| | Trunk Open Warning Light | | Engine Oil Pressure Warning Light | | Parking Brake & Brake Fluid Warning Light |
| | Immobilizer Indicator* | | Electric Parking Brake Malfunction Indicator* | | Low Fuel Level Warning Light |
| | | | Electric Power Steering (EPS) System Warning Lights* | | |

Tire Pressure Monitoring System (TPMS)

The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.

The Low Tire Pressure Position Indicator  is displayed on the LCD screen in the Instrument Cluster.


The TPMS and the Low Tire Pressure Position indicators will illuminate if one or more tires is significantly underinflated, the vehicle has a spare tire without TPMS or the temperature changes (cold).

- Inflate tire(s) to specifications to turn off indicators using an accurate digital tire pressure gauge. See front driver's door jamb for PSI specification
- The TPMS Malfunction Indicator  will illuminate after it blinks for approximately one minute when there is problem with the TPMS. See dealer for service

REMINDER: Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s).

QUICK TIPS

- Even with TPMS, tire pressure should be checked at least once a month. Only adjust Tire Pressure on "cold tires"
- For proper maintenance, safety, and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

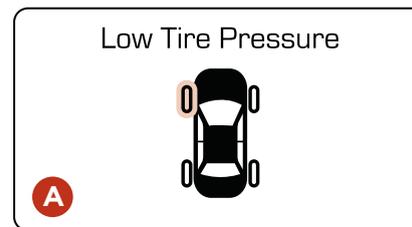

(Type B Cluster)

QR CODE

Kia Tire Pressure Monitoring System Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.





www.KuTechVideos.com/qf13/2014

Trip Computer / Tripmeter

The Trip Computer is a driver information system that displays information related to driving when the Engine Start/Stop button is in the ON position.

To cycle through the LCD Display modes, press the MENU/MODE button **A**.

When in the TRIP COMPUTER mode, press the SELECT button **B** to cycle through the screens. When displaying TRIP A or TRIP B screens, press and hold the ENTER/RESET button **C** to reset the Tripmeter to zero.

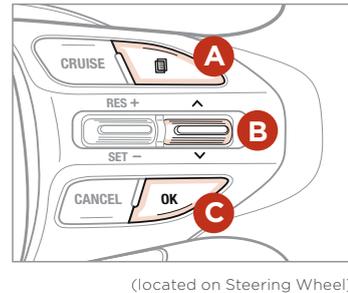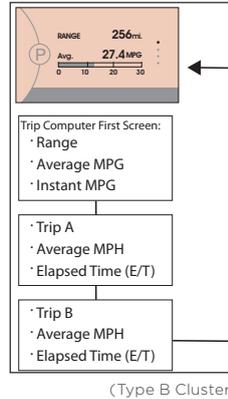

REMINDER: Appearance of Tripmeter display may differ as equipped.

REMINDER: All stored driving information (except Odometer and Range) is reset if the battery is disconnected.

Instant Fuel Consumption Mode*

Press the MENU/MODE button **A** to cycle to the Instant Fuel Consumption Mode to calculate fuel consumption during the past few seconds.

1. Keep your vehicle in good condition with regular maintenance
2. Travel lightly, without carrying unnecessary weight in your vehicles
3. Don't let the engine idle longer than necessary

REMINDER: Not to be used in calculating or as a reference for AVERAGE fuel economy.

REMINDER: If the vehicle speed exceeds 1 MPH (1.6 km/h) after being refueled with more than 1.6 gallons (6 liters), the average fuel economy will be cleared to zero (---).

Fuel Efficiency

There are several factors that contribute to your vehicle's fuel efficiency, including maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are tips on how to help improve fuel efficiency:

REMINDER: See Owner's Manuals for safety information.

- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

REMINDER: Driving range can vary depending on your vehicle's fuel tank size, e.g. 12-gal. vs. 24-gal., even though the MPG may be the same.

For more information on Fuel Economy, you can snap the QR code above to view a video or refer to the brochure "GETTING MORE OUT OF EVERY GALLON, FUEL-SAVING TIPS TO DRIVE BY" available at your local dealership.

QR CODE

Fuel Economy Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.




www.KuTechVideos.com/qf13/2014

Drive Mode Integrated Control System*


Drive Mode: The Drive Mode may be selected depending on driver's preferences and road conditions.

To scroll through the different Drive Modes, press the DRIVE MODE button **A**. The Instrument Cluster will display SPORT or ECO when selected. When in Normal mode, it will not display in the Instrument Cluster.


REMINDER: The system is turned ON and to Normal Mode when ignition is in the ON position

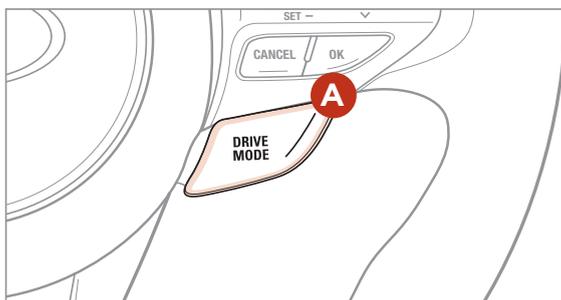

(located on Steering Wheel)

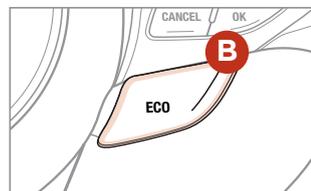

(located on Steering Wheel)

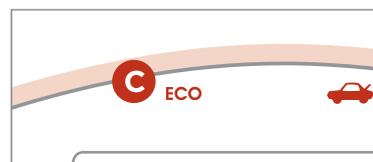

(located on Instrument Cluster)

Active ECO System*

The Active ECO system helps improve fuel efficiency by controlling several vehicle components. When activated, it optimizes drivetrain operations such as engine power and transmission for better fuel economy.

To turn ON, press the ECO button **B**. The button light will turn on and the green ECO indicator light **C** in the instrument cluster will illuminate (indicating that you are getting optimal fuel efficiency). The Active ECO System will remain on even when the engine is turned off and restarted.

To turn the Active ECO System OFF, press ECO button **B** again.

For more information on Active ECO, refer to your Owner's Manual or contact your local dealership.

QR CODE

Optima Active ECO Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014


QUICK TIPS

To help improve your fuel efficiency:

- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Be sure the wheels are properly aligned



Service Mode

To enter Service Mode, press the MENU button **A**, scroll to the Service Mode and press SELECT button **B**. Then press the ENTER/RESET button **C**. System will display number of miles remaining until next service is due, and type of service.

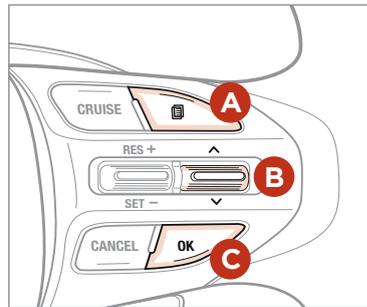


(located on Steering Wheel)

When service is required, the following screen will be displayed: Service Required.

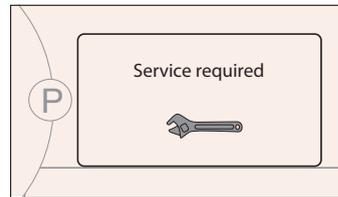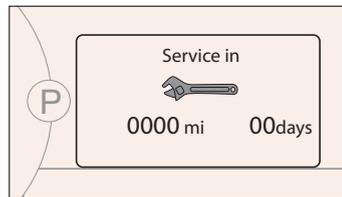


To reset the Service Mode system, press and hold the OK button **C** for more than 1 second. To turn Service In OFF, go to User Settings.

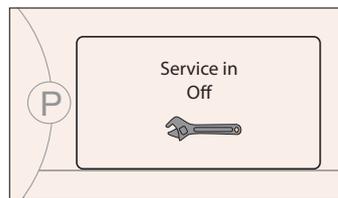

User Settings

To enter the User Setting mode on the LCD display* cluster, press the MENU/MODE button **A** when the vehicle is at a standstill and with the ENGINE START/STOP button in the ON position or the engine running.

You can navigate the selections on the display by pressing the SELECT button **B**, and then selecting the item by pressing the ENTER/RESET button **C**.

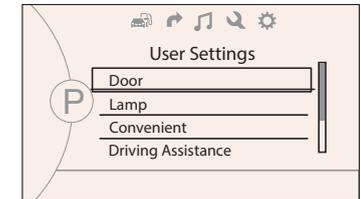

Doors:

- Auto Door Lock & Unlock*
- Two Press Unlock
- Horn Feedback

Seats:

- Seat Easy Access*

Lamps:

- One-Touch Turn Lamp*
- Headlamp Delay
- Welcome Light*

Convenience:


- Language
- Temperature
- AVG Fuel Economy Reset
- Easy Seat Access*
- Welcome Sound
- Steering Position

Service Interval ON/OFF

Service

To set up the maintenance schedule:

- Press the MENU button **A** and toggle to Service Interval
- Press the ENTER/RESET button **C** to select the desired maintenance schedule

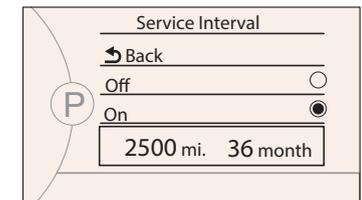


Blind Spot Detection (BSD) System*

The BSD system uses radar sensors to help alert the driver while changing lanes or while in Reverse moving backwards.

When the BSD button is pressed ON, the BSD indicator on the button **A** will illuminate. The outside rearview mirror warning lights will also illuminate for 3 seconds.


The system will become active when the vehicle is traveling more than 18 mph and will alert the driver if another vehicle is detected by the radar sensor.

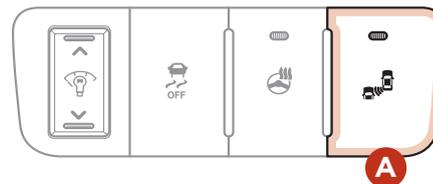

Blind Spot Detection / Lane Change Assist


1st-stage alert: When another vehicle is detected within the BSD System boundary, a yellow light will illuminate on the outside rearview mirrors.

2nd-stage alert: When 1st stage alert is on and a turn signal is turned on, an alarm will sound.

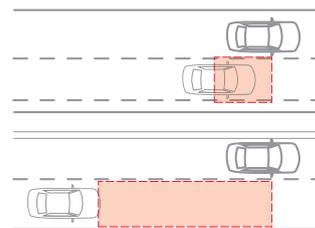

RCTA (Rear Cross Traffic Alert)

When the vehicle is in Reverse and moves backwards from a parking position, the sensor detects approaching vehicles on the left or right side.

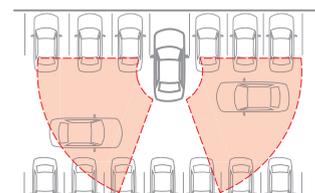

REMINDER:

- The BSD system will not show a warning if the vehicle speed is only 6mph above the surrounding vehicles
- When the BSD is ON and the ignition is cycled to OFF then ON again, the BSD system returns to ON
- The RCTA feature can be turned OFF/ON in User Settings

For more information on the Blind Spot Detection System, please refer to the Owner's Manual.

QUICK TIPS

Blind Spot Detection System Video

To view a video on your mobile device, snap this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/vg13/2014

Electric Parking Brake (EPB)*

The Electric Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light  is illuminated on the instrument cluster.

Ⓢ QUICK TIPS

Pull up and hold EPB switch again to increase brake pressure if parked on a decline or incline.

Releasing the Parking Brake

The EPB will automatically release when the shifter is placed in Reverse or Drive .


To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light  is OFF.

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving, unless there is an emergency situation
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Ⓢ QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

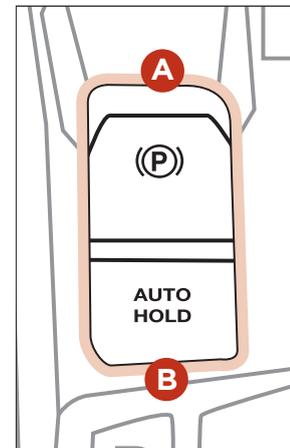

📱 QR CODE

Electric Parking Brake (EPB)/AUTO HOLD Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

AUTO HOLD*

AUTO HOLD temporarily maintains the vehicle at a standstill even if the brake pedal is released. AUTO HOLD can be turned ON/OFF using the AUTO HOLD switch **B** on the driver's panel. Before AUTO HOLD will operate, the driver's door, engine hood and trunk must be closed and the driver's seat belt must be fastened.

The AUTO HOLD indicator has four states:

White: Standby - With vehicle at a standstill, and AUTO HOLD switch **B** turned ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the AUTO HOLD indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the AUTO HOLD indicator changes from white to green.

OFF (not illuminated): The indicator will turn OFF when the AUTO HOLD switch **B** is manually turned OFF or when the EPB is manually turned ON.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

Refer to pages 3-4 for location of instrument cluster indicators.

Instrument Panel Dimmer

With parking/headlights ON, toggle switch **C** up or down to adjust display brightness of the instrument panel illumination.

REMINDER: Door Mood Lamp is a fixed brightness and cannot be adjusted (not to be confused with Advanced Mood Lighting Speaker).

REMINDER: The Instrument Panel Dimmer does not adjust brightness on the Navigation System screen, use Navigation setup to adjust brightness on the Navigation System


Electronic Stability Control (ESC)

The ESC system is designed to help stabilize the vehicle during cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press ESC button **D** to turn ESC OFF/ON.

REMINDER: ESC is active by default at vehicle start-up.

REMINER: The ESC Indicator Light  in the instrument cluster will illuminate whenever the ESC is in operation.

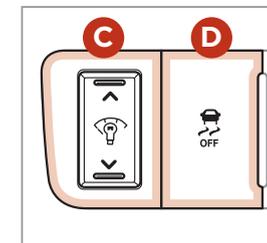

(located on left of Steering Wheel)

Hill-Start Assist Control (HAC)

HAC helps prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

REMINER: The HAC does not operate when the gear shift is in the P (Park) or the N (Neutral) position.


QUICK TIPS

- When HAC is active (e.g., accelerating from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator.
- HAC provides a 2 second delay before the vehicle may start rolling backwards


Hood Release Lever and Latch

Opening the Hood:

1. Pull the Hood Release Lever **A** to unlatch the Hood

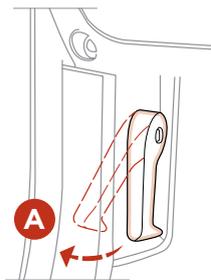

2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left inside of the Hood's center and lift the Hood

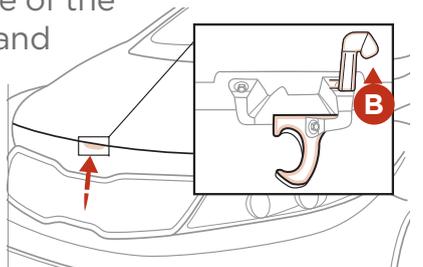


Closing the Hood:

Lower the Hood about halfway and then press down to securely lock in place.

Fuel Door and Trunk Release Buttons

Press the button **C** to release the fuel door.

Pull the button **D** to open the trunk.

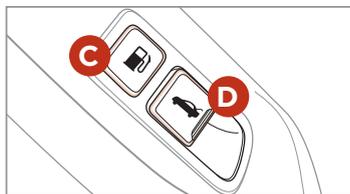


Engine Start/Stop Button*

To start the engine:

1. Depress the brake pedal
2. Press the ENGINE START/STOP button while in Park

To use the ENGINE START/STOP button, you must have the Smart Key fob on your person. To turn the vehicle OFF, press the ENGINE START/STOP button.

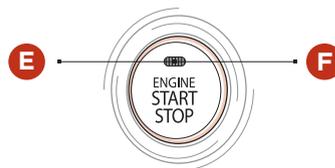

REMINDER: In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the ENGINE START/STOP button for more than 2 seconds or 3 times successively within 3 seconds.

REMINDER: If Smart Key fob battery is dead, hold the fob up against the Engine Start/Stop button and press

Ⓢ QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button once (Orange light **E**)

On position

- When already in the ACC position (Orange light **E**) and without depressing the brake pedal, press the ENGINE START/STOP button again (Green light **F**)
- When in the OFF position (no light) and without depressing the brake pedal, press the ENGINE START/STOP button twice (Green light **F**)

Keeping the vehicle in ACC or the ON position without driving may discharge the vehicle's battery.

📱 QR CODE

Kia Engine Start/Stop Button & Smart Key Video


To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

Power Windows, Window Lock & Central Door Lock*

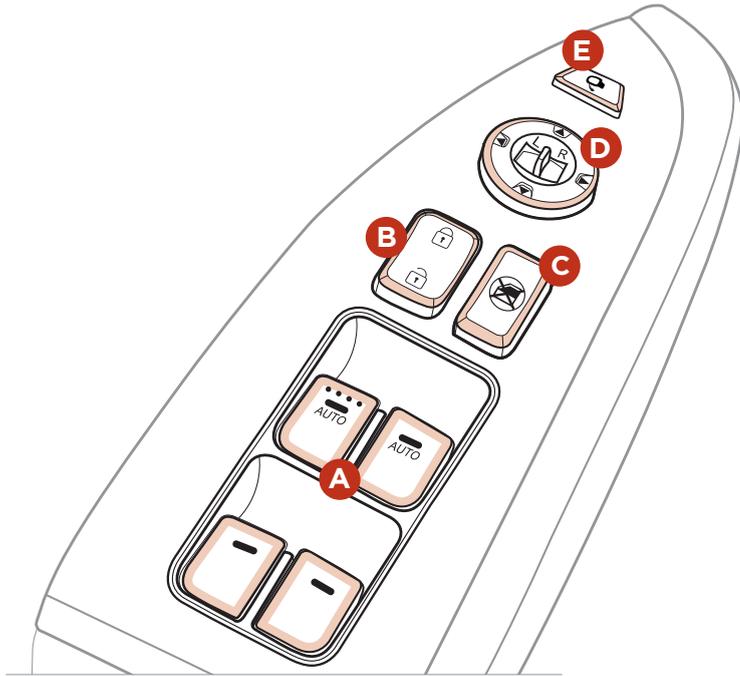

- A** Pull/Press to operate Driver's and Front Passenger's Windows Auto Up/Down*
- B** Press to Unlock/Lock All Doors
- C** Press to disable Rear Passenger Windows

REMINDER: When pressed **C**, window controls for the Rear Passenger Windows are disabled, including from the driver's controls.

Automatic Door Lock/Unlock*

When the gear shift is moved into or out of P(PARK), all doors will Lock/Unlock.

Power/Heated Outside Mirrors*

Mirror heaters controlled with Rear Defroster.

Power Folding Mirrors*

D Toggle left or right to select mirror. Then press arrows to adjust mirror position.

To both fold and unfold the outside rearview mirror, press the folding mirror button **E** as pictured.

REMINDER: To lock position of mirrors, toggle switch to the neutral (center) position.

QUICK TIPS

Auto Door Lock/Unlock will engage when gear shift is moved in to or out of the P (Park) position. Refer to page 8, User Setting mode, on how to turn Auto Door Lock/Unlock OFF/ON


Headlights & High Beams

AUTO Light* function — When the light switch is in the AUTO light position, the taillights and headlights will turn ON/OFF automatically depending on the amount of light outside the vehicle.

Push lever to turn High Beams ON. Pull lever to flash Headlights / High Beams.

Rotate lever to change the Headlight function:

- AUTO*** Automatic Headlights position
-  Headlight position
-  Parking light position
- OFF** OFF position

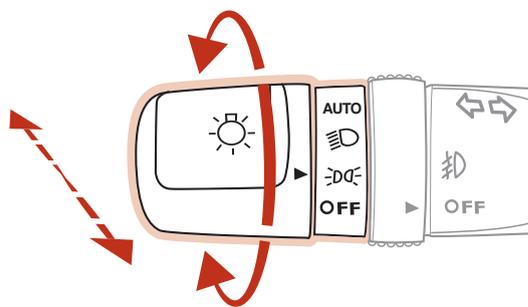

Turn Signals & Fog Lights


One-Touch Lane Change Signal is activated by moving the Turn Signal Lever slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times the Lane Change Signal blinks (3/5/7), go to User Settings Mode in the LCD Display.

REMINDER: Headlights must be ON for Fog Light operation.


For more information on the User Settings Mode, please refer to your Owner's Manual.

Move lever Up/Down for Right/Left Turn Signal.

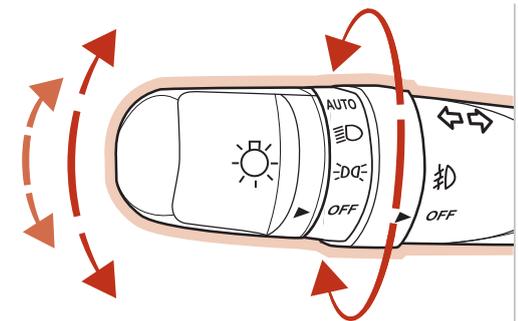

Rotate lever ring to turn Fog Lights ON/OFF.

Windshield Wipers & Washers

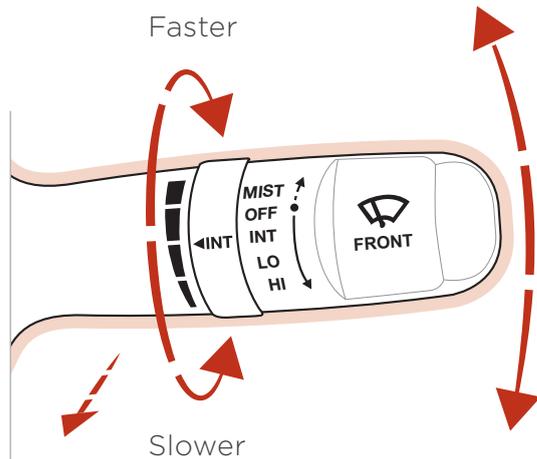

Move lever Up/Down to change Wiper modes.

Rotate lever to adjust Intermittent Wipe Speed.

MIST: Single wipe

OFF: Wiper off

INT: Intermittent wipe

LO: Slow wipe

HI: Fast wipe


Pull to spray and wipe.

ⓘ QUICK TIPS

If the wiper switch is in AUTO mode when the ignition is ON, the wiper will operate once to perform a self-check of the system. Set the wiper to OFF position when the wiper is not in use.

LCD Display Controls and Modes*

Press Mode button **A** to scroll through different LCD Modes:

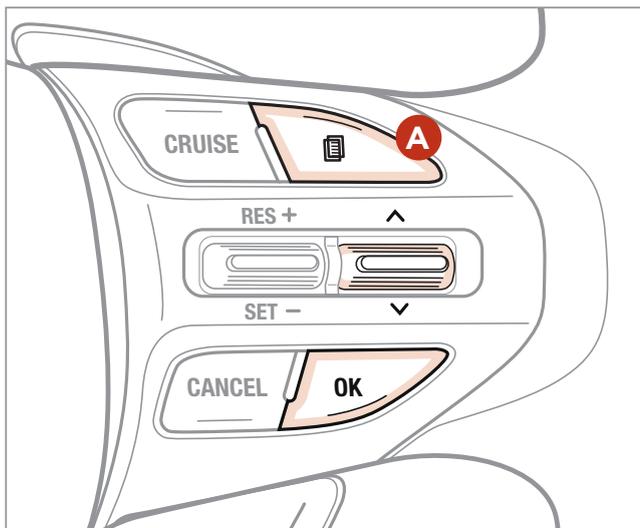

(LCD Display Control buttons located on Steering Wheel)

LCD modes:

Type B



Trip Computer Mode: Displays driving information for tripmeter, fuel economy, etc.



Master Warning / Service Modes: Informs on upcoming service intervals, and warning messages related to TPMS and others



User Settings Mode: Change settings of the doors, lamps and other features


STEERING WHEEL CONTROLS

Heated Steering Wheel Button*

Press button **A** to turn ON/OFF steering wheel heater, while the Engine Start/Stop Button is in the ON position. Steering wheel heater will turn off automatically in 30 minutes, or when button is pressed again to deactivate.

🕒 QUICK TIPS


If ignition is turned OFF, then ON again, within 30 minutes of steering wheel heater being turned on, system will automatically be set ON again.

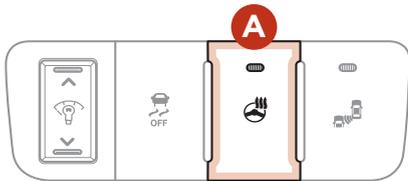

Tilt/Telescopic Steering Wheel*


To adjust the Steering Wheel, push down the lock-release lever **B** and adjust to desired angle **C** and distance **D**.

When finished, pull up the lock-release lever **B** to lock Steering Wheel in place.

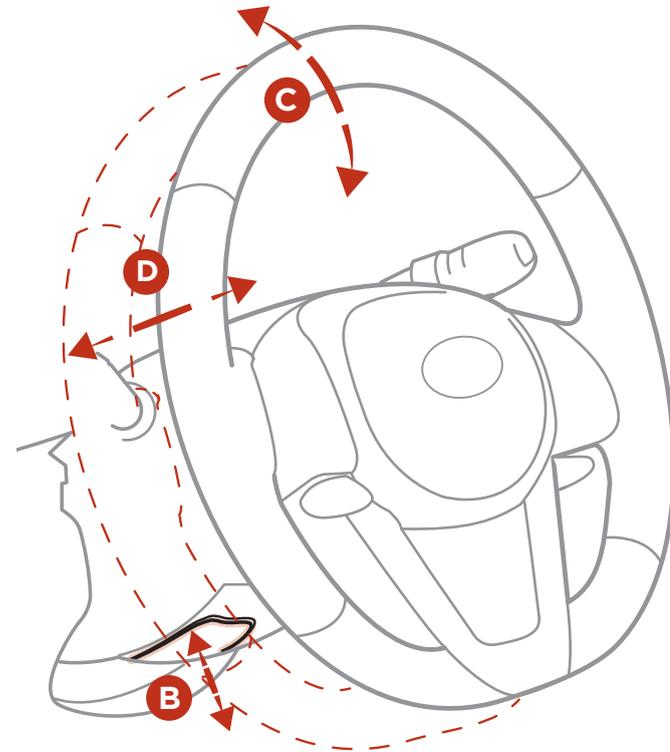

REMINDER: The telescopic range of motion is approximately 1.5 inches.

Bluetooth® Wireless Technology

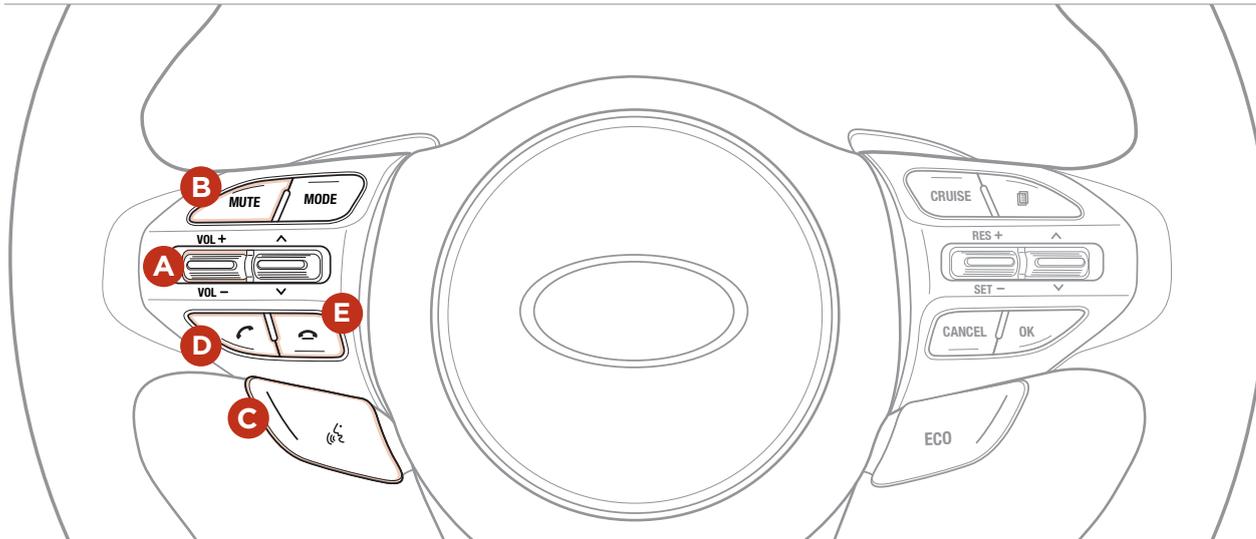

- A Volume button:** Press up/down to raise/lower speaker volume
- B Mute button:** Press to mute the microphone during a call
- C Talk button:** Press to activate voice recognition / bring up menus / place calls with minimal voice command prompts from the system

ⓘ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

- D Receive/Place Call button:** Press to receive/transfer calls. Press to place a call using vocal command prompts from the system, or to answer an incoming call
- E End Call button:** Press to end a call or cancel a function

ⓘ QUICK TIPS

- Phonebook transfer upload time varies by phone model and with number of phonebook entries
- Because of differences in phone quality, service providers and **Bluetooth®** Wireless Technology chip programming, functionality may differ from one phone to another
- Changing language may delete paired phones

For more information, refer to the *Digital Navigation Systems User's Guide* or the *UVO System User's Manual*.

For **Bluetooth®** Wireless Technology FAQs, go to www.kia.com, Owners section.

Refer to your *Owner's Manual* for more specific **Bluetooth®** Wireless Technology phone pairing and operation instructions.

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your *Owner's Manual* for more details.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Bluetooth® Wireless Technology

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide.

Ⓢ QUICK TIPS

During the pairing process, be sure to accept the connection requests on the phone for phonebook download and to allow acceptance of all future **Bluetooth**® connection requests.

How to Place a Call

When using the voice command feature, wait for the system BEEP before speaking the command.

There are two options for placing a call:

Navigation System

- **Option 1:** Press the Receive/Place Call button **D** (displays the phone screen with number keypad)
- **Option 2:** Press the Talk button **C**. Then say the command "Call Name" or "Dial Number," followed by phonebook name or number

Voice Recognition and Phone Contact Tips

The Kia Voice Recognition System may have difficulty understanding some accents or uncommon names. When using Voice Recognition to place a call, speak in a moderate tone, with clear pronunciation.

To maximize the use of Voice Recognition, consider these guidelines when storing contacts:

- Do not store single-name entries (e.g., "Bob", "Mom", etc.). Instead, always use full names (including first and last names) for these contacts
- Do not use special characters (e.g., '@', '-', '*', '&', etc.)
- Do not use abbreviations (i.e., use "Lieutenant" instead of "Lt.") or acronyms (i.e., use "County Finance Department" instead of "C. F. D.")
- Be sure to say the name exactly as it is entered in the contacts list

📱 QR CODE

Bluetooth® Wireless Technology Video


To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

Audio Controls*

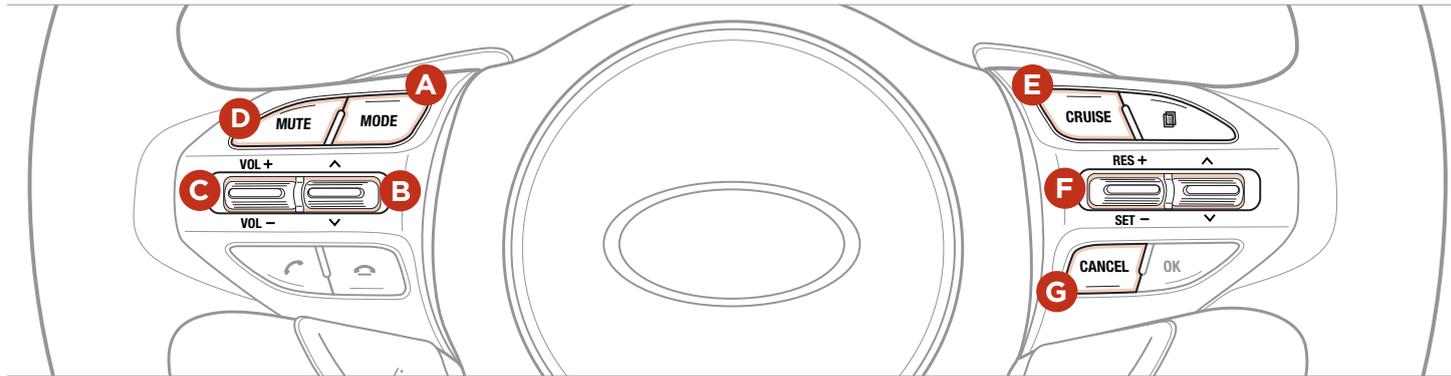

- A Audio Mode button:** Press to cycle through FM1-2 / AM / SAT 1-3 / CD / USB / AUX / iPod*
- B Seek/Presets button**
Radio Mode: Press to advance through Preset Stations. Press and hold to AUTO SEEK
CD / USB / iPod Mode: Press to move TRACK UP/DOWN. Press & hold to FF/REW
- C Volume button:** Press up/down to raise/lower volume
- D Mute button:** Press to mute all audio

REMINDER: Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

REMINDER: Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Ⓢ QUICK TIPS

Pressing the Audio Mode button for more than 1 second will turn Audio Mode ON/OFF.

Cruise Control*


- E Cruise Control ON/OFF:** Press to turn the Cruise Control ON/OFF
- F Resume Cruising Speed:** Press to resume or increase Cruising Speed
- F Set Cruising Speed button:** Press to set or decrease Cruising Speed
- G Cruise Control Cancel button:** To cancel Cruise Control setting, do one of the following:
 - Press the brake pedal
 - Press the CANCEL button **G**

Ⓢ QUICK TIPS

- Cruise Control is designed to function above approximately 25 mph
- The cruise control system will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

For further audio system operations, refer to pages 16-24.

Standard Audio System Overview/Operation — AM/FM/Sirius™ Satellite Radio/CD/iPod®/Aux

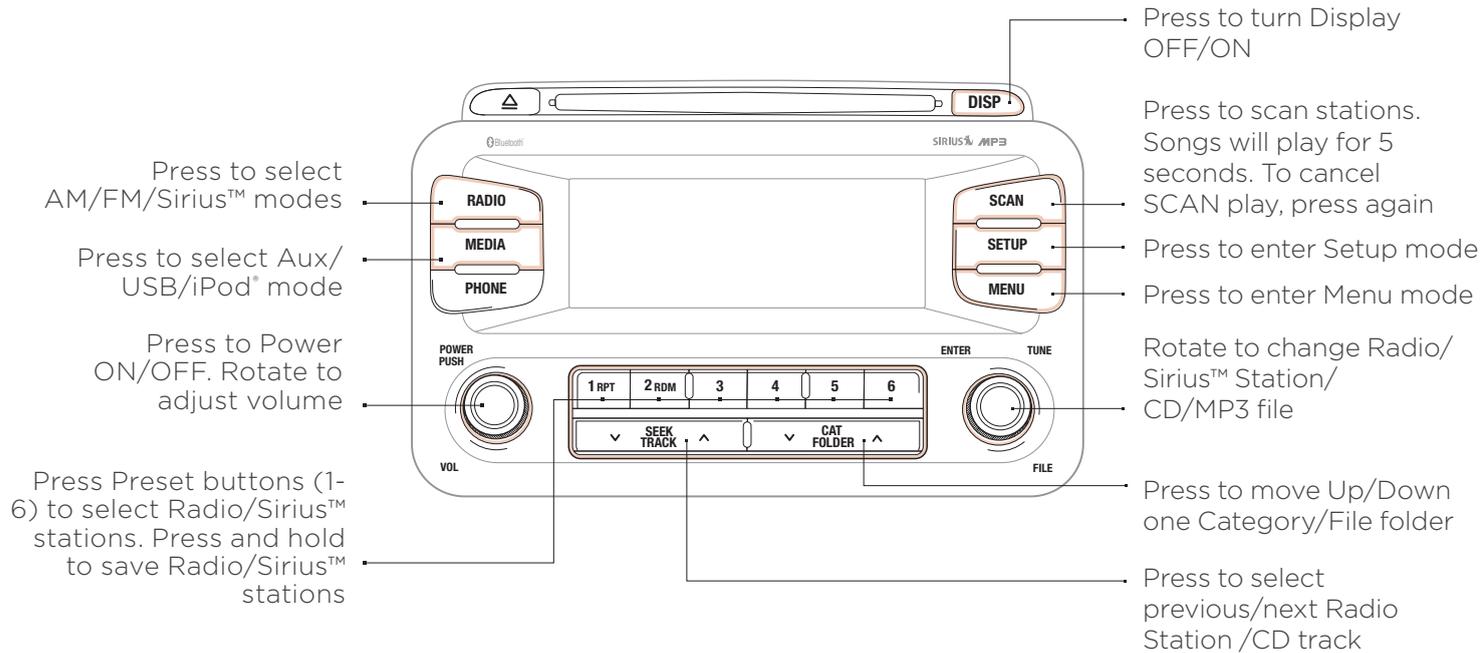


QR CODE

Standard Audio System Videos

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.

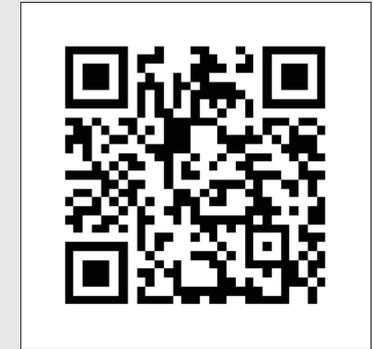

http://kutechvideos.com/audio/base_system

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

Audio System Setup Options


Press the SETUP button, then use the TUNE knob to cycle through the available settings for each equipped audio option. Press the Tune Knob to adjust the audio option selected. Audio options may include the following:

- Display Settings
- Phone Settings
- Sound Settings
- System Settings

REMINDER: Sirius™ service not available in AK or HI.

For further audio system operations, refer to pages 21-24.

Standard Audio System Operation — CD/Aux/USB/iPod®*

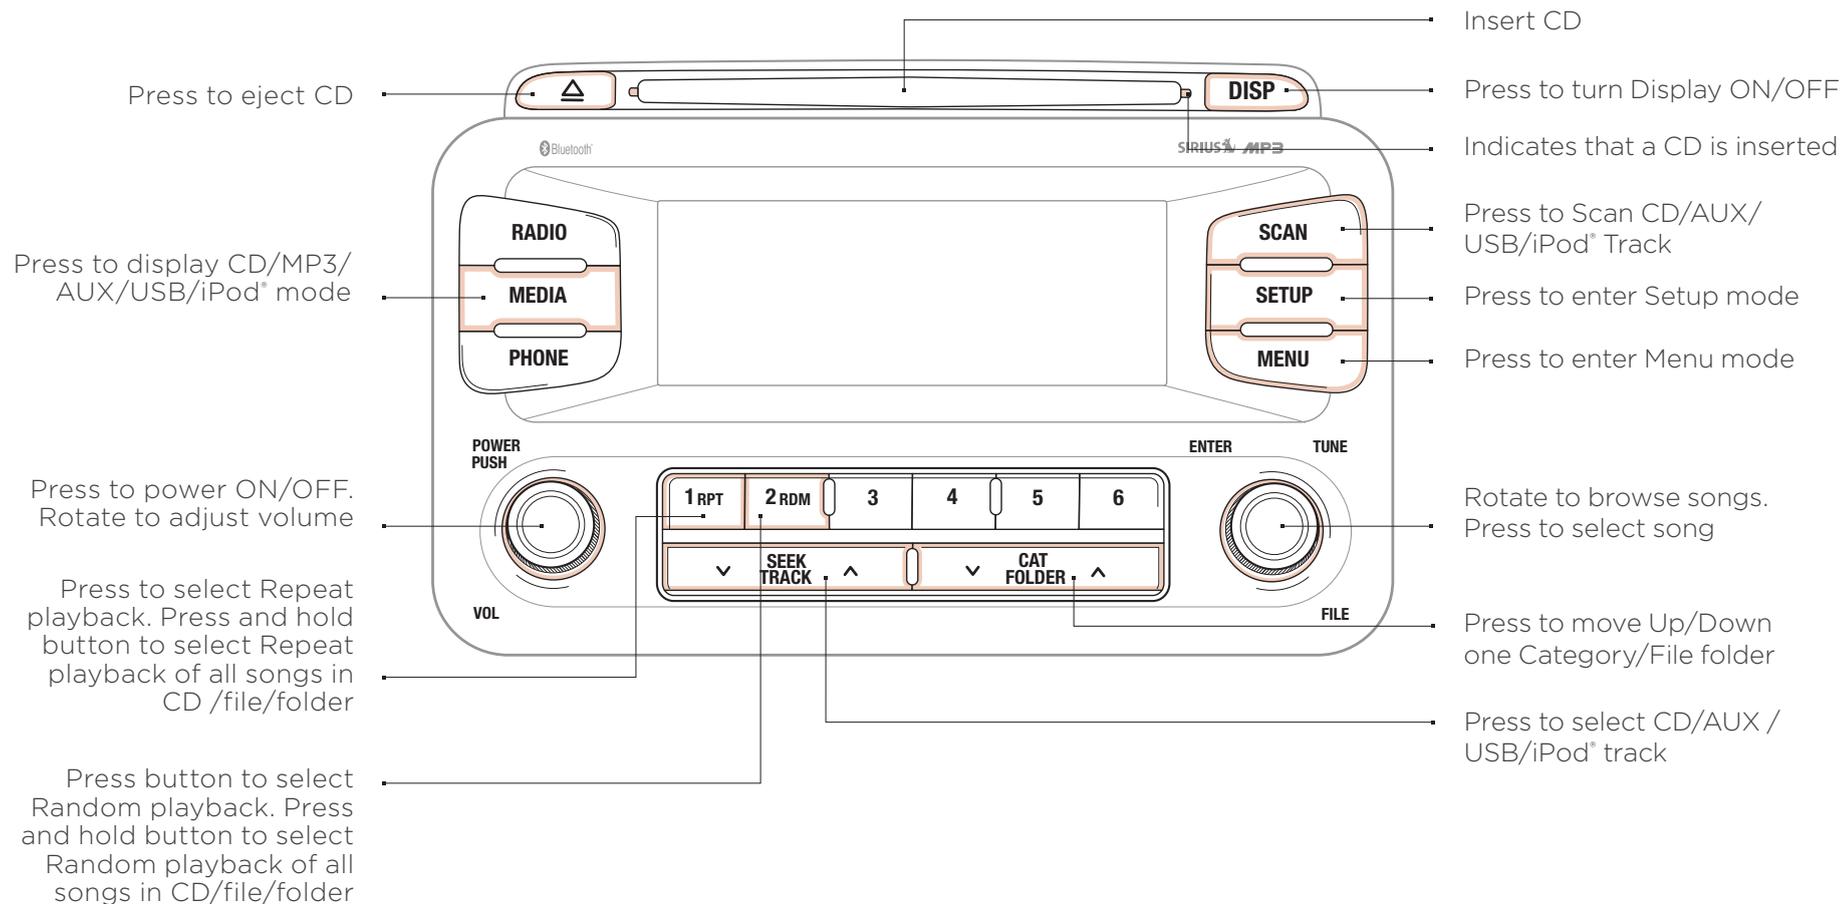


REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

REMINDER: Sirius™ service not available in AK or HI.

For further audio system operations, refer to pages 21-24.

Navigation System with AM/FM/CD/MP3/Sirius - Sirius Traffic*

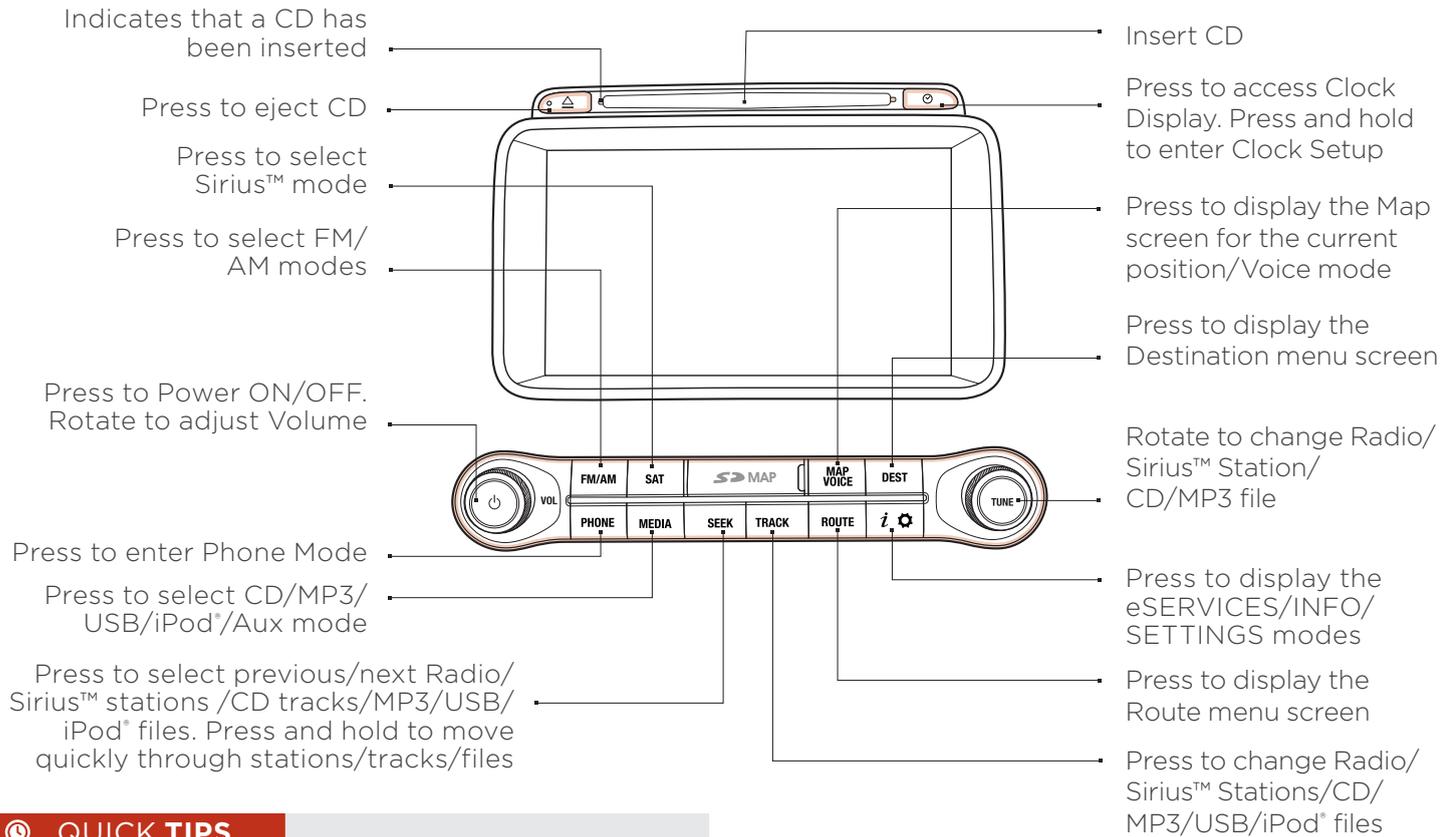

ⓘ QUICK TIPS

When using the voice command feature, wait for the system BEEP before speaking the command.

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.

REMINDER: Sirius™ service not available in AK or HI.

For further navigation system operation, refer to the Digital Navigation System User's Manual.

For further audio system operations, refer to pages 21-24.

📱 QR CODE

Navigation Audio System Videos

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.




http://kutechvideos.com/audio/nav_eServices

ⓘ QUICK TIPS

Prolonged use of the Navigation system in ACC mode may drain the vehicle's battery. A warning screen may appear periodically to remind users that the Navigation System should be operated with the engine running to prevent battery discharge.

UVO System*

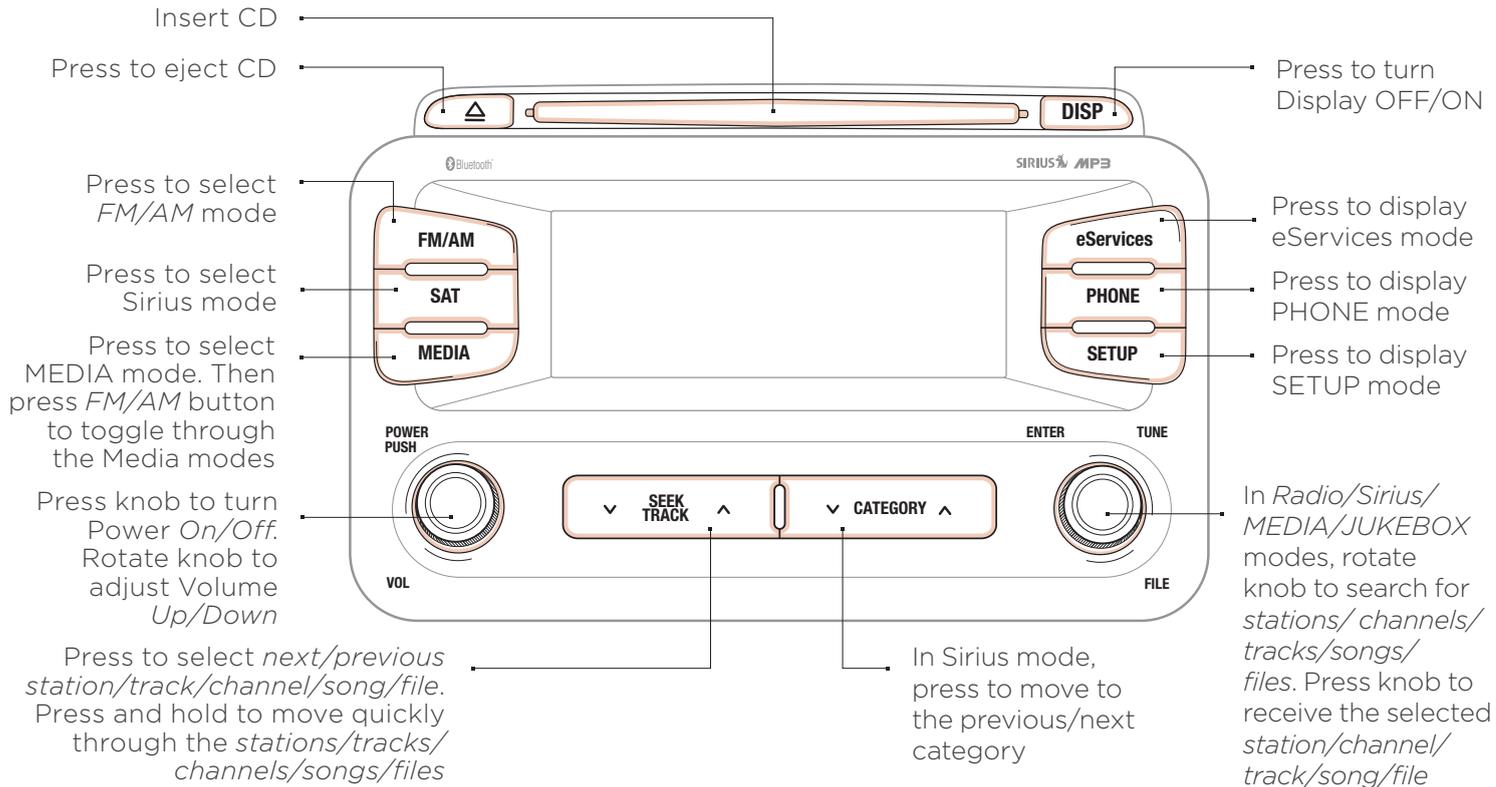

QR CODE

UVO System Videos

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



http://kutechvideos.com/audio/UVO_eServices

REMINDER: Your vehicle's audio system may differ from that in the illustration. See your Owner's Manual for more details.


Ⓢ QUICK TIPS

- When using the voice command feature, wait for the system BEEP before speaking the command
- Only MP3 or WMA files may be played or copied to Jukebox. Commercial CDs or CDs with a CDDA audio format (compact disc digital audio) cannot be copied to Jukebox
- At any time you can interrupt UVO System Command Feedback by pressing the TALK button
- Prolonged use of the UVO system in ACC mode may drain the vehicle's battery

REMINDER: Sirius service not available in AK or HI.

For further audio system operations, refer to pages 21-24.


Aux/USB/iPod® Port* & Power Outlets*

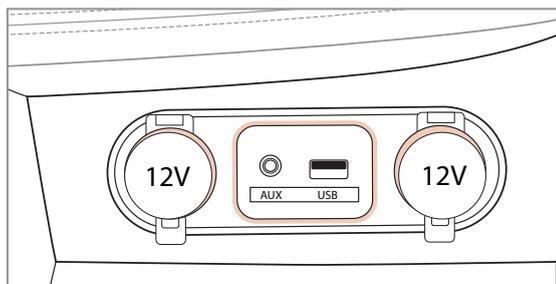

ⓘ QUICK TIPS

The power outlets are inactive when ignition is in the OFF position

Digital Clock

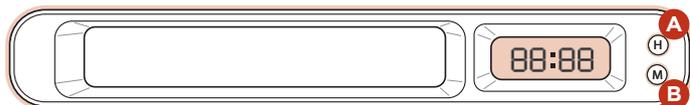

Standard Audio System Clock Setup:

Press the **H** button **A** to advance the time by one hour.
Press the **M** button **B** to advance the time by one minute.

ⓘ QUICK TIPS

Press and hold both for more than 5 seconds to switch from 12 to 24 hour formats.

UVO System Clock Setup:

Press the **CLOCK** button to display the Clock setting screen. Then use the on-screen buttons to navigate through setup.

Navigation System Clock Setup:

Press the Info/Settings key on the Audio Control Unit. Then press the on-screen Setup button and select the Clock icon.

ⓘ QUICK TIPS

Press the **DONE** button* on the Navigation screen to ensure changes are saved.

📱 QR CODE

Kia USB Port Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.


Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014


Automatic Climate Control*

(Type B)

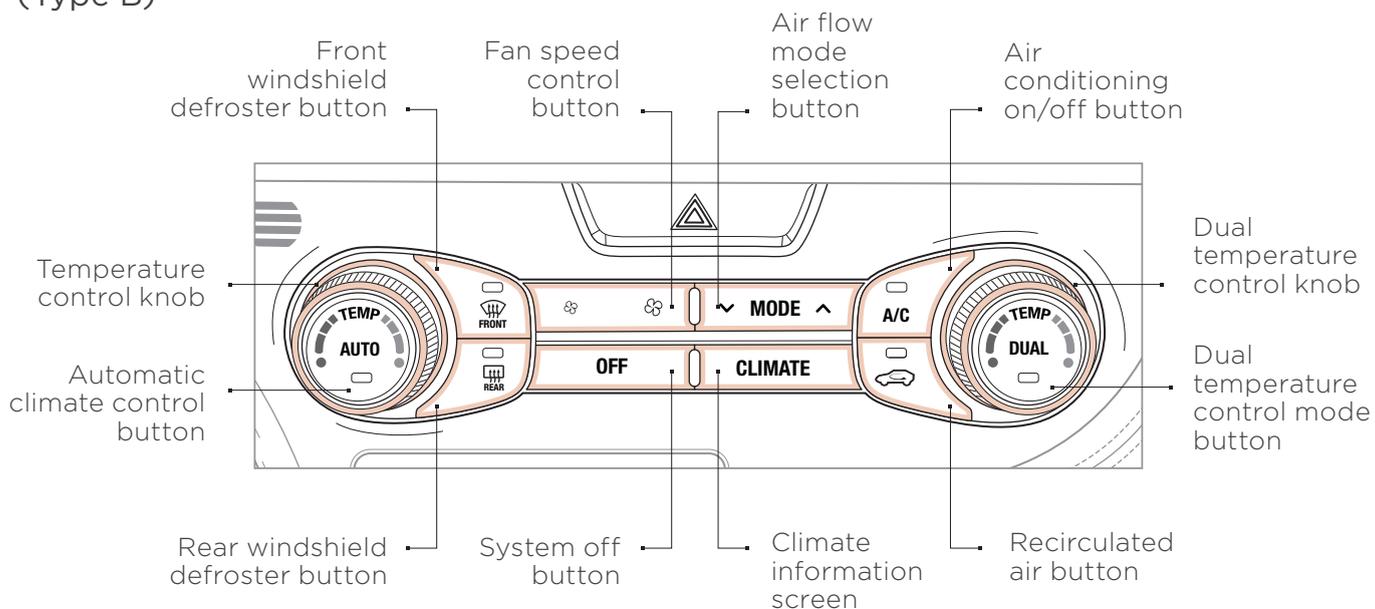

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons:

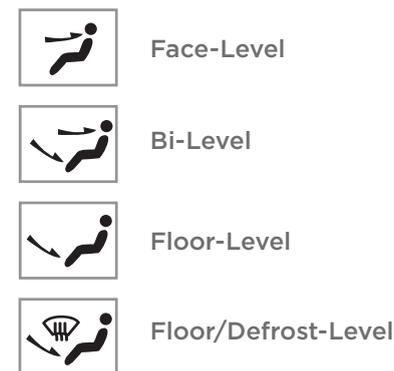

REMINDER: Your Automatic Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Climate Control Auto Function:

1. Press **AUTO** to select Full Auto Operation
2. Press **MODE** buttons to control which vents air flows through
3. Press **DUAL** to select Dual Temperature Control Operation

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature to Hot**
3. Press the **Defrost** button


Defog Inside Windshield:

QUICK TIPS

- Keep inside glass as clean as possible to help reduce window fogging
- Defrost Mode activates A/C and opens Fresh Air Vent

- During Auto Operation the A/C indicator will NOT illuminate. The fan speed, air intake, airflow and air conditioning may automatically engage at any time to reach desired temperature and reduce humidity

Manual Climate Control*

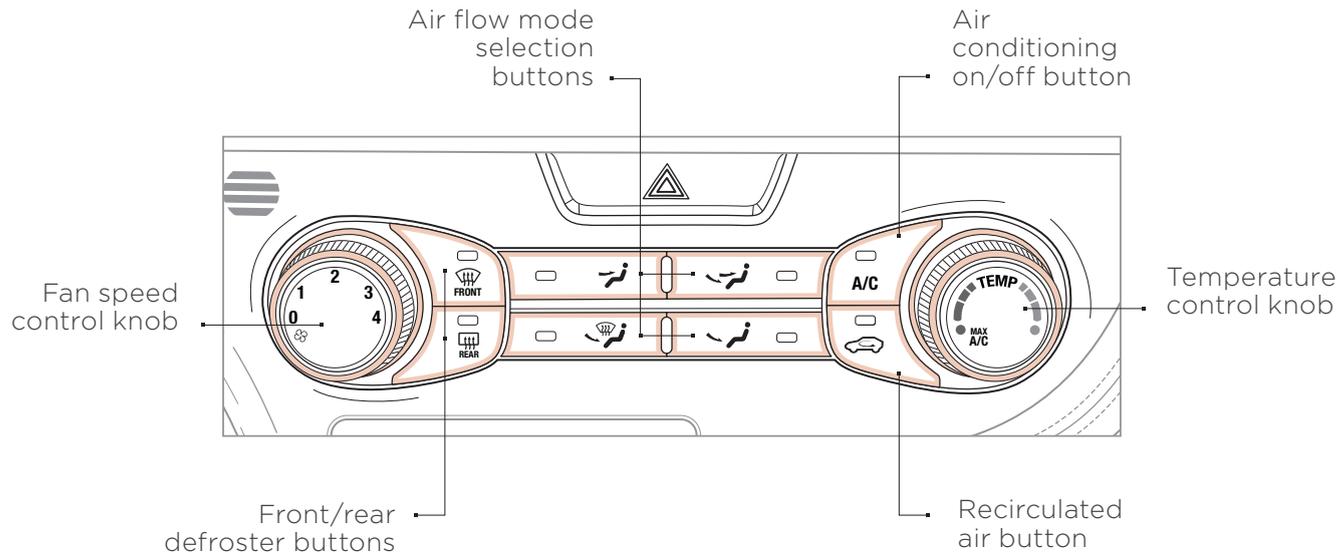

Air Flow Modes

To select Air Flow Modes, press the Mode selection buttons :

-  **Face-Level**
-  **Bi-Level**
-  **Floor-Level**
-  **Floor/Defrost-Level**

Defrost Outside Windshield:

1. Set **Fan Speed** to the highest position
2. Set **Temperature** to **Hot**
3. Press the **Front Defroster** button 

Defog Inside Windshield:

1. Set **Fan Speed** to desired position
2. Set desired **Temperature**
3. Press the **Front Defroster** button 

🕒 QUICK TIPS

- Defrost  Mode activates A/C and opens Fresh Air Vent
- MAX A/C Mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to help reduce window fogging

REMINDER: Your Manual Climate Control system may differ from those in the illustrations. See your Owner's Manual for more details.

Automatic Gear Shift with Sportmatic Shifting*

P: Park

R: Reverse

N: Neutral


D: Drive

[+]: Sport Mode Upshift

[-]: Sport Mode Downshift

Sport Mode: To enter Sport Mode, move shift lever from **D** to left gate

Sport Mode Shifting: Move shift lever up [+] to Upshift or down [-] to Downshift

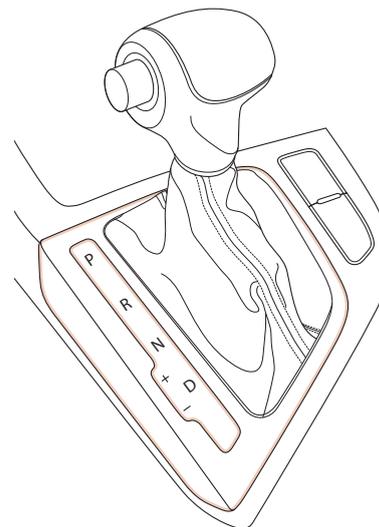


Paddle Shifters*

Paddle Shifters are operable when the shift lever is in the D position or in Sport Mode.

Paddle Shifting: Pull the [+] or [-] paddle shifter once to shift up or down one gear.

REMINDER: The Paddle Shifters can be operated when the vehicle speed is more than 6 mph.

REMINDER: When in Sportmatic Mode, pulling the left and right paddle shifters at the same time will NOT shift gears.

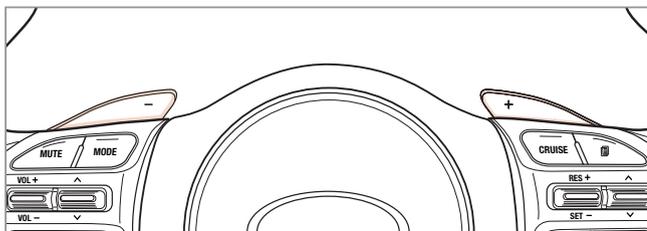

🕒 QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Sport Mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected



Kia Sportmatic* Shifting Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

Paddle Shifters Video




www.KuTechVideos.com/qf13/2014

Driver Position Memory System*

To store a seating position into memory, first place the shifter into P (Park) while the ignition switch is ON. Then:

1. Adjust the driver's seat
2. Press the SET button **A** on the control panel. System will beep once
3. Press one of the memory buttons **B** within 5 seconds. The system will beep twice when memory has been stored
4. "Driver (1 or 2) set is memorized" will appear on the instrument cluster LCD display

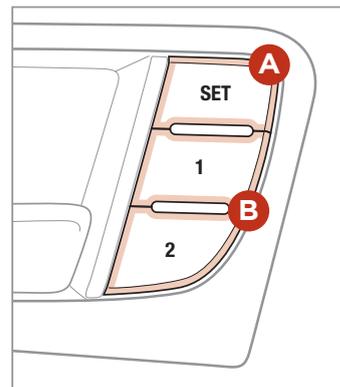

QR CODE

Driver Position Memory System Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.


Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

Power Adjustable Driver's Seat*

Move/Press controls to adjust Seat forward/backward, Seat Cushion, Seatback or Lumbar

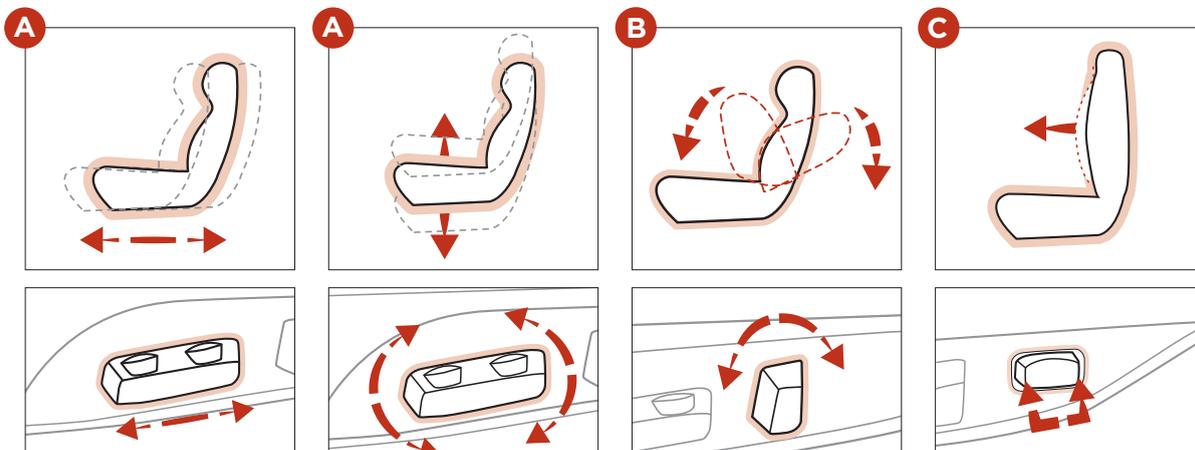


Seat forward/
backward

Seat Cushion


Seatback

Lumbar

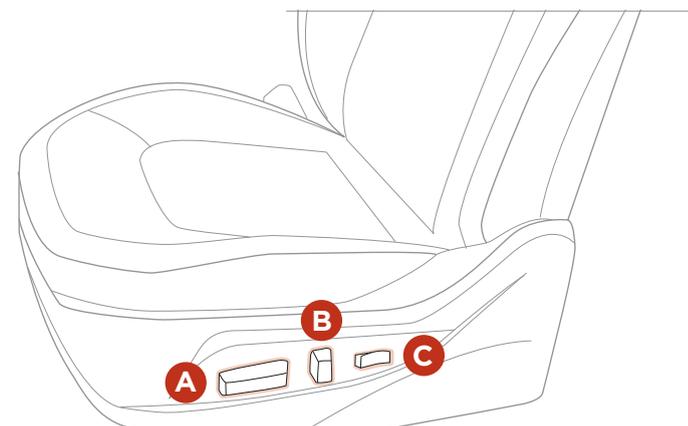

Seat Warmers*


Press button once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

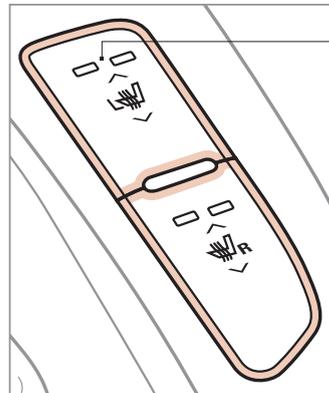

Yellow Color: Warming

Seat Warmers/ Ventilated Seats*

Seat Warmers — Press top of button once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.

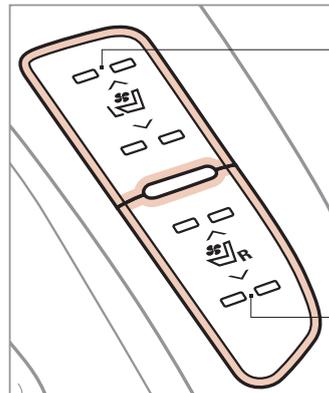

Yellow Color: Warming

Ventilated Seats — Press bottom of button once for high setting (2 LEDs lit), again for low setting (1 LED lit) and again to turn OFF.


Blue Color: Ventilating

6-Way Manual Adjustable Driver's Seat

Pull lever **A** to slide Seat forward/backward

Pull/press lever **B** to adjust Seat Height

Pull lever **C** to adjust Seatback Recline

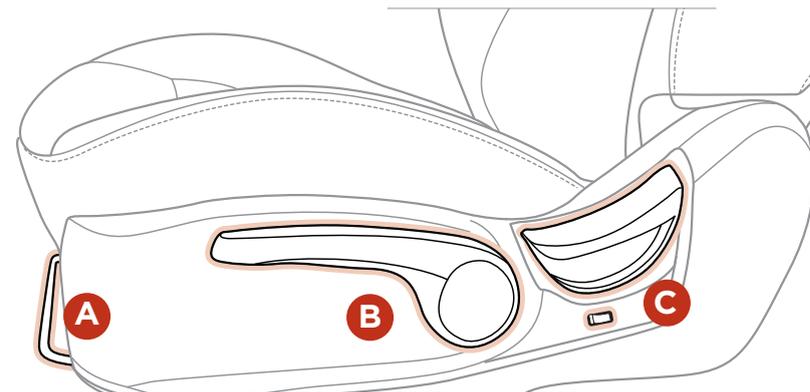

QUICK TIPS

- With the seat warmer switch in the ON position, the heating system in the seat turns OFF or ON automatically depending on the seat temperature
- System defaults to the OFF position whenever the ignition switch is turned ON

QR CODE

Seat Warmers Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.




www.KuTechVideos.com/qf13/2014

Front Seat Headrest Adjustment


To adjust headrest forward*: Pull headrest forward at an upward angle to one of three positions.

To adjust headrest back*: Pull headrest completely forward at an upward angle, then release.

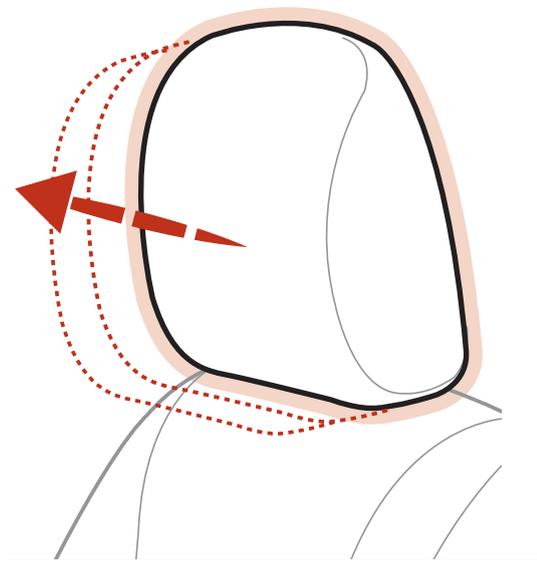

To raise headrest: Pull headrest up.

To lower headrest: Press lock, then press the headrest down.

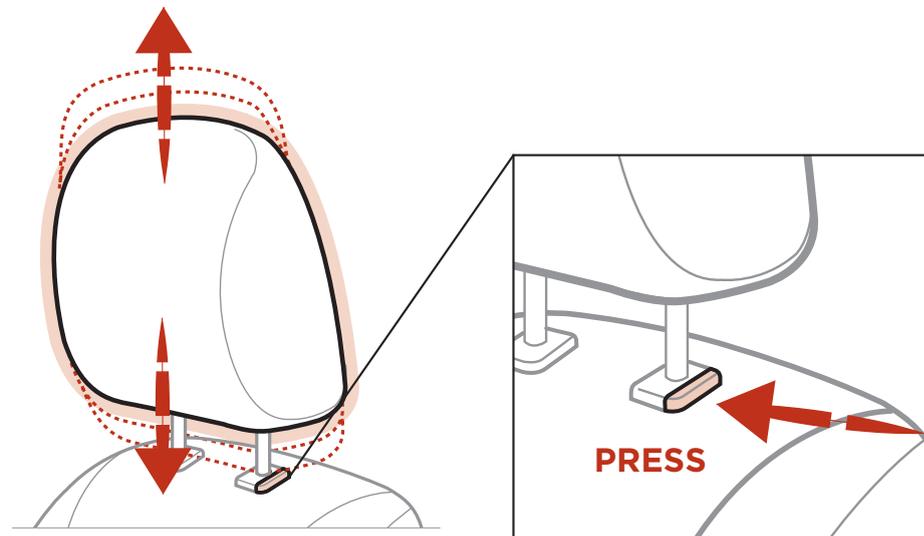

Ⓢ QUICK TIPS

When adjusting the headrest back, you may need to raise headrest to allow space for the headrest to fully adjust backward.

Smart Key*

Smart Key Fob:



- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors
- C** Press and hold to unlock Trunk and manually open
- D** Press and hold more than 1 second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key

Mechanical Key **F**:

- Use to unlock driver's door
- Use to turn Child Safety Locks (page 39)
- Use to lock glove box

Driver's Door Lock/Unlock button **G**:

- Press button once to unlock driver's door
- Press again within 4 seconds to unlock all doors
- Press again to lock all doors

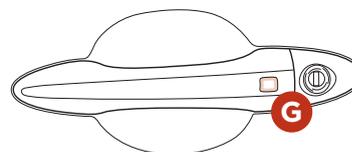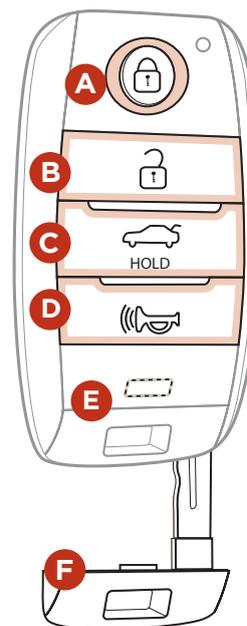

QR CODE

Kia Engine Start/Stop Button & Smart Key Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

QUICK TIPS

The Smart Key's signal can be blocked by the normal operation of a cell or smart phone. To help prevent this, store each device separately.


REMINDER: Remote button configuration may vary depending on vehicle options.

OTHER KEY FEATURES

Remote Keyless Entry (Folding Key)*


- A** Press to Lock All Doors
- B** Press to unlock Driver's Door: Press twice in 4 seconds to unlock All Doors and Rear Hatch
- C** Press and hold to unlock rear hatch
- D** Press and hold more than 1 second for Panic Alarm. To turn OFF Alarm, press any button

REMINDER: Remote button configuration may vary depending on vehicle options.

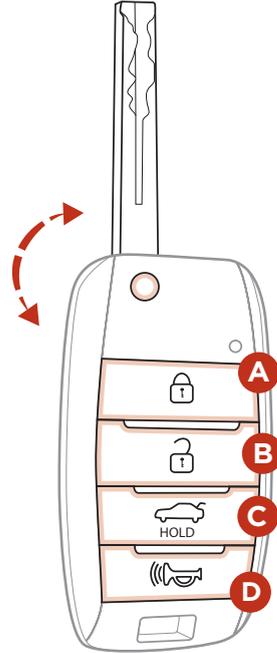

Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for *ONE CLICK* to prevent Malfunction Indicator  from illuminating.

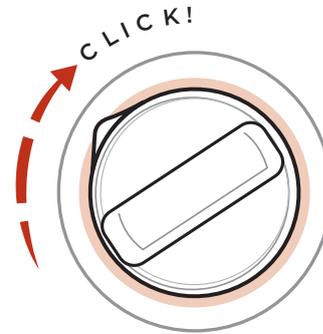

REMINDER: The Fuel Filler Door Release button is located on the lower part of the driver's door panel.

QR CODE

Kia One Click Fuel Cap Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.


Refer to page 2 for more information.




www.KuTechVideos.com/qf13/2014

Double-Turn Lock / Unlock All*

- Turn clockwise once to unlock Driver's Door
- Turn clockwise again within 4 seconds to unlock All Doors
- Turn counterclockwise once to Lock All Doors

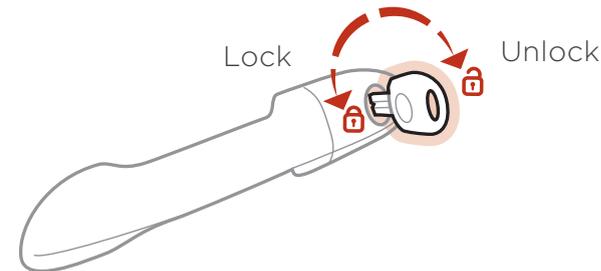

HomeLink® with Auto-Dimming Rearview Mirror*

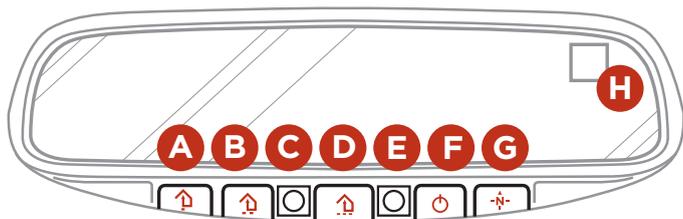

- A** HomeLink® button 
- B** HomeLink® button 
- C** Indicator light 
- D** HomeLink® button 
- E** Glare detection sensor 
- F** Automatic dimming ON/OFF 
- G** Compass control button 
- H** Compass display

The Auto-Dimming Rearview Mirror is designed to reduce glare from a vehicle's headlights located in the rear and also connect up to three electronic transmitters in one location.

To turn automatic dimming ON or OFF, press button **F**

REMINDER: Mirror indicator light **C** will illuminate when automatic dimming is ON.

QUICK TIPS

- You can reprogram a single HomeLink® button by repeating Step 2
- Erasing programmed buttons will delete all trained transmitters

If your garage door opener was manufactured in 2011 or later, and you're unable to program your vehicle's HomeLink® system, you may need to purchase a HomeLink Repeater Kit. For more information, go to www.HomeLink.com or call (800) 355-3515.

How to Sync Transmitter with HomeLink®*

If programming for the first time, begin with Step 1 (repeating this step will delete all information).

To program non-rolling and rolling code garage door openers and other devices:

1. Press and hold the left **A** and center **D** buttons simultaneously until the indicator light **C** begins to flash (to reprogram buttons, skip this step)
2. Press and hold the desired button **A B D** and hold the button on the transmitter while it is approximately 1 to 3 inches away from the mirror. The HomeLink® Indicator light **C** will flash rapidly once the frequency signal has been successfully programmed

To finish programming rolling code garage door openers, complete these steps:

3. Locate the "learn" or "smart" button on the garage door's motor head unit. Press and release the button and complete Step 4 within 30 seconds
4. Firmly press, hold for two seconds, and release the programmed HomeLink® button up to three times

Operating HomeLink®:

Press one of the programmed HomeLink® buttons.

Erasing programmed buttons:

Press and hold the left **A** and center **D** buttons simultaneously for approximately 20 seconds, and then release both buttons within 30 seconds.

OTHER KEY FEATURES

Map / Room Lamps

Automatic turn off function*

The interior lights automatically turn off approximately 30 seconds after the Engine System Start/Stop button is OFF.

Map / Personal Lamp


Push the lens **A** to turn the Map Lamp ON/OFF. This light produces a spot beam for convenient use as a Map Lamp or Personal Lamp for the driver or front passenger.

Dome Lamp **B**

OFF: In the OFF position, the lamp is OFF even if the door is opened.

DOOR: In the DOOR position, the lamp turns ON when any door is opened.

ON: In the ON position, the lamp stays on continuously.

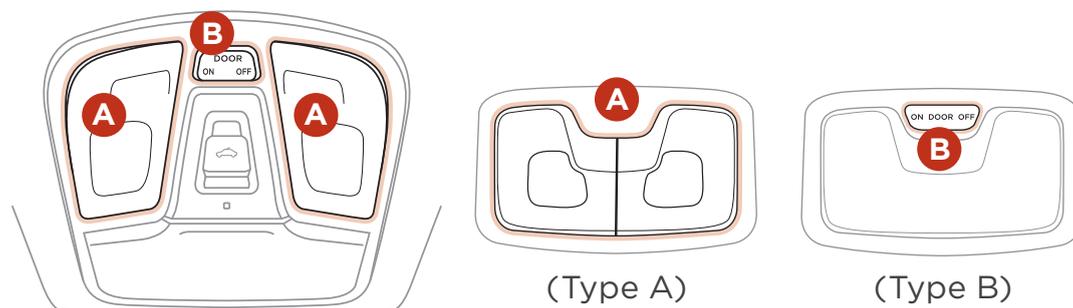


🕒 QUICK TIPS

- When doors are unlocked by the Smart Key*, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in the armed stage
- Using interior lights for an extended period of time may cause battery discharge

Sunvisor

Use the Sunvisor to shield direct light through the front or side windows. Slide the Sunvisor out and adjust as needed.

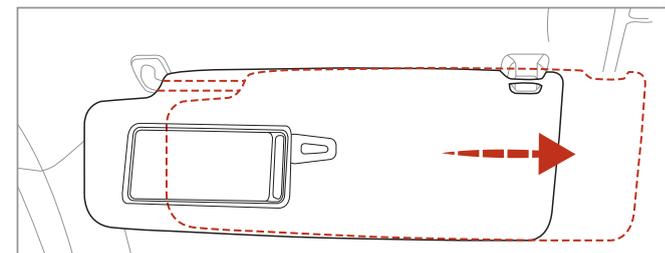


REMINDER: Sunvisor may not shield all direct light.
REMINDER: The Sunvisor may impair visibility if not adjusted properly.

Panoramic Sunroof Operation*

The sunroof and sunshade operation is controlled through a multidirectional switch/lever and the ignition needs to be in the ON position to operate the sunroof/sunshade.

Slide the Sunshade and Sunroof:

- **Auto Open:** Slide lever **A** backward to the farthest position and release.
- **Auto Close:** Slide the lever **A** forward to the farthest position and release.

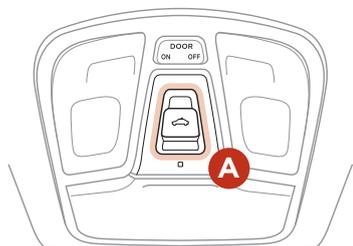

Slide the Sunshade:

- **Open:** Slide the lever **A** partially backward to the first detent position.
- **Auto Close:** Slide the lever **A** forward to the farthest position.

Rear-Camera Display*

The Rear-Camera Display system is not a safety device. It is a supplemental system that displays the view behind the vehicle through the Navigation* or UVO* screen while the vehicle is in Reverse.

The Rear-Camera Display activates when the:

- Engine Start/Stop* button is in the ON position (Green Light)
- Gear Shift Lever is in the R (Reverse) position

Slide the Sunroof (with sunshade open):

- **Open:** Slide the lever **A** backward and release.
- **Close:** Slide the lever **A** partially forward to the first detent position or pull the lever downward.

Tilt the Sunroof:

- **Raise:** Push lever **A** upward.
- **Lower:** Pull lever **A** downward.
- **Auto Close:** Slide the lever **A** forward to the farthest position.

REMINDER: Sunshade needs to remain OPEN while Sunroof is open and vehicle is moving.

🕒 QUICK TIPS

- To stop the Sunroof/Sunshade at any position, push or pull the sunroof control lever in any direction



REMINDER:

- The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up
- While camera is active, only the volume controls on the Audio System can be operated.


Back-Up Warning System (Rear Parking Assist System)*

The Back-Up Warning System is not a safety device. The Back-Up Warning System is a supplemental system that assists the driver by chiming if any object is detected within the sensing area to the rear and side of the vehicle when backing up. When the ignition is ON, the system is activated.

REMINDER: If the vehicle is moving at speeds over 3 mph, the system may not activate correctly.


REMINDER: When more than two objects are sensed at the same time, the closest one will be recognized first.

REMINDER: The Back-Up Warning System is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when backing up. The Back-Up Warning System may not detect every object behind the vehicle.

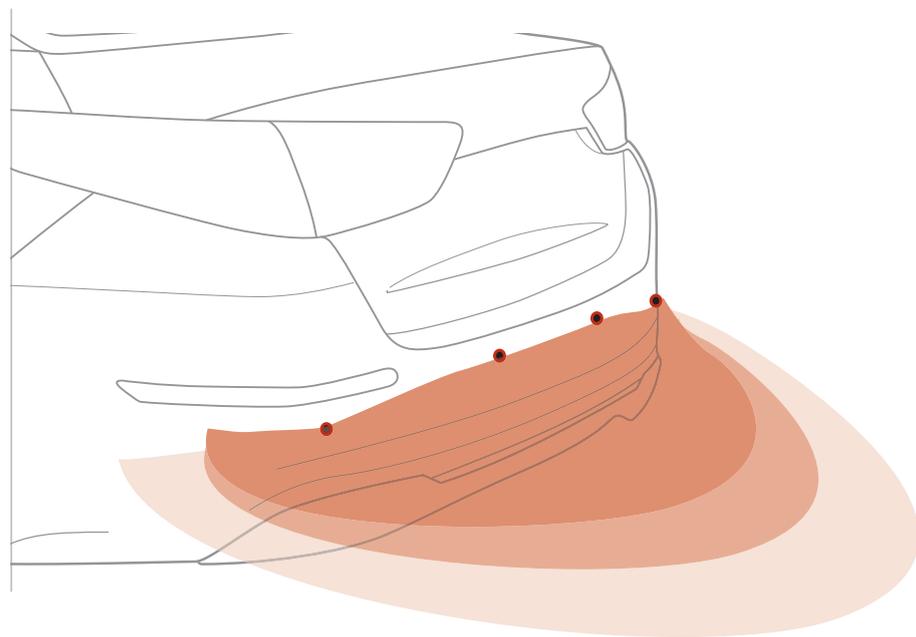

Trunk Release Button

Located underneath the Trunk lid. With Trunk unlocked, press the Trunk Release button **A** and pull the Trunk lid up by the handle to open.

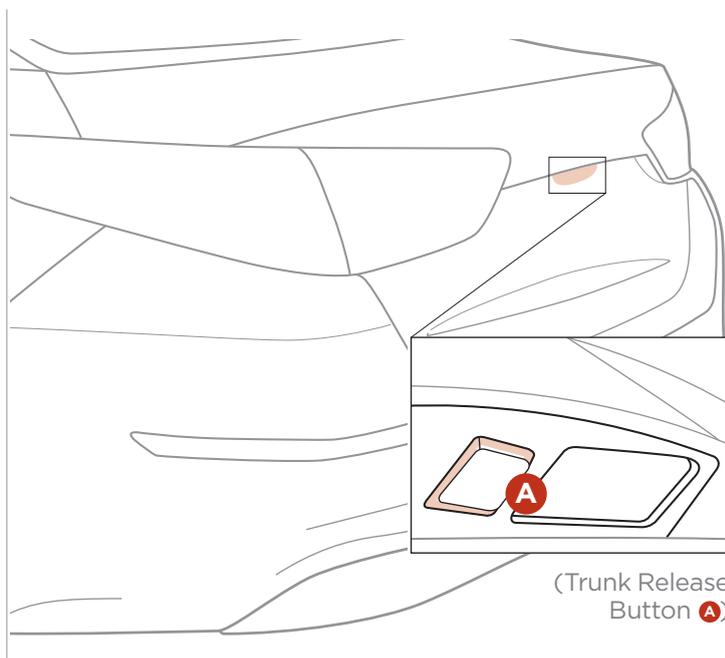

Ⓢ QUICK TIPS

- The Trunk must be unlocked before it can be opened by the Trunk Release Button
- The Trunk unlocks automatically and then can be opened manually when the Smart Key is within close proximity to the vehicle


OTHER KEY FEATURES

Tire Mobility Kit*

The Tire Mobility Kit may temporarily seal certain types of tire damage.

For operational information, please refer to section 6 of your Owner's Manual.

- A** Sealant Bottle
- B** Compressor

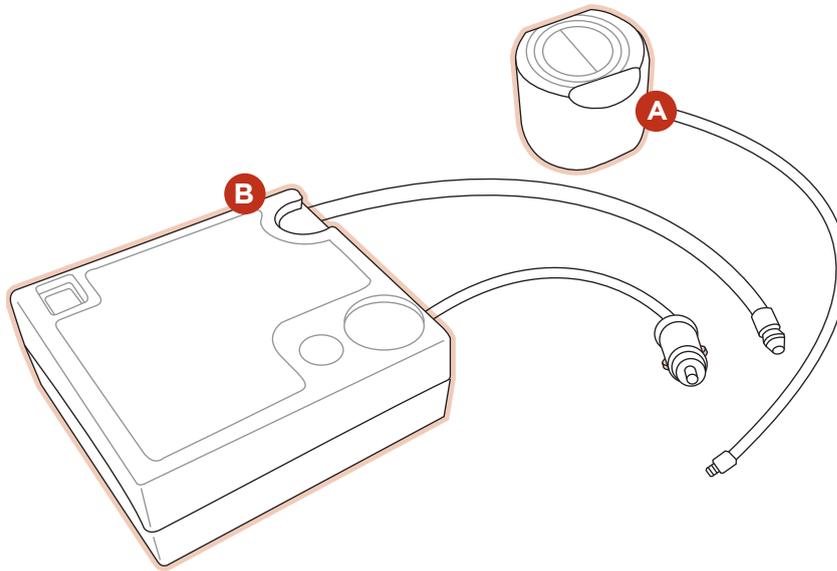

QR CODE

Kia Tire Mobility Kit Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.



www.KuTechVideos.com/qf13/2014

REMINDER: After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for a maximum distance of up to 120 miles.

Ⓢ QUICK TIPS


- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if a tire is damaged beyond repair

Occupant Detection System (ODS) / PASSENGER AIR BAG OFF Indicator

ODS detects the presence and position of the front passenger and adjusts or turns off air bag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Unoccupied)

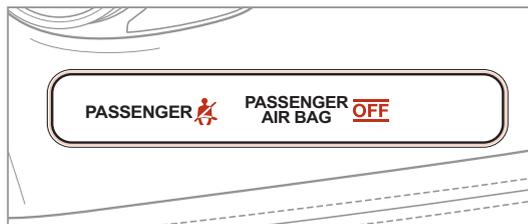


If the system determines that the air bag should not be deployed, the “PASSENGER AIR BAG OFF” light will illuminate.

Child Safety Locks

Located on the rear edge of the rear passenger doors, insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.

REMINDER: Child Safety Lock is located on rear passenger’s door jamb.

Please refer to your Owner’s Manual and the separate brochure titled “Understanding Your Safety Belt & Supplemental Restraint System” for more detailed information regarding your vehicle’s air bags.

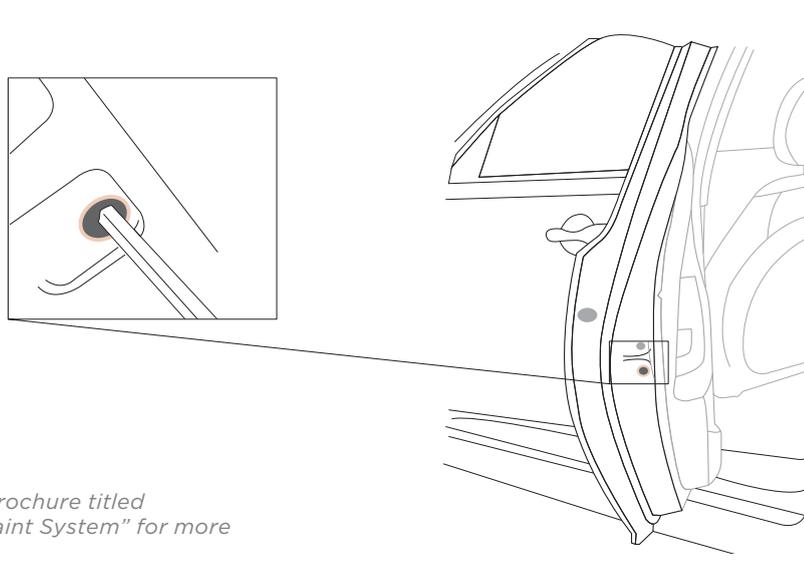

QR CODE

Kia Occupant Detection System Video

To view a video on your mobile device, SNAP this QR code or visit the listed website.

Refer to page 2 for more information.




www.KuTechVideos.com/qf13/2014

Safety Belts


To properly fasten your safety belts:

1. Insert the tongue belt plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as **LOW ON THE HIPS** as possible **C**. Adjust the belt to a **SNUG FIT** by pulling up on the shoulder portion **D**

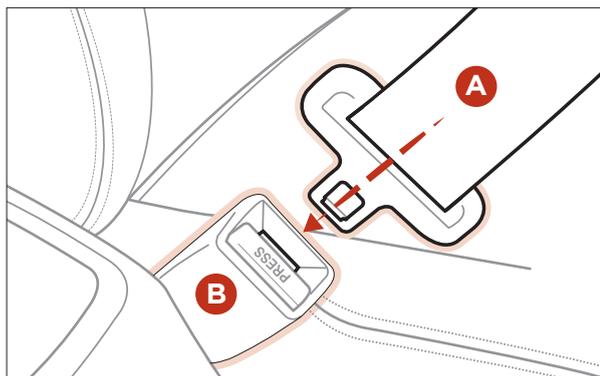

Safety Belt Retractor Inertial Locks

- Inertial locks allow lap/shoulder safety belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort
- During a **STRONG STOP, SUDDEN TURN OR CERTAIN COLLISION**, safety belt retractors will automatically lock the belts

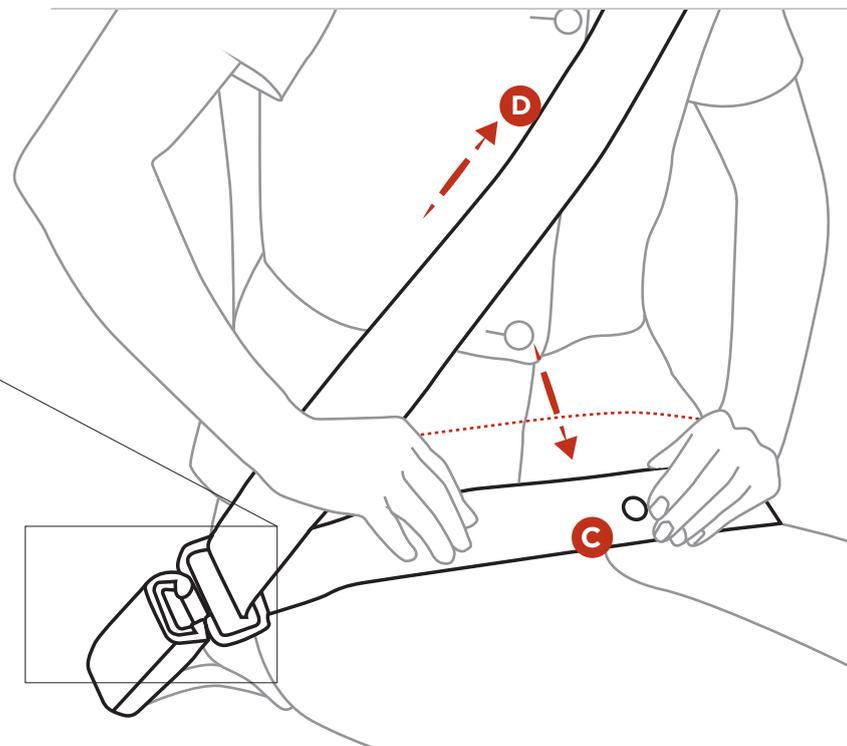

For more detailed information regarding your vehicle's safety belts, please refer to your Owner's Manual and the separate brochure titled "Understanding Your Safety Belt & Supplemental Restraint System."

© QUICK TIPS

The Safety Belt warning chime operates for driver's seat only.

LEGAL DISCLAIMERS

UVO eServices: Warning - Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

TPMS: Even with the Tire-Pressure Monitoring System (TPMS), always check your tire pressure on a regular basis.

The Blind Spot Detection System is not a substitute for proper and safe lane changing procedures. Always drive safely and use caution when changing lanes. The Blind Spot Detection System may not detect every object alongside the vehicle.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

Seatbelts: For maximum protection, always wear your seatbelt.

Navigation: GPS maps and directions are for information purposes only, and Kia does not make any warranties about the accuracy of that information. Kia is not responsible for loss or delay resulting from the use of the navigation system. Caution: Do not enter information into the navigation system while the vehicle is moving. Failure to pay attention to travel conditions and vehicle operation while the vehicle is in motion could result in loss of vehicle control. Operate the system only when it is safe to do so.

At launch, the Apple iPhone® will be the only UVO eServices compatible device. iPhone® is a registered trademark of Apple Inc. Apple iOS 6 compatibility expected early 2013. Additional compatible devices expected late 2013.

iPod® is a registered trademark of Apple Inc. iPod® mobile digital device sold separately.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Kia is under license. Other trademarks and trade names are those of their respective owners. A Bluetooth® enabled cell phone is required to use Bluetooth® wireless technology.

Sirius service requires a subscription, sold separately, after 3-month trial included with vehicle purchase. **If you decide to continue your Sirius service at the end of your trial subscription, the plan you choose will automatically renew and bill at the current rates until you call Sirius XM at 1-866-635-2349 to cancel. Subscriptions governed by the Sirius Customer Agreement; see www.Sirius.com.** Sirius U.S. Satellite service is available only to those at least 18 and older in the 48 contiguous United States, D.C., and P.R. (with coverage limitations), while Sirius Internet Radio is available throughout our satellite service area and also AK and HI. Traffic information not available in all markets. See Sirius.com/traffic for details. ©2012 Sirius Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc.

Microsoft® is a registered trademark of Microsoft Corporation in the United States and/or other countries.

HD Radio™ and the HD Radio logo are proprietary trademarks of iBiquity Digital Corporation.

HomeLink® is a registered trademark of Johnson Controls, Inc.

Back-Up Warning System: The Back-Up Warning System is not a substitute for proper and safe backing-up procedures. The Back-Up Warning System may not detect every object behind the vehicle. Always drive safely and use caution when backing up.

Rear-Camera Display: The Rear-Camera Display is not a substitute for proper and safe backing-up procedures. The Rear-Camera Display may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Blind Spot Detection System: The Blind Spot Detection System is not a substitute for proper and safe lane changing procedures. Always drive safely and use caution when changing lanes. The Blind Spot Detection System may not detect every object alongside the vehicle.

Infinity®: Infinity® is a trademark of Harman International Industries, Inc.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.



NORMAL MAINTENANCE SCHEDULE

When your vehicle requires service, remember that your dealer knows your vehicle best. Your dealer has factory-trained technicians, recommended special tools, genuine Kia replacement parts, and is dedicated to your complete satisfaction. For expert advice and quality service, see your authorized Kia dealer.

INTERVAL MAINTENANCE CHART												
7,500 miles	A	B										
15,000 miles	A	B	C									
22,500 miles	A	B										
30,000 miles	A		C	D	E							
37,500 miles	A	B							G			
45,000 miles	A	B	C	D							I	
52,500 miles	A	B										
60,000 miles	A		C	D	E	F					H	
67,500 miles	A	B										
75,000 miles	A	B	C	D				F	G			
82,500 miles	A	B										
90,000 miles	A		C	D	E	F					I	
97,500 miles	A	B										
105,000 miles	A	B	C	D			F					J
112,500 miles	A	B									G	
120,000 miles	A		C	D	E	F				H		K

- A Inspect*** — Vacuum hose
- Replace** — Engine oil and oil filter (2.4L GDI)¹
- Perform** — Rotate tires; add fuel additive²
- B Inspect*** — Air cleaner filter
- C Inspect*** — Air conditioner refrigerant and performance; brake lines, hoses and connections; drive shaft and boots; exhaust pipe and muffler; front disc brakes, calipers and rotors; rear disc brakes/pads; parking brake; steering gear box, linkage and boots/lower arm ball joint and upper arm ball joint; and, suspension mounting bolts
- D Replace*** — Climate control air filter (for evaporator and blower unit)
- E Inspect*** — Fuel filter³ and fuel tank air filter³; fuel lines, fuel hoses and connections; vapor hose and fuel filler cap; brake/clutch fluid**
- Replace** — Air cleaner filter
- F Inspect*** — Drive belt⁴
- G Inspect*** — Manual transaxle fluid**
- H Inspect*** — Valve clearance⁵
- I Replace** — Spark plugs (iridium coated), 2.0L TGD
- J Replace** — Spark plugs (iridium coated), 2.4L GDI
- K Replace** — Engine coolant^{6,7}

* and, if necessary, adjust, clean, replace or correct

** If equipped

*** Check and adjust level and check for leaks. Inspect regularly

Check tire pressure once a month or more.

Transfer case oil and rear differential oil should be changed anytime they have been submerged in water.

¹Engine oil (2.0L TGD): At first, replace at 3,000 miles or 6 months, after that, every 5,000 miles or 6 months.

²If TOP TIER Detergent Gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.

³Fuel filter & Fuel tank air filter are considered to be maintenance free but periodic inspection is recommended for this maintenance schedule depends on

See your owner's manual for more details and complete maintenance information, including severe maintenance schedule.

Warranty may be voided if maintenance schedule is not followed.

Call 1-800-333-4kia (4542) for roadside assistance.

fuel quality. If there are some important safety matters like fuel flow restriction, surging, loss of power, hard starting problem etc., replace the fuel filter immediately regardless of maintenance schedule and consult an authorized Kia dealer for details.

⁴The drive belt should be replaced when cracks occur or tension is reduced excessively.

⁵Inspect for excessive tappet noise and/or engine vibration and adjust if necessary.

⁶When replacing coolant, use only deionized water or soft water for your vehicle and never mix hard water in the coolant filled at the factory. An improper coolant mixture can result in serious malfunction or engine damage.

⁷For your convenience, it can be replaced prior to it's interval when you do maintenance of other items.



OPTIMA CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____


Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY


- Confirm "Good Battery" with Kia battery tester
- Verify all tire pressures are to spec (see driver's door label) LF_____ LR_____ RF_____ RR_____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition, free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet, and Features & Functions Guide and any supplemental audio user's guides)

KEY FEATURE WALKTHROUGH

- Air Conditioning / Climate Control – pages 26 - 27
Demonstrate Air Flow Modes, Defog and Defrosting Windshield

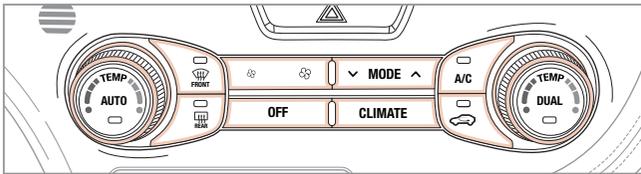


Automatic Climate Control

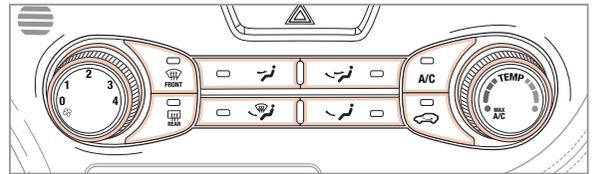

Manual Climate Control


- Electric Parking Brake (EPB)* and AUTO HOLD* – pages 10-11
Demonstrate operation

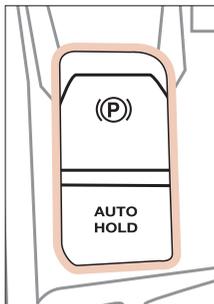

- Windshield Wipers & Washers* – page 15

Move lever Up/Down to change Wiper modes.

Rotate level to adjust Intermittent Wipe Speed.

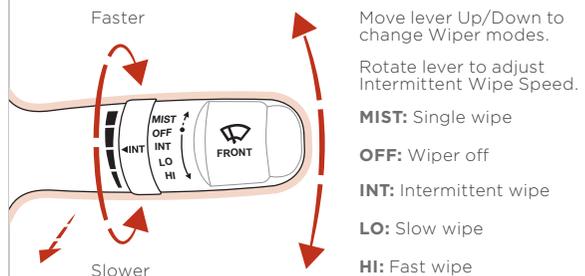

Move lever Up/Down to change Wiper modes.

Rotate lever to adjust Intermittent Wipe Speed.

MIST: Single wipe

OFF: Wiper off

INT: Intermittent wipe

LO: Slow wipe

HI: Fast wipe


Pull to spray and wipe.




KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer:

- Standard Audio System* – page 21

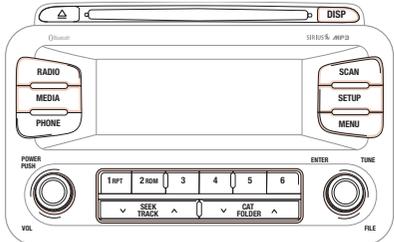


- UVO System* – page 24
For further UVO System information, refer to the UVO System User's Manual.

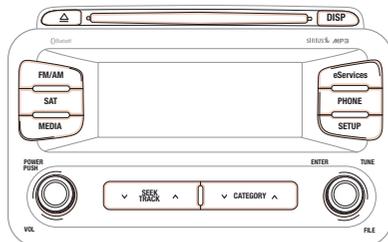


- Navigation System* – page 23
For further Navigation System operation, refer to the Digital Navigation System User's Manual.




- AUX/USB/iPod® Port – page 25

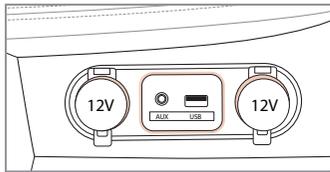

- Cruise Control* – page 19
Demonstrate operation

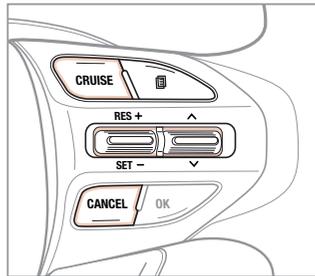

- Bluetooth® Wireless Technology* – page 18
Demonstrate operation

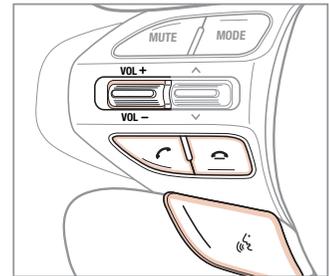

- Active ECO System* – page 7
Tire Pressure Monitoring System (TPMS) – page 5
Engine Start/Stop Button* – page 12
Digital Clock – page 25
Seat Warmers/Ventilated Seats* – page 30
Sunvisor – page 35
Panoramic Sunroof Operation* – page 36
Rear-Camera Display* – page 36 *IF EQUIPPED
Smart Key* – page 32
HomeLink® with Auto-Dimming Rearview Mirror* – page 34
Back-Up Warning System* – page 37
PASSENGER AIR BAG OFF Indicator – page 39
Tire Mobility Kit* – page 38

DURING DELIVERY

- Explain first service process and schedule first service appointment
Tour Parts & Service departments, introduce staff & explain value of Kia Parts and Service
Review recommended maintenance schedule and maintenance requirements to validate warranty
Review business hours & Customer 360° Care
Review the Kia 10-year/100,000-mile warranty program
Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle
Confirm time and best contact number for initial dealer follow-up

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____